

[Manuals.plus](#) /

› [EASYTONE](#) /

› EASYTONE R69 Plus Android TV Box User Manual

EASYTONE R69Plus 4GB+64GB

EASYTONE R69 Plus Android TV Box User Manual

Model: R69Plus 4GB+64GB

INTRODUCTION

This manual provides comprehensive instructions for setting up, operating, and maintaining your EASYTONE R69 Plus Android TV Box. Please read this manual carefully before using the device to ensure optimal performance and safety.

SAFETY INFORMATION

- Do not expose the device to water or moisture.
- Avoid placing the device near heat sources or in direct sunlight.
- Use only the provided power adapter.
- Do not attempt to disassemble or repair the device yourself. Contact qualified service personnel.
- Ensure proper ventilation around the device to prevent overheating.

PACKING CONTENTS

Please check the package contents upon unboxing. If any items are missing or damaged, contact customer support.

Wonderful Multi-Screen Interaction

Small screen to big screen



Airplay



Miracast



Entertainment mode



Fitness mode



Office mode



Study mode

Image: The EASYTONE R69 Plus TV Box, power supply, HDMI cable, remote control, and user manual are shown, illustrating the complete package contents.

- EASYTONE R69 Plus Android TV Box
- Power Supply (DC/5V)
- HDMI Cable
- Remote Control
- User Manual

PRODUCT OVERVIEW

The EASYTONE R69 Plus Android TV Box is a powerful streaming device designed to bring a smart entertainment

experience to your television. It features an Octa-core processor, ample memory, and advanced connectivity options.



Image: The R69 Plus TV Box with its distinctive RGB lighting and the accompanying remote control, showcasing the device's sleek design.

Device Ports and Indicators

Familiarize yourself with the various ports and indicators on your TV box for proper connection and operation.

Wonderful Multi-Screen Interaction

Small screen to big screen



Airplay



Miracast



Entertainment mode



Fitness mode



Office mode



Study mode

Image: A detailed diagram highlighting the various ports on the R69 Plus TV Box, including DC/5V power input, Optical audio out, Reset button, HD (HDMI) port, Ethernet port, USB 3.0, USB 2.0, and SD Card slot.

- **DC/5V:** Power input port.
- **OPTICAL:** Digital audio output.
- **RESET:** System reset button (typically for firmware recovery).
- **HD (HDMI):** Connects to your TV or display.
- **ETHERNET:** For wired network connection (1000M Gigabit Ethernet).
- **USB 1 (USB 3.0):** High-speed USB port for external devices.
- **USB 2 (USB 2.0):** Standard USB port for external devices.
- **SD CARD:** Slot for expanding storage with a TF card.

SETUP GUIDE

1. Connecting to Your TV

1. Connect one end of the provided HDMI cable to the **HD** port on the TV Box.
2. Connect the other end of the HDMI cable to an available HDMI input port on your television.
3. Set your TV's input source to the corresponding HDMI port.

2. Powering On

1. Connect the power adapter to the **DC/5V** port on the TV Box.
2. Plug the power adapter into a wall outlet.
3. The device will automatically power on, and the neon light will illuminate.

3. Network Connection

You can connect to the internet via wired Ethernet or wireless Wi-Fi.

Wired Connection (Ethernet)

 
1. Connect an Ethernet cable from your router to the **ETHERNET** port on the TV Box.
2. The device will automatically detect and connect to the wired network.

1000M Ethernet

Gigabit Ethernet port provides ultimate network speed, featuring low latency and high speeds.

**Network
speed**

1000M Ethernet



1000Mbps

**1000
Mbps**

125MB/s

12.5MB/s



Image: A graphic illustrating the high-speed 1000M Ethernet connection capability of the TV Box, indicating fast and stable network performance.

Wireless Connection (Wi-Fi)

1. Navigate to **Settings** on the TV Box home screen.
2. Select **Network & Internet**.
3. Turn on Wi-Fi and select your desired network from the list.
4. Enter the Wi-Fi password if prompted and select **Connect**.

WIFI 6 Dual WiFi & Bluetooth 5.0

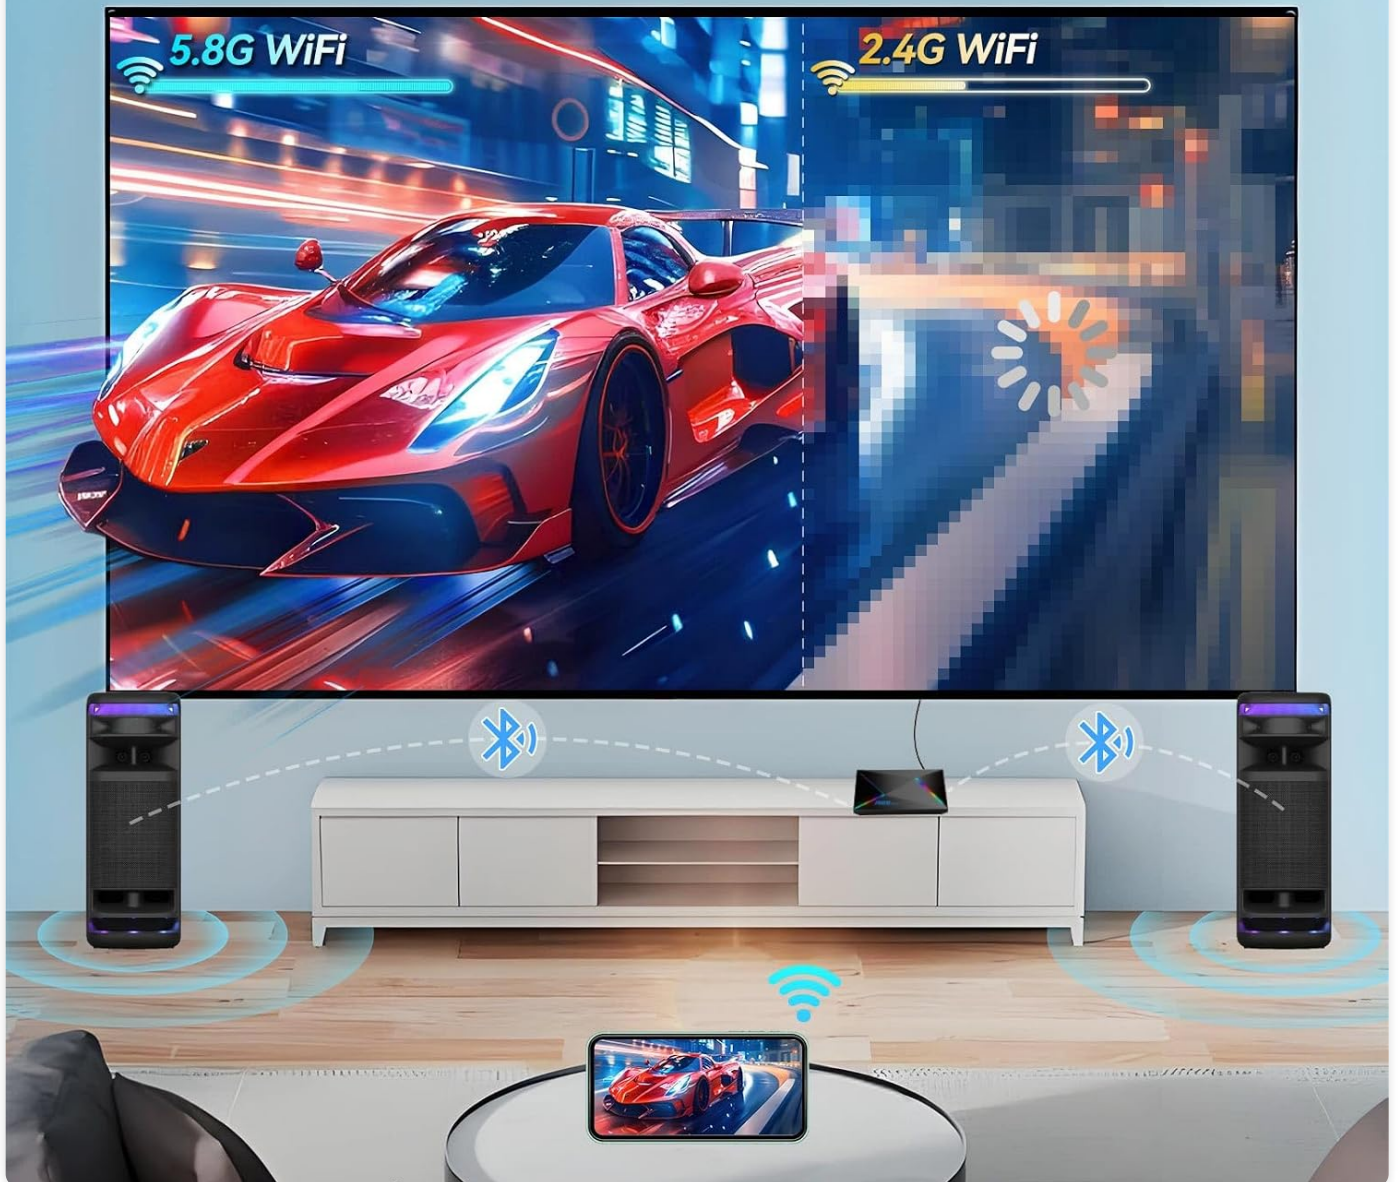


Image: A visual representation of the TV Box's WIFI6 Dual WiFi (2.4G and 5.8G) and Bluetooth 5.0 capabilities, demonstrating seamless wireless connectivity for streaming and device pairing.

4. Bluetooth Pairing

Connect Bluetooth devices such as keyboards, speakers, or game controllers.

1. Navigate to **Settings** on the TV Box home screen.
2. Select **Connected Devices** or **Bluetooth**.
3. Ensure Bluetooth is enabled on both the TV Box and your device.
4. Select your device from the list of available devices to pair.



Image: A graphic illustrating the benefits of USB 3.0 for faster data transfer and Bluetooth 5.0 for connecting various peripherals like headphones, game controllers, and smartphones to the TV Box.

OPERATING INSTRUCTIONS

Navigating the Interface

Use the provided remote control to navigate the Android 14 interface. The directional pad (D-pad) is used for moving between items, and the "OK" button confirms selections.

Customizing Home Screen

The Android 14 system allows for a customized home screen. You can add your favorite apps and channels for quick access.

- To add an app: Navigate to the "Apps" section, select the app, and choose "Add to Home screen."
- To rearrange: Long-press an app icon on the home screen and drag it to your desired position.

4K 8K & 3D Display

The TV Box supports 4K@60fps video output and professional 8K decoding technology, along with HDR10 and 3D effects for an immersive viewing experience. Ensure your TV supports these resolutions and features for optimal display.

8K Ultra HD & HDR10 & 3D

Make the picture display more vivid and beautiful.
Powerful 3D display brings you a
shocking viewing and gaming experience.



Image: A vibrant scene displayed on a large screen, emphasizing the 8K Ultra HD, HDR10, and 3D display capabilities of the TV Box for a vivid and detailed viewing experience.

Multi-Screen Interaction (Airplay & Miracast)

The device supports Airplay and Miracast, allowing you to cast content from your mobile devices to your TV screen.

- **Airplay:** For Apple devices, enable Airplay on your iOS device and select the TV Box from the list of available devices.
- **Miracast:** For Android devices, enable screen mirroring or cast feature on your Android device and select the TV Box.

Packing Contents



			
Power Supply	HD Cable	Remote Control	User Manual

Image: Four scenarios demonstrating multi-screen interaction: Entertainment (streaming from phone), Fitness (workout video), Office (displaying work), and Study (educational content), highlighting the versatility of Airplay and Miracast.

Voice Control

The remote control includes a voice assistant feature. Press the voice button on the remote and speak your commands to search for content, open apps, or control playback.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the surface of the TV Box. Do not use liquid cleaners or aerosols.
- **Ventilation:** Ensure the ventilation holes are not blocked to prevent overheating.
- **Software Updates:** Periodically check for system updates in the settings menu to ensure optimal performance and security.

- **Storage:** When not in use for extended periods, store the device in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power adapter not connected or faulty outlet.	Ensure power adapter is securely connected to the device and a working power outlet. Try a different outlet.
No display on TV	HDMI cable loose or incorrect TV input.	Check HDMI cable connections. Ensure TV input source matches the HDMI port connected to the TV Box.
Wi-Fi connection issues	Incorrect password, weak signal, or router issue.	Verify Wi-Fi password. Move the TV Box closer to the router. Restart your router and the TV Box.
Remote control not responding	Low batteries or obstruction.	Replace batteries in the remote. Ensure no obstructions between the remote and the TV Box.
Apps freezing or slow performance	Too many apps running, low storage, or network issues.	Close background apps. Clear app caches. Check internet speed. Restart the TV Box.

SPECIFICATIONS

Brand	EASYTONE
Model Name	R69Plus 4GB+64GB
Operating System	Android 14.0
Processor	Allwinner H728 Octa-core
RAM	4GB
ROM	64GB
Resolution Support	4K@60fps, 8K Decoding
Connectivity Technology	Bluetooth 5.0, Ethernet (1000M), HDMI, USB, Wi-Fi (WIFI6 Dual WiFi 2.4G/5.8G)
USB Ports	1x USB 3.0, 1x USB 2.0
Other Ports	Optical, SD Card Slot
Special Features	Browser, Chromecast, Miracast, HDR10, 3D Display, Voice Control
Product Dimensions	5.5"L x 3.9"W x 1.1"H

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included in your package or visit the official EASYTONE website. If you encounter any issues not covered in this manual, please contact customer service for assistance.

You can also visit the [EASYTONE Store on Amazon](#) for more product information and support resources.

© 2025 EASYTONE. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

What are the power adapter specifications for the EASYTONE R69 Plus Android TV Box?

The power adapter specifications for the EASYTONE R69 Plus Android TV Box are as follows:Voltage: DC 5VPort Type: DC/5V input portAccording to the manual, you should use only the provided power adapter to ensure...

[Read full answer](#)

