

[Manuals.plus](#) /

› [Amazon Basics](#) /

› Amazon Basics 4.4-Quart Digital Air Fryer User Manual

Amazon Basics AFT0001-UL

Amazon Basics 4.4-Quart Digital Air Fryer User Manual

Model: AFT0001-UL

INTRODUCTION

Thank you for purchasing the Amazon Basics 4.4-Quart Digital Air Fryer. This appliance is designed to cook a variety of foods using rapid hot air circulation, offering a convenient and efficient cooking method. Please read this manual thoroughly before use to ensure safe operation and optimal performance. Keep this manual for future reference.

SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions.

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

PRODUCT OVERVIEW

Key Features

- **Generous Capacity:** 4.4-quart basket size, suitable for serving 2-4 people.
- **Digital Controls:** Large touch panel with 8 preset menus, a keep warm function, and a smart shake reminder.
- **Versatile Cooking:** 360-degree hot air circulation with a removable crisper plate for tender interiors and crispy exteriors with minimal oil.
- **Effective Heat:** Even and efficient heat distribution with an adjustable temperature range from 140°F to 400°F.
- **Viewing Window:** Allows monitoring of cooking progress without opening the basket. Features non-slip feet for stability.
- **Premium Design:** Durable ceramic nonstick coating for easy food release and dishwasher-safe parts for cleaning.
- **Cooking Guidance:** Includes a full-color recipe book with 20 recipes, a quick start guide, and cooking charts.

Key features

4-in-1 functionality with
4.4-quart cooking
capacity

360-degree air
circulation for perfect
crispy results

Viewing window and
dishwasher-safe parts
for convenience



Image: The Amazon Basics 4.4-Quart Digital Air Fryer highlighting its main features: 4-in-1 functionality with 4.4-quart capacity, 360-degree air circulation for crispy results, and a viewing window with dishwasher-safe parts for convenience.

Components

- Main Unit with Digital Touch Controls
- Removable Air Fryer Basket
- Removable Crisper Plate
- Power Cord
- Recipe Book and Quick Start Guide



Image: A close-up view of the digital touch control panel on the air fryer, displaying temperature and various preset icons.



Image: The air fryer basket partially pulled out from the main unit, showing its interior design and handle.

SETUP

1. **Unpack:** Carefully remove all packaging materials and promotional labels from the air fryer.
2. **Clean:** Wash the air fryer basket and crisper plate with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth.
3. **Placement:** Place the air fryer on a stable, heat-resistant surface, away from walls and other appliances to allow for proper air circulation. Ensure there is at least 6 inches (15 cm) of space around the appliance.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet.
5. **Initial Run (Optional):** For the first use, it is recommended to run the air fryer empty for about 10-15 minutes at 350°F (175°C) to eliminate any manufacturing odors. A slight odor or smoke may be present during this initial use; this is normal.

OPERATING INSTRUCTIONS

Basic Operation

1. **Prepare Food:** Place your ingredients into the air fryer basket, ensuring not to overfill. For best results, food should be in a single layer or shaken periodically.
2. **Insert Basket:** Slide the basket firmly into the main unit until it clicks into place.
3. **Power On:** Press the power button () on the digital control panel.
4. **Set Temperature and Time:** Use the temperature (°F) and time (min) adjustment buttons to set your desired cooking parameters. The temperature can be adjusted from 140°F to 400°F.
5. **Start Cooking:** Press the start/pause button (▶/||) to begin cooking.
6. **Shake Reminder:** If cooking requires shaking, the air fryer will beep and display a shake reminder icon. Pull out the basket, shake the contents, and reinsert to resume cooking.
7. **Monitor Progress:** Use the viewing window to check on your food without interrupting the cooking cycle.
8. **Finish Cooking:** The air fryer will beep when the cooking cycle is complete. Carefully pull out the basket and remove the food.

Using Preset Menus

The air fryer features 8 preset menus for common dishes. To use a preset:

1. Follow steps 1-3 from Basic Operation.
2. Press the menu selection button (« / ») to cycle through the preset icons until your desired food type is selected.
3. Press the start/pause button (▶/||) to begin cooking with the preset's default time and temperature. You can adjust these settings manually after selecting a preset if needed.

Keep Warm Function

After cooking, you can activate the keep warm function to maintain food temperature. Refer to the quick start guide for specific instructions on activating this feature.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your air fryer.

1. **Unplug and Cool:** Always unplug the air fryer from the power outlet and allow it to cool completely before cleaning.
2. **Clean Basket and Crisper Plate:** The air fryer basket and crisper plate are dishwasher-safe. Alternatively, wash them with warm, soapy water and a non-abrasive sponge. For stubborn food residue, soak in warm water for 10-15 minutes before cleaning.
3. **Clean Interior:** Wipe the interior of the air fryer with a damp cloth. Do not use abrasive cleaners or scouring pads.
4. **Clean Exterior:** Wipe the exterior of the appliance with a soft, damp cloth. Do not immerse the main unit in water or any other liquid.
5. **Storage:** Ensure all parts are clean and dry before storing the air fryer in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance not plugged in; basket not inserted correctly.	Ensure the power cord is securely plugged into a grounded outlet. Push the basket firmly into the main unit until it clicks.
Food is not cooked evenly.	Basket is overcrowded; food not shaken.	Do not overcrowd the basket. Cook in smaller batches if necessary. Shake the basket halfway through cooking for even results.
White smoke comes from the appliance.	Grease residue from previous use; fatty ingredients.	Clean the basket and crisper plate thoroughly after each use. For fatty foods, drain excess oil from the basket during cooking.
Food is not crispy.	Too much moisture; not enough oil (for certain foods).	Pat food dry before air frying. Lightly spray or toss food with a small amount of oil for crispier results.

SPECIFICATIONS

- **Model Name:** Air fryer
- **Model Number:** AFT0001-UL
- **Capacity:** 4.4 Quarts
- **Color:** Black
- **Material:** Plastic
- **Product Dimensions (D x W x H):** 13.39" x 10.24" x 10.63"
- **Item Weight:** 6.8 pounds
- **Wattage:** 1400 watts
- **Voltage:** 120 volts
- **Control Method:** Touch
- **Max Temperature Setting:** 400 °F
- **UPC:** 840324421934

Dimensions



Image: A visual representation of the air fryer's dimensions, indicating a width of 10.6 inches, a depth of 10.6 inches, and a height of 13.2 inches.

WARRANTY AND SUPPORT

Warranty Information

Warranty details for your Amazon Basics 4.4-Quart Digital Air Fryer are typically provided with the product packaging or can be found on the official Amazon Basics website. Please refer to these resources for specific terms and conditions regarding your product's warranty.

Customer Support

For further assistance, troubleshooting not covered in this manual, or to inquire about parts and accessories, please contact Amazon Basics customer service. Contact information can usually be found on the Amazon website or on the product packaging.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DN5TJ13N>

More documents and user manuals: <https://manuals.plus/>