

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [FOMITO](#) /

› [F12 Mini Camera Flash Speedlite for Canon/Nikon/Fuji/Sony/Ricoh GR3/GR3X Digital Film Cameras, Portable Mini Hot Shoe Flashlight for DSLR Cameras White](#)

FOMITO F-12-white

FOMITO F12 Mini Camera Flash Speedlite User Manual

Model: F-12-white

1. INTRODUCTION

The FOMITO F12 Mini Camera Flash Speedlite is a compact and portable lighting solution designed to enhance your photography in various conditions. Compatible with a wide range of digital film cameras, including Canon, Nikon, Fuji, Sony, and Ricoh GR3/GR3X, this speedlite provides powerful illumination for well-lit photos and videos. Its intuitive controls and versatile design make it an essential accessory for both amateur and professional photographers seeking improved lighting on the go.

FOMITO

Mini Flash

Model:F10 / F12

The mini flash is lightweight and portable, so it's easy to carry around with you. Whether it's the streets of the city or nature, the F10 / F12 will accompany you to record every wonderful moment.



Figure 1.1: FOMITO Mini Flash F12 Overview.

2. SAFETY INFORMATION

- Do not expose the device to water or excessive humidity.
- Avoid direct eye exposure to the flash, especially at close range, as it may cause temporary vision impairment.
- Keep out of reach of children.
- Do not attempt to disassemble or repair the unit yourself. Refer to qualified service personnel.

- Use only the provided USB cable for charging to prevent damage.

3. WHAT'S IN THE Box

The FOMITO F12 Mini Camera Flash Speedlite package includes the following components:

- Flash Unit
- USB Cable
- Storage Case
- Diffuser (White)
- Colored Filters (various colors)



Figure 3.1: Package Contents.

4. SETUP

4.1 Charging the Flash Unit

Before first use, fully charge the flash unit using the provided USB cable. Connect the USB cable to the flash unit's charging port and a compatible USB power source (e.g., computer USB port, USB wall adapter). The indicator light will show charging status and turn off when fully charged.

4.2 Attaching to Camera

The FOMITO F12 is designed with a universal hot shoe mount for broad compatibility. Ensure your camera has a

standard hot shoe. Gently slide the flash unit onto your camera's hot shoe until it clicks into place. To remove, press the release button (if present on your camera's hot shoe) and slide the flash off.



Figure 4.1: Hot Shoe Compatibility.



Figure 4.2: Flash mounted on a camera.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

To power on the flash unit, press and hold the power button (typically the right-hand clear button on the back) for a few seconds until the display illuminates. To power off, press and hold the same button until the display turns off.

5.2 Adjusting Brightness Levels

The flash unit features adjustable brightness levels. Use the control buttons (refer to the unit's display for specific indicators) to cycle through different power output settings (e.g., 1/1, 1/2, 1/4, 1/8, 1/16, 1/32, 1/64, 1/128). Select the appropriate power level based on your lighting needs and desired effect.

5.3 Using Diffusers and Colored Filters

The F12 Mini Flash comes with a white diffuser and a set of colored filters. These can be attached to the front of the flash to soften the light or add creative color effects to your photos. Simply snap the desired diffuser or filter onto the flash head.



Figure 5.1: Colored Filters for creative lighting.

Experiment with different colors to achieve unique moods and tones in your images. The white diffuser helps to spread the light more evenly, reducing harsh shadows and creating a softer illumination.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the flash unit. Do not use liquid cleaners or solvents.

- **Storage:** When not in use, store the flash unit in its provided storage case to protect it from dust and physical damage. Store in a cool, dry place away from direct sunlight.
- **Battery Care:** For optimal battery life, avoid fully discharging the unit frequently. Charge the unit periodically if it will not be used for an extended period.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Flash not firing.	Low battery; Incorrect camera settings; Flash not properly seated on hot shoe.	Charge the flash unit; Check camera flash settings (e.g., ensure external flash is enabled); Re-seat the flash firmly on the hot shoe.
Flash output too weak/strong.	Incorrect power level setting.	Adjust the flash power output using the control buttons on the unit.
Flash not recognized by camera.	Incompatible hot shoe; Loose connection.	Verify camera hot shoe compatibility; Ensure the flash is securely attached.

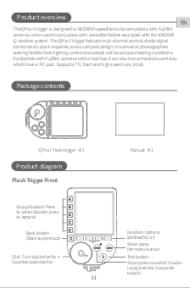
8. SPECIFICATIONS

Feature	Detail
Model Number	F-12-white
Product Dimensions	4.72 x 5.91 x 1.38 inches
Item Weight	3 ounces
Compatible Mountings	Canon, Nikon, Fuji, Sony, Ricoh GR3/GR3X (Universal Hot Shoe)
Flash Sync Speed	1/200 (typical)
Power Source	Internal Rechargeable Battery (1 A battery required)
Included Components	Flash Unit, USB Cable, Storage Case, Diffuser

9. WARRANTY AND SUPPORT

This FOMITO product is covered by a standard manufacturer's warranty. For detailed warranty information, technical support, or service inquiries, please refer to the contact information provided on the product packaging or

Related Documents - F-12-white

	<p>Neewer QPro-F Flash Trigger User Manual and Guide</p> <p>Comprehensive guide to the Neewer QPro-F Flash Trigger, covering product overview, package contents, diagrams, setup, usage, trigger settings, compatible models, and troubleshooting.</p>
<p>Preview</p>	<p>Canon Speedlite 244T Instruction Manual and Specifications</p> <p>Comprehensive guide to the Canon Speedlite 244T automatic electronic flash unit, covering nomenclature, loading batteries, setting ISO film speed, mounting on camera, taking flash pictures, notes, and detailed specifications.</p>
	<p>NEXTORCH T7L LED Flashlight: Long-Range Performance and Features</p> <p>Explore the NEXTORCH T7L, a powerful LED flashlight featuring an impressive 1100-meter beam distance, multiple lighting modes, and a durable aluminum alloy construction. This guide covers its specifications, operation, maintenance, and warranty.</p>
	<p>Ivy Bronx Marble Shoe Cabinet Installation Guide</p> <p>Comprehensive installation manual for the Ivy Bronx Marble Shoe Cabinet, providing step-by-step instructions, parts identification, hardware list, and safety warnings for secure assembly.</p>
	<p>Manuale NEEWER Z2-F Speedlite TTL per Fotocamere FUJIFILM</p> <p>Guida completa al NEEWER Z2-F, un flash Speedlite TTL progettato per fotocamere FUJIFILM, che copre installazione, modalità operative, funzioni wireless e risoluzione dei problemi.</p>
<p>Preview</p>	<p>S016-6000 Rechargeable UV & Red & White 3-in-1 Flashlight User Manual</p> <p>User manual for the S016-6000 rechargeable flashlight, featuring UV, Red, and White LED lights. Includes specifications, operating instructions, charging information, safety precautions, usage scenarios, and maintenance tips.</p>