

Oumefar M50

Oumefar M50 Digital Metronome User Manual

Model: M50

1. INTRODUCTION

Thank you for choosing the Oumefar M50 Digital Metronome. This compact and versatile device is designed to assist musicians of all levels in maintaining precise tempo and rhythm during practice. It features an adjustable tempo range, various beat values, volume control, a tap function, and a convenient clip and lanyard hole for portability. Please read this manual carefully to ensure proper use and optimal performance of your metronome.

2. PRODUCT OVERVIEW

2.1 Features

- **Adjustable Tempo:** Set your desired tempo from 30 to 280 beats per minute (BPM).
- **Multiple Beat Values:** Choose from 0 to 9 beats per measure.
- **Volume Control:** Adjust the metronome's volume or mute it entirely.
- **Tap Function:** Determine the tempo of a song or set your ideal practice tempo.
- **Headphone Output:** Practice silently with the double channel headphone jack.
- **Portable Design:** Equipped with a clip and lanyard hole for easy carrying and attachment.

2.2 Package Contents

- 1 x Oumefar M50 Digital Metronome
- 1 x 3V Cell Battery
- 1 x User Manual (This document)

3. SETUP

3.1 Battery Installation

The Oumefar M50 Digital Metronome operates on one 3V cell battery (included).

1. Locate the battery compartment on the back of the metronome.
2. Open the battery compartment cover.
3. Insert the 3V cell battery, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery compartment cover securely.

Note: If the metronome does not power on, check the battery orientation or replace the battery.



Front view of the Oumefar M50 Digital Metronome, showing the LCD screen displaying beat and tempo, along with the 'Select', 'Play', 'On/Off', and 'TAP' buttons.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

- To power on, press the **On/Off** button.
- To power off, press the **On/Off** button again.

4.2 Setting Tempo (BPM)

1. With the metronome on, press the **Select** button until 'Tempo' is highlighted or flashing on the LCD screen.
2. Use the **Up (▲)** and **Down (▼)** arrow buttons to adjust the BPM. The tempo can be set from 30 to 280 BPM.

4.3 Setting Beat Value

1. Press the **Select** button until 'Beat' is highlighted or flashing on the LCD screen.
2. Use the **Up (▲)** and **Down (▼)** arrow buttons to select the desired beat value (0-9). '0' indicates no accent, while 1-9 indicates the number of beats per measure with an accent on the first beat.

4.4 Adjusting Volume

1. Press the **Select** button until 'Vol.' (Volume) is highlighted or flashing on the LCD screen.
2. Use the **Up (▲)** and **Down (▼)** arrow buttons to cycle through volume levels: Maximum, Medium, Minimum, and Mute.

4.5 Tap Function

The Tap function allows you to quickly find the BPM of a piece of music or set a desired tempo by tapping.

1. Press the **TAP** button repeatedly in time with the desired rhythm.
2. The metronome will calculate and display the average BPM based on your taps.

4.6 Starting and Stopping the Metronome

- To start the metronome click, press the **Play** button.
- To stop the metronome click, press the **Play** button again.

4.7 Using Headphones

Insert standard 3.5mm headphones into the headphone jack located on the side of the metronome for private practice.



Double channel
headphone output



Close-up view of the Oumefar M50 Digital Metronome highlighting the double channel headphone output jack on the side, allowing for private practice.



Lanyard hole



Clip

Image showing the rear clip and the integrated lanyard hole on the Oumefar M50 Digital Metronome, designed for easy portability and attachment.

5. SPECIFICATIONS

| Feature | Description |
|-------------------|-----------------------------------|
| Model | M50 |
| Brand | Oumefar |
| Material | Metal + Plastic |
| Weight | Approx. 34g (1.2 oz) |
| Size | Approx. 6 x 3.5 cm (2.4 x 1.4 in) |
| Tempo Range | 30 to 280 BPM |
| Beat Value | 0, 1, 2, 3, 4, 5, 6, 7, 8, 9 |
| Volume Adjustment | Maximum, Medium, Minimum, Mute |
| Accuracy | $\pm 1/1000$ |
| Power Supply | 1 x 3V Cell Battery (Included) |



Image illustrating the compact size of the Oumefar M50 Digital Metronome, measuring approximately 6 cm (2.4 inches) in length and 3.5 cm (1.4 inches) in width.

6. MAINTENANCE

- **Cleaning:** Wipe the metronome with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the metronome in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery:** If the metronome will not be used for an extended period, remove the battery to prevent leakage.
- **Avoid Impact:** Protect the device from drops and strong impacts, which can damage internal components.

7. TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|---------|----------------|----------|
|---------|----------------|----------|

| | | |
|---------------------------------------|--|--|
| Metronome does not power on. | Battery is dead or incorrectly installed. | Check battery polarity. Replace with a new 3V cell battery. |
| No sound from speaker/headphones. | Volume is muted or set too low. Headphones are not properly connected. | Adjust volume settings. Ensure headphones are fully plugged in. Test with another pair of headphones if available. |
| Tempo/Beat settings are not changing. | Not in the correct setting mode. | Press the Select button to cycle through modes until the desired setting (Tempo or Beat) is highlighted. |

8. WARRANTY AND SUPPORT

Oumefar products are manufactured with quality and performance in mind. For warranty information or technical support, please refer to the contact details provided at the point of purchase or visit the official Oumefar website. Keep your purchase receipt as proof of purchase for any warranty claims.