



Manuals.plus /

› Keurig /

› Keurig K-Express Essentials Single Serve K-Cup Pod Coffee Maker, 36 OZ DETACHABLE WATER TANK, 3 Cup Sizes 6, 8, & 10oz, Matte Black, w/Cleaning Cloth Instruction Manual

Keurig K-Express Essentials K25

Keurig K-Express Essentials Single Serve K-Cup Pod Coffee Maker Instruction Manual

Model: K-Express Essentials K25

Brand: Keurig

INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation of your Keurig K-Express Essentials Single Serve K-Cup Pod Coffee Maker. Designed for convenience and speed, this brewer allows you to enjoy a fresh cup of coffee in minutes. Please read this manual thoroughly before first use and retain it for future reference.

SAFETY INFORMATION

- Read all instructions before use.
- Do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner.
- Use only Keurig-approved K-Cup pods.
- Do not remove the drip tray during brewing.
- Always ensure the water reservoir is filled to the minimum line before brewing.

PRODUCT OVERVIEW

The Keurig K-Express Essentials coffee maker features a compact design and intuitive controls for a seamless brewing experience.

Key Components

- **K-Cup Pod Holder:** Holds the K-Cup pod during brewing.
- **Water Reservoir:** Detachable 36 oz capacity for multiple brews.
- **Brew Size Buttons:** Select 6 oz, 8 oz, or 10 oz brew sizes.
- **Power Button:** Turns the brewer on/off.
- **Drip Tray:** Removable for easy cleaning and to accommodate travel mugs.
- **Add Water Indicator:** Illuminates when the water reservoir needs refilling.
- **Descal Indicator:** Illuminates when descaling is required.

Product Features

- **36 OZ DETACHABLE WATER TANK:** This spacious reservoir lets you prepare several cups without the need for frequent refills.
- **SWIFT & DELIGHTFUL BREWING:** Indulge in a perfectly crafted cup of coffee every time, made in mere minutes.
- **CONTINUOUS BREWING CAPABILITY:** Effortlessly prepare a second cup straight away without any reheating delay.
- **ELEGANT SPACE-EFFICIENT DESIGN:** With its compact footprint of just 6.5" in width, this single-serve coffee maker seamlessly fits on your countertop.
- **TRAVEL MUG COMPATIBLE:** With the drip tray removed, it effortlessly accommodates travel mugs up to 7" tall.
- **INTUITIVE BUTTON OPERATION:** Simply insert a K-Cup pod, choose your preferred cup size, and enjoy fast, fresh, and delightful coffee in a matter of minutes.

Product Images



Image 1: Keurig K-Express Essentials Coffee Maker in matte black, brewing coffee into a blue mug. Shows the compact design and simple button layout.

KEURIG

K-Express

ESSENTIALS[®]

SINGLE SERVE COFFEE MAKER



3 CUP SIZES

6, 8, and 10 oz.



36 OZ.

removable reservoir



SPACE-SAVING

6.5" wide



Image 2: Overview of the Keurig K-Express Essentials, emphasizing its key features: three cup sizes (6, 8, 10 oz), a 36 oz removable water reservoir, and a space-saving 6.5-inch width.

KEURIG®

K-Express

ESSENTIALS®

SINGLE SERVE COFFEE MAKER



36 OZ.
removable reservoir



Image 3: Demonstrates refilling the 36 oz removable water reservoir on the Keurig K-Express Essentials, showing its large capacity.

KEURIG®

K·Express

ESSENTIALS™

SINGLE SERVE COFFEE MAKER



SPACE-SAVING
6.5" wide



Image 4: The Keurig K-Express Essentials accommodating a travel mug by removing the drip tray, highlighting its travel mug friendly feature.

SETUP

1. **Plug In:** Plug the brewer into a grounded outlet.
2. **Fill Reservoir:** Remove the water reservoir lid and fill the reservoir with fresh water up to the MAX fill line. Replace the lid.
3. **First Brew (Cleansing Brew):** Place a large mug on the drip tray. Lift and lower the handle to close the K-Cup pod holder (do not insert a K-Cup pod). Press the power button, then select the 8 oz brew size. The brewer will dispense hot water. Discard the hot water. The brewer is now ready for use.

OPERATING INSTRUCTIONS

1. **Place Mug:** Place a mug on the drip tray.
2. **Insert Pod:** Lift the handle and place a K-Cup pod into the K-Cup pod holder. Lower the handle completely to close the lid.
3. **Select Brew Size:** The brew size buttons (6 oz, 8 oz, 10 oz) will illuminate. Select your desired brew size.

4. **Brew:** The brewing process will begin automatically. Coffee will dispense into your mug.
5. **Enjoy:** Once brewing is complete, carefully remove the mug. The brewer is ready to brew another cup immediately.

Official Product Videos

No official product videos from the seller are available for embedding at this time.

MAINTENANCE

Cleaning

- **Drip Tray:** The drip tray can accumulate spills. Remove the drip tray and its cover, empty any liquid, and clean with warm, soapy water. Rinse thoroughly and replace.
- **K-Cup Pod Holder:** The K-Cup pod holder can be removed for cleaning. Wash with warm, soapy water, rinse, and replace.
- **Water Reservoir:** The water reservoir can be wiped clean with a damp cloth. Do not use abrasive cleaners.

Descaling

Over time, calcium deposits (scale) can build up in your brewer and affect performance. The DESCALE indicator light will illuminate when descaling is required.

1. **Prepare:** Empty the water reservoir. Pour an entire bottle of Keurig Descaling Solution into the reservoir.
2. **Fill with Water:** Fill the empty solution bottle with fresh water and pour it into the reservoir. Do not add K-Cup pods.
3. **Cleansing Brews:** Place a large mug on the drip tray. Press the power button, then select the largest brew size. Repeat this process until the "ADD WATER" light illuminates.
4. **Rinse Cycle:** Rinse the water reservoir thoroughly. Fill it with fresh water up to the MAX fill line. Perform at least 12 cleansing brews using the largest brew size, refilling the reservoir as needed, until the DESCALE light turns off.

TROUBLESHOOTING

Issue	Possible Cause	Solution
Brewer not turning on	Not plugged in; Power outage	Ensure brewer is securely plugged into a grounded outlet. Check circuit breaker.
"ADD WATER" light is on	Water reservoir is low or empty	Refill the water reservoir to the MAX fill line.
Coffee not brewing	K-Cup pod not properly seated; Air in water lines	Ensure K-Cup pod is firmly pressed into the holder. Perform a cleansing brew without a pod to clear air.
"DESCALE" light is on	Mineral buildup in brewer	Perform a descaling procedure as outlined in the Maintenance section.

SPECIFICATIONS

- **Brand:** Keurig

- **Model Name:** K-Express Essentials K25
- **Item Model Number:** K25
- **Product Dimensions:** 6.5"D x 12.2"W x 11.3"H
- **Item Weight:** 4.5 pounds
- **Color:** Black
- **Water Tank Capacity:** 36 oz (Detachable)
- **Brew Sizes:** 6 oz, 8 oz, 10 oz
- **Operation Mode:** Fully Automatic
- **Special Features:** Travel Mug Friendly, Energy Efficient, Removable Tank, Space Saving Design
- **UPC:** 611247598849
- **Manufacturer:** Keurig

WARRANTY & SUPPORT

For warranty information or technical support, please refer to the official Keurig website or contact Keurig customer service directly. Keep your purchase receipt for warranty claims.

Note: Specific warranty terms and conditions may vary and are subject to change by the manufacturer.