

Coleshome REX-09

Coleshome 120x48cm Desk with 3 Fabric Drawers and Headphone Holder

Model: REX-09

INTRODUCTION

Thank you for choosing the Coleshome 120x48cm Desk. This manual provides detailed instructions for assembly, operation, and maintenance to ensure safe and efficient use of your new desk. Please read this manual thoroughly before beginning assembly and retain it for future reference.

SAFETY INFORMATION

- Always assemble the desk on a soft, clean surface to prevent scratches.
- Ensure all screws and fasteners are securely tightened before use. Periodically check and re-tighten as needed.
- Do not overload the desk or drawers. Refer to the specifications section for weight limits.
- Keep small parts away from children during assembly to avoid choking hazards.
- For safety and ease of assembly, it is recommended that two people assemble this desk.
- Avoid using power tools for assembly unless explicitly instructed, as over-tightening can damage components.

PACKAGE CONTENTS

Before assembly, verify that all components are present and undamaged. If any parts are missing or damaged, please contact customer service.

- Desk Top Panels (A, B)
- Metal Frame Components (C, D, E, F, G, H, I, J)
- Fabric Drawers (Q)
- Drawer Bottom Boards (R)

- Headphone Hook (S)
- Adjustable Feet
- Assembly Hardware (Screws, Allen Wrench, etc.)

ASSEMBLY INSTRUCTIONS

Follow these step-by-step instructions carefully. It is recommended to have two people for assembly.

Assembly Video Guide

Your browser does not support the video tag.

This video provides a complete visual guide for assembling your Coleshome desk. It demonstrates each step, including attaching frame components, securing the tabletop, and preparing the fabric drawers.

Important Notes Before Assembly:

- **Pre-assembly check:** Verify all pieces using the component list.
- **For precise assembly:** Tighten screws only to 80% until instructed to fully tighten.
- **Short Screws:** When installing the tabletop, ensure you use the correct short screws (labeled '2' in the video/diagrams). Using incorrect screws will damage the table surface.

Step-by-Step Assembly (Refer to the video for visual guidance):

Step 1: Assemble the Left Frame

Attach the horizontal bars (D, E) to the vertical frame (C) using the provided screws (1) and adjustable feet (1). Ensure the orientation matches the diagram in the assembly video (0:08).

Step 2: Attach the Bottom Support Bar

Connect the bottom support bar (H) to the assembled frame using screws (4). This provides stability to the frame. Refer to the assembly video (0:15).

Step 3: Assemble the Main Desk Frame

Connect the assembled left frame (C) with the other frame components (D, E) using horizontal bars (F, G) and screws (4). Pay attention to the orientation of the holes as shown in the assembly video (0:36).

Step 4: Install Diagonal Support Bars

Attach the diagonal support bars (J) to the main frame using screws (2). These bars enhance the stability of the desk. Refer to the assembly video (0:42).

Step 5: Attach the Tabletop

Carefully place the tabletop panels (A, B) onto the assembled frame. Ensure the alignment is correct and secure them using the short screws (4) and wooden dowels (12). **Important: Use only the short screws (4) for the tabletop to avoid damaging the surface.** Refer to the assembly video (0:50).

Step 6: Install Drawer Supports

Attach the drawer support bars (M) to the side frame where the drawers will be located. Use screws (3) and nuts (7) to secure them. These bars will hold the fabric drawers. Refer to the assembly video (1:03).

Step 7: Assemble Fabric Drawers

Unfold the fabric drawers (Q) and insert the bottom board (R) to create a stable base. Attach the handles (6) using screws (5) and a screwdriver (10). Repeat for all three drawers. Refer to the assembly video (1:11).

Step 8: Insert Drawers

Slide the assembled fabric drawers into the designated slots on the desk frame. Refer to the assembly video (1:24).

Step 9: Attach Headphone Hook

Attach the headphone hook (S) to the side of the desk using the provided screw (3). This can be installed on either side. Refer to the assembly video (1:26).


Final Tightening

Once all components are in place, fully tighten all screws using the provided Allen wrench. Ensure the desk is stable and level.

OPERATING INSTRUCTIONS


Reversible Design

The Coleshome desk features a reversible design, allowing the three fabric drawers to be installed on either the left or right side of the desk. This flexibility enables you to adapt the desk to your room layout and personal preference.

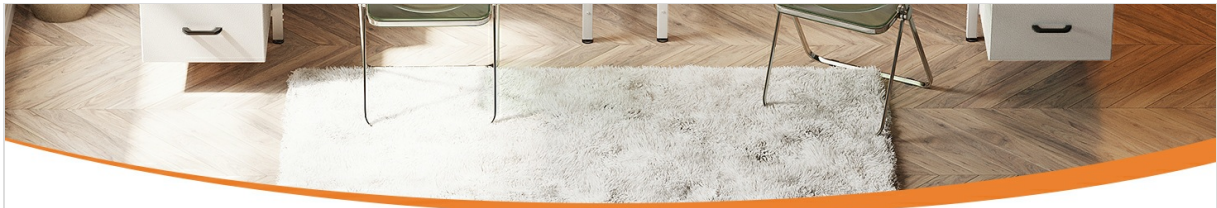

Diseño Reversible

Los cajones pueden instalarse en el lado izquierdo o derecho

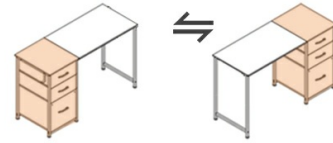

The desk's reversible design allows the drawer unit to be positioned on either the left or right side during assembly.

Using the Fabric Drawers

The three fabric drawers provide ample storage space for office supplies, documents, or personal items. To use, simply pull the handle to open and push to close. Ensure items are evenly distributed to prevent tipping.

Tres Cajones

Ofrecen un Amplio Espacio de Almacenamiento.



The three fabric drawers offer convenient storage for various items, keeping your workspace organized.

Headphone Holder

The integrated headphone holder allows you to conveniently hang your headphones, keeping them within reach and off your desk surface.



A dedicated hook on the side of the desk provides a convenient place to hang headphones.

Adjustable Feet

The desk is equipped with adjustable feet to ensure stability on uneven floors and protect your flooring from scratches. Rotate the feet clockwise or counter-clockwise to adjust the height until the desk is level.



Tablero de Alta Calidad

Impermeable, resistente a los arañazos y fácil de limpiar.



Estructura Robusta

Reforzado con soportes.



Reposapiés Ajustables

Garantizan la estabilidad y la protección del suelo.

The adjustable feet allow for leveling the desk on uneven surfaces and protect floors.

MAINTENANCE

- **Cleaning:** Wipe the desk surface with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that could damage the finish.
- **Fabric Drawers:** The fabric drawers can be spot cleaned with a mild detergent and a damp cloth. Allow to air dry completely. Do not machine wash.
- **Hardware:** Periodically check all screws and fasteners to ensure they remain tight. Re-tighten if necessary to maintain stability.
- **Placement:** Avoid placing the desk in direct sunlight or near heat sources to prevent material degradation.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Desk is wobbly	Loose screws; uneven floor.	Check and tighten all assembly screws. Adjust the leveling feet at the bottom of the desk legs.
Drawers do not slide smoothly	Overloaded drawer; incorrect assembly of drawer supports.	Reduce the weight in the drawer. Ensure the drawer support bars (M) are correctly installed and secured.
Tabletop damaged during assembly	Incorrect screws used for tabletop attachment.	Ensure only short screws (labeled '2' in diagrams) are used for the tabletop. Contact customer service for replacement parts if damage is significant.

SPECIFICATIONS

Brand: Coleshome

Model Number: REX-09

Dimensions (L x W x H): 120 cm x 48 cm x 75.7 cm (47.2 in x 18.9 in x 29.8 in)

Color: White

Material: Wood (tabletop), Metal (frame), Fabric (drawers)

Number of Drawers: 3

Special Features: Reversible design, Headphone hook, Adjustable feet

Assembly Required: Yes

Item Weight: 13 Kilograms (approx. 28.7 lbs)

WARRANTY AND SUPPORT

For warranty information, missing parts, or any other support inquiries, please contact Coleshome customer service. Our team is available to assist you within 24 hours.

Please refer to your purchase documentation for specific warranty terms and contact details.

