



[Manuals.plus](#) /

> [Bissell](#) /

> BISSELL PowerWash Compact Pet Carpet and Upholstery Cleaner 4058N User Manual

Bissell 4058N

BISSELL PowerWash Compact Pet Carpet and Upholstery Cleaner 4058N User Manual

Model: 4058N

INTRODUCTION

The BISSELL PowerWash Compact Pet is a versatile and powerful cleaning system designed for deep cleaning carpets, rugs, and upholstery. Its compact design and specialized tools make it ideal for tackling tough pet stains, dirt, and odors in various areas of your home. Please read this manual thoroughly before operating your cleaner to ensure safe and effective use.

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should be observed, including the following:

- Always connect to a properly grounded outlet.
- Unplug from outlet when not in use and before cleaning or servicing.
- Do not immerse in water or liquid.
- Do not use with damaged cord or plug.
- Use only BISSELL cleaning formulas intended for this machine.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.

WHAT'S IN THE BOX

Your BISSELL PowerWash Compact Pet package should contain the following items:

- BISSELL PowerWash Compact Pet Unit
- Removable Hose (2.1m)
- Tough Stain Brush Tool (8cm)
- Wash & Protect Pro Stain & Odour Cleaning Solution (8oz)



Image: The BISSELL PowerWash Compact Pet unit with its various parts and accessories.

SETUP AND ASSEMBLY

1. **Attach Handle:** Slide the upper handle assembly into the main body of the cleaner until it clicks securely into place.
2. **Fill Clean Water Tank:** Remove the clean water tank from the back of the unit. Unscrew the cap and fill the tank with warm tap water (not boiling) up to the "Water" fill line. Add the BISSELL Wash & Protect Pro cleaning solution up to the "Formula" fill line. Replace the cap and reinsert the tank into the unit.
3. **Prepare for Use:** Ensure the dirty water tank is empty and properly seated. Unwind the power cord and plug the cleaner into a grounded electrical outlet.





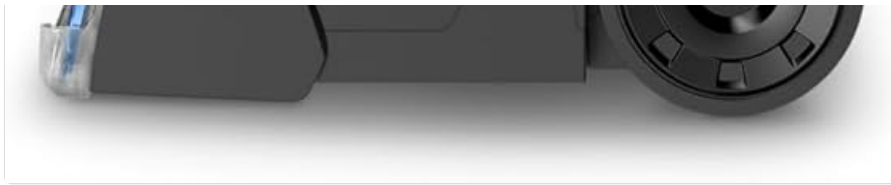


Image: Side view of the cleaner, illustrating the position of the clean water tank (top) and dirty water tank (bottom).

Efficace detergente per la pulizia

Include un detergente per la pulizia Wash & Protect Pro da 236 mL con azione StainProtect per rimuovere e prevenire le macchie future



Image: The included BISSELL Wash & Protect Pro Stain & Odour Cleaning Solution bottle.

OPERATING INSTRUCTIONS

A. Carpet and Area Rug Cleaning

1. **Pre-treat (Optional):** For heavily soiled areas, pre-treat with a BISSELL pre-treatment spray.
2. **Power On:** Press the power button located on the handle.
3. **Cleaning Strokes:** Hold down the spray trigger to apply cleaning solution while making a slow forward wet pass and

another slow backward wet pass. Release the spray trigger and make a slow forward dry pass and another slow backward dry pass to remove dirty solution. Repeat until the area is clean.

4. **DeepReach PowerBrush:** The integrated 4-row DeepReach PowerBrush works to agitate and lift embedded dirt and stains from carpet fibers.



Il nostro pulitore più potente e compatto per moquette e rivestimenti

Pulizia efficace di moquette, tappeti e rivestimenti

Image: The BISSELL PowerWash Compact Pet in action, cleaning a carpeted floor.

DeepReach™ PowerBrush a 4 file

L'aspirazione potente e le spazzole per la rimozione dello sporco eliminano la sporcizia e le macchie che un normale aspirapolvere non riesce a rimuovere



Image: A close-up view of the DeepReach PowerBrush with 4 rows, illustrating its powerful suction and scrubbing action.

B. Upholstery and Spot Cleaning

1. **Attach Hose and Tool:** Open the accessory hose door on the front of the unit and firmly insert the hose. Attach the Tough Stain Brush Tool to the end of the hose.
2. **Test Area:** Test a small, inconspicuous area of the upholstery for colorfastness before cleaning.
3. **Clean Spot:** Hold the tool about 1 inch above the soiled surface. Press the spray trigger to apply cleaning solution. Gently scrub the area with the brush tool. Release the trigger and apply downward pressure while pulling the tool towards you to suction up the dirty solution.
4. **Remove Hose:** When finished, remove the tool and hose, then close the accessory hose door.



Image: The BISSELL PowerWash Compact Pet being used with its removable hose and Tough Stain Brush Tool to clean upholstery.

MAINTENANCE AND CARE

1. **Empty and Rinse Dirty Water Tank:** After each use, remove the dirty water tank, empty its contents, and rinse thoroughly with clean water. Allow it to air dry before reattaching.
2. **Rinse Clean Water Tank:** Empty any remaining solution from the clean water tank and rinse it.
3. **Clean Brush Roll and Nozzle:** The removable brush cover provides easy access to the brush roll. Remove the cover and clean any hair or debris from the brush roll and the suction nozzle. Rinse the cover and brush roll under running water.
4. **Store Cleaner:** Wrap the power cord around the cord wraps. Store the cleaner in a dry, protected area.

Compatto e leggero

Design ergonomico e pratico da riporre in spazi ristretti



Image: The compact and lightweight design of the cleaner makes it easy to transport and store.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Cleaner not turning on	Power cord not firmly plugged in; Blown fuse/tripped circuit breaker	Check plug; Check/reset fuse or circuit breaker
No spray or reduced spray	Clean water tank empty; Tank not seated properly; Spray nozzle clogged	Refill tank; Remove and re-seat tank; Clean spray nozzle
Reduced suction	Dirty water tank full; Dirty water tank not seated properly; Clogged nozzle/hose	Empty dirty water tank; Remove and re-seat tank; Clear any clogs from nozzle or hose
Poor cleaning performance	Brush roll clogged with debris; Incorrect cleaning solution used	Clean brush roll; Use only BISSELL cleaning formulas

SPECIFICATIONS

- **Model:** 4058N
- **Power:** 600W
- **Weight:** 5.9 Kilograms
- **Dimensions (D x W x H):** 24D x 37W x 108H centimetres
- **Power Source:** Corded Electric
- **Hose Length:** 2.1m
- **Included Tool:** 8cm Tough Stain Brush Tool

WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please visit the official BISSELL website or contact BISSELL customer service. Keep your purchase receipt as proof of purchase for any warranty claims.

Online Support: www.bissell.com