

[Manuals.plus](#) /

› [Coleshome](#) /

› Coleshome Desk User Manual - Model rony-03

## Coleshome rony-03

# Coleshome Desk User Manual

**MODEL: RONY-03**

**Brand: Coleshome**

## 1. INTRODUCTION

Thank you for choosing the Coleshome Desk. This versatile and space-saving desk is designed to enhance your home office or study area with its functional features and modern aesthetic. It includes three fabric drawers for organized storage, a reversible design for flexible placement, and convenient accessories like a headphone hook and storage bag. Please read this manual carefully before assembly and use to ensure proper setup and long-lasting enjoyment of your new desk.



Figure 1.1: Coleshome Desk in a home office setup.

## 2. SAFETY INFORMATION

- Always assemble the desk on a soft, clean surface to prevent scratches.
- Ensure all screws and fasteners are securely tightened before use. Periodically check and re-tighten if necessary.
- Do not overload the desk or drawers beyond their stated weight capacity.
- Keep small parts and packaging materials away from children and pets to prevent choking hazards.
- Place the desk on a level surface to prevent wobbling and ensure stability.
- Avoid exposing the desk to direct sunlight, extreme temperatures, or high humidity, which can damage the materials.

## 3. PACKAGE CONTENTS

Before beginning assembly, please verify that all parts listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Desk Top Panel (1)

- Metal Frame Components (Legs, Support Bars)
- Fabric Drawers (3: 2 small, 1 large file drawer)
- Headphone Hook (1)
- Fabric Storage Bag (1)
- Adjustable Feet (4)
- Assembly Hardware (Screws, Allen Wrench, etc.)
- Instruction Manual (1)

## Dimensioni del Prodotto

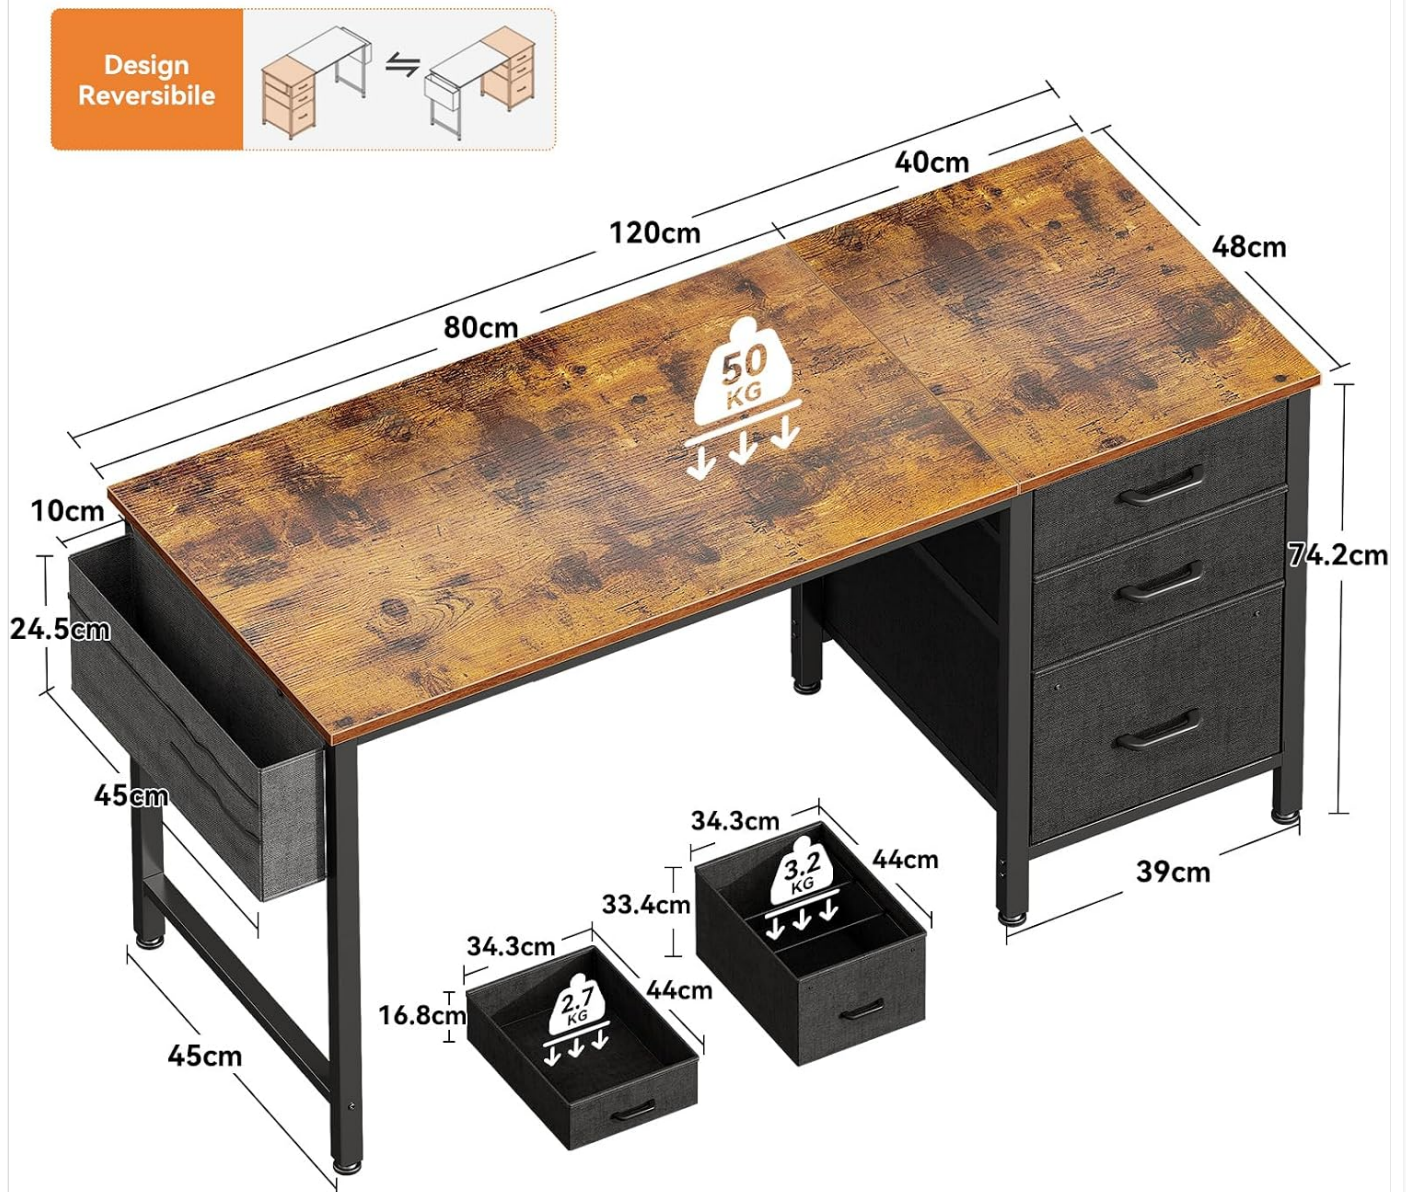


Figure 3.1: Product dimensions and key components.

## 4. SETUP AND ASSEMBLY

The Coleshome Desk is designed for easy assembly. Each part is clearly labeled, and detailed instructions are provided. Follow these steps carefully:

- 1. Unpack and Identify Parts:** Lay out all components on a soft, clean surface. Refer to the parts list and diagrams in the included instruction manual to identify each piece.

2. **Assemble the Metal Frame:** Attach the metal legs to the support bars using the provided screws. Ensure all connections are firm but do not fully tighten screws until the entire frame is assembled.
3. **Attach the Desk Top:** Carefully place the desk top panel onto the assembled metal frame. Align the pre-drilled holes and secure the top with the designated screws. Now, fully tighten all screws on the metal frame and desk top.
4. **Install Adjustable Feet:** Screw the adjustable feet into the bottom of each metal leg. These feet help stabilize the desk on uneven floors and protect your flooring from scratches.
5. **Insert Fabric Drawers:** Slide the fabric drawers into their designated slots within the desk frame. The desk features a **reversible design**, allowing you to install the drawer unit on either the left or right side to suit your room layout.
6. **Attach Headphone Hook and Storage Bag:** The headphone hook can be attached to the side of the desk frame. The fabric storage bag can be hung on the opposite side or adjusted as preferred. Both are designed for easy repositioning.

## Design Reversible

I cassetti possono essere installati a sinistra o a destra



Figure 4.1: The reversible design allows flexible drawer placement.



## Pannello di Alta Qualità

Impermeabile, resistente ai graffi e facile da pulire.



## Struttura Robusta

Rinforzato con staffe.



## Pedane Regolabili

Assicurano stabilità e protezione del pavimento.

Figure 4.2: Key structural features including adjustable feet for stability.

## 5. OPERATING INSTRUCTIONS

The Coleshome Desk is designed for practical daily use in various settings, from a home office to a study area.

- **Using the Fabric Drawers:** The desk features two smaller fabric drawers and one larger file drawer. These are ideal for organizing office supplies, documents, books, and other essentials. The large drawer is suitable for A4 and letter-sized files.
- **Headphone Hook:** Utilize the integrated hook to hang your headphones, bags, or other accessories, keeping your desktop clear and organized.
- **Storage Bag:** The fabric storage bag provides additional space for magazines, notebooks, or personal items, keeping them within easy reach.
- **Reversible Configuration:** Remember that the drawer unit can be positioned on either the left or right side of the desk, allowing you to adapt the desk to your specific workspace needs.

# Cassetto e Schedario per Tessuti

Offre un ampio spazio di archiviazione.



Cassetto in Tessuto



Armadietto in Tessuto  
Formato A4 e Lettera

Figure 5.1: Detailed view of the fabric storage drawers.



Figure 5.2: Desk with headphone hook and storage bag in use.

## 6. MAINTENANCE

To keep your Coleshome Desk in optimal condition, follow these simple maintenance guidelines:

- **Cleaning the Desk Top:** Wipe the high-quality wood top with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the surface. Dry immediately with a clean cloth.
- **Cleaning the Metal Frame:** Use a soft, dry cloth to dust the metal frame. For tougher spots, a slightly damp cloth can be used, followed by immediate drying.
- **Fabric Drawers:** The fabric drawers can be spot cleaned with a mild detergent and a damp cloth. Allow them to air dry completely before reinserting. Do not machine wash.
- **Regular Checks:** Periodically check all screws and connections to ensure they remain tight. Re-tighten if any looseness is detected to maintain stability.

## 7. TROUBLESHOOTING

If you encounter any issues with your Coleshome Desk, please refer to the following common problems and solutions:

| Problem                       | Possible Cause                                                    | Solution                                                                                                                      |
|-------------------------------|-------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------|
| Desk is wobbly                | Uneven floor; loose screws; adjustable feet not properly set.     | Adjust the leveling feet at the bottom of the legs until the desk is stable. Check and tighten all assembly screws.           |
| Drawers do not slide smoothly | Drawer overloaded; fabric snagged; drawer not inserted correctly. | Reduce the weight in the drawer. Check for any obstructions. Ensure the drawer is fully and correctly inserted into its slot. |
| Missing parts upon arrival    | Packaging error; transit damage.                                  | Do not proceed with assembly. Contact Coleshome customer support immediately with your purchase details.                      |

## 8. SPECIFICATIONS

| Feature                | Detail                                                          |
|------------------------|-----------------------------------------------------------------|
| Brand                  | Coleshome                                                       |
| Model                  | rony-03                                                         |
| Color                  | Brown                                                           |
| Dimensions (L x W x H) | 120 x 48 x 75.7 cm (47.2 x 18.9 x 29.8 inches)                  |
| Weight                 | 13 kg (28.7 lbs)                                                |
| Material               | Metal and High-Quality Wood                                     |
| Drawers                | 3 Fabric Drawers (2 small, 1 large file drawer)                 |
| Special Features       | Reversible Design, Headphone Hook, Storage Bag, Adjustable Feet |

## 9. WARRANTY INFORMATION

Coleshome products are manufactured to high-quality standards. For specific warranty details regarding your Coleshome Desk, please refer to the warranty card included with your purchase or contact our customer support team. The warranty typically covers manufacturing defects under normal use.

## 10. CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or need to report missing/damaged parts, please do not hesitate to contact our customer support team. We are committed to providing excellent service and ensuring your satisfaction.

### Contact Information:

Please visit the official Coleshome website or refer to your purchase documentation for the most up-to-date contact details (email, phone, or online support portal).

## ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

### Name

Anonymous

### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

### Question

Example: How do I reset this device or fix this error?

### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

---

Open the live page

<https://manuals.plus/asin/B0DN68MTCX>

More documents and user manuals: <https://manuals.plus/>