

Furmax B0DN6FY2WC

Furmax Futon Sofa Bed Instruction Manual

Model: B0DN6FY2WC

INTRODUCTION


Thank you for choosing the Furmax Futon Sofa Bed. This manual provides essential information for the safe assembly, operation, and maintenance of your new furniture. Please read these instructions carefully before use and retain them for future reference.

The Furmax Futon Sofa Bed is designed for versatility, functioning as a sofa, recliner, or a sleeper bed. It features a durable PU leather finish, sturdy metal legs, integrated cup holders, and removable armrests.

SETUP AND ASSEMBLY

- Assembly of your Furmax Futon Sofa Bed is designed to be straightforward. Please ensure all components are present before beginning.
- Unpack Components:** Carefully remove all parts from the packaging. Inspect for any damage.
 - Locate Hidden Parts:** The cup holders and armrests are stored within the zippered compartment on the underside of the futon seat. Unzip this compartment to retrieve these items.
 - Attach Legs:** Securely attach the six metal legs to the designated points on the futon base. Ensure they are tightened firmly to provide stability.
 - Insert Armrests and Cup Holders:** Place the armrests and cup holders into their respective positions. The cup holders can be folded down when not in use.

Assembly typically takes approximately 20 minutes.

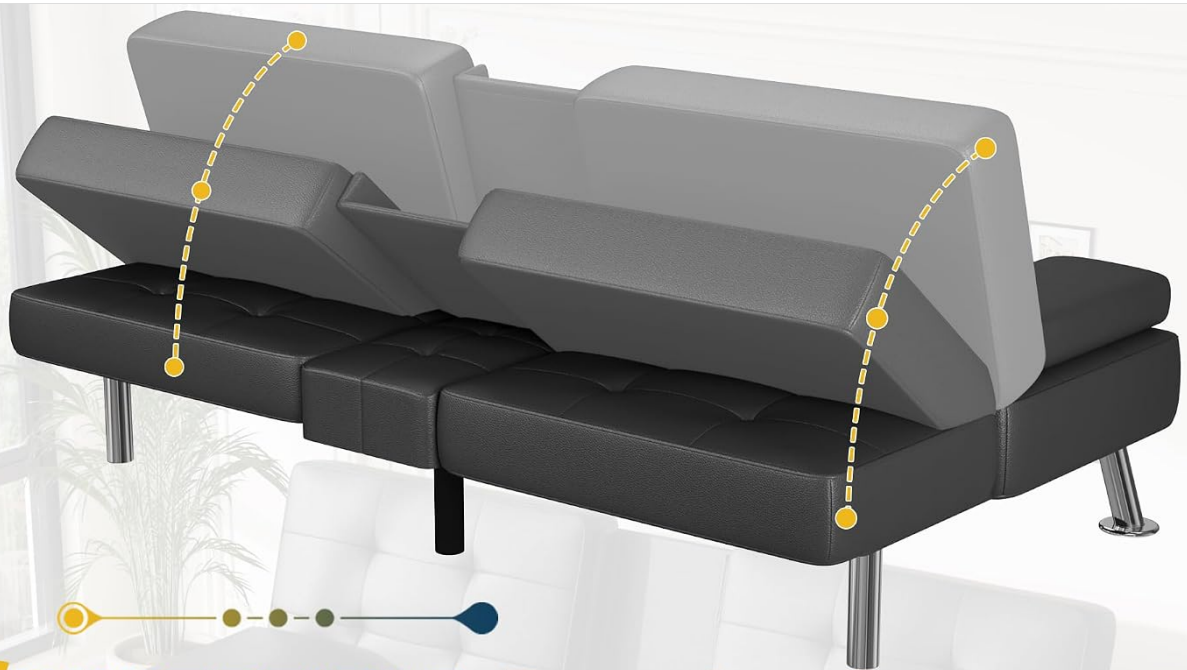

CONVERTIBLE FUTON SOFA BED

Three adjustable positions from sofa to sleeper bed



Taking Nap



**Reclining
Couch**



**Watching
Movie**

Image: This image illustrates the sturdy metal legs, the two integrated cup holders, and the removable armrests, which are key components during assembly and use.

OPERATING INSTRUCTIONS

The Furmax Futon Sofa Bed offers three adjustable positions to suit various needs:

- **Sofa Position (90 degrees):** The upright position, ideal for seating in a living room, office, or dorm setting.
- **Recliner Position (120 degrees):** A slightly reclined angle, perfect for relaxing, reading, or watching television. The integrated cup holders can be utilized in this position.
- **Sleeper Bed Position (180 degrees):** Fully flat, transforming the futon into a temporary bed for guests or naps.

To adjust the backrest, gently push the backrest forward until you hear a click, then slowly lower it to the desired angle. Repeat the process to raise it back to an upright position.



Image: This diagram visually explains how to adjust the futon through its three convertible positions: upright sofa, reclined couch, and flat sleeper bed.



Image: This image displays the futon in both its primary forms: as a comfortable sofa with cup holders and as a fully extended sleeper bed, demonstrating its versatility.

MAINTENANCE AND CARE

Proper care will extend the life and appearance of your Furmax Futon Sofa Bed.

- **Cleaning PU Leather:** For general cleaning, wipe the PU leather surface with a soft, damp cloth. For tougher spots, use a mild soap solution and immediately wipe dry with a clean cloth. Avoid abrasive cleaners or harsh chemicals, as these can damage the material.
- **Spills:** Blot spills immediately with a clean, dry cloth. Do not rub, as this can spread the stain.
- **Legs:** Periodically check that all metal legs are securely tightened.
- **Sunlight Exposure:** Avoid prolonged exposure to direct sunlight to prevent fading and material degradation.



Image: This image highlights the supportive sponge cushioning of the futon, emphasizing the comfort and material quality that benefits from proper maintenance.

TROUBLESHOOTING

If you encounter any issues with your futon sofa bed, please refer to the following common solutions:

- **Stability Issues:** If the futon feels unstable, ensure all six legs are properly attached and tightened. Check that the futon is placed on a flat, even surface.
- **Difficulty Adjusting Backrest:** Ensure no obstructions are preventing the backrest mechanism from moving freely. Apply gentle, even pressure when adjusting. If the mechanism feels stiff, a small amount of silicone lubricant can be applied to moving parts, avoiding contact with the upholstery.
- **Missing Parts:** Double-check the zippered compartment under the seat for smaller components like cup holders and armrests. If parts are genuinely missing, contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	Furmax
Model	B0DN6FY2WC
Material Type	Artificial Leather (PU Leather)
Color	Black
Overall Futon Dimensions (L x W x H)	65" x 30.7" x 28"
Overall Sofa Bed Dimensions (L x W x H)	65" x 32" x 14"
Seat Height	14 Inches
Weight Capacity	550 Pounds
Item Weight	66.5 Pounds
Assembly Required	Yes
Included Components	Cup Holder, Throw Pillow (Removable Armrests)

SOFA BED DIMENSIONS



Image: This image provides a visual representation of the futon's dimensions, including length, width, and height in both its sofa and bed forms.

WARRANTY AND SUPPORT

For any questions, concerns, or assistance with your Furmax Futon Sofa Bed, please contact Furmax customer support. While specific warranty details are not provided in this manual, please refer to your purchase documentation or the retailer's website for warranty information.

For direct support, please visit the official Furmax store or contact their customer service department through the retailer where the product was purchased.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DN6FY2WC>

More documents and user manuals: <https://manuals.plus/>