

viqee Camon 30 Pro

viqee Camon 30 Pro 5G Smartphone User Manual

Model: Camon 30 Pro

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your viqee Camon 30 Pro 5G smartphone. Please read this manual thoroughly before operating your device to ensure optimal performance and longevity. Keep this manual for future reference.

2. SAFETY INFORMATION

- **Battery Safety:** Do not attempt to replace the battery yourself. Use only approved chargers and cables. Avoid exposing the device to extreme temperatures or direct sunlight.
- **Water Resistance:** This device is not waterproof. Avoid contact with liquids.
- **Hearing Protection:** Avoid prolonged listening at high volume levels to prevent hearing damage.
- **Driving Safety:** Do not use your phone while driving. Always prioritize road safety.
- **Disposal:** Dispose of the device and its accessories responsibly according to local regulations. Do not dispose of with household waste.

3. PACKAGE CONTENTS

Verify that all items are present in your product package:

- viqee Camon 30 Pro 5G Smartphone
- USB Cable
- Charger Head (one of four types, depending on region)
- Screen Protector
- Mobile Manual (this document)
- Headset

- Card Pin (SIM ejector tool)

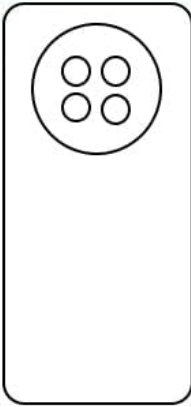
PACKING LIST			
			
PHONE	Mobile Phone Cases	Data Cable	Charger head Choose one of four
			
Screen protector	Mobile manual	Headset	Card pin

Figure 3.1: Package Contents

4. DEVICE OVERVIEW

The viqee Camon 30 Pro is a 5G unlocked smartphone featuring a 6.8-inch FHD+ 120Hz display, powered by an Octa-Core processor. It includes a versatile camera system and a large 6800mAh battery.



Figure 4.1: viquee Camon 30 Pro Front and Back

5. SETUP

5.1. SIM Card and Micro SD Card Installation

Your device supports dual SIM cards and a dedicated micro SD card for expandable storage. Follow these steps to install them:

1. Locate the SIM card tray on the side of your phone.
2. Insert the card pin (ejector tool) into the small hole next to the tray to eject it.
3. Place your Nano-SIM cards and micro SD card into the designated slots on the tray, ensuring correct orientation.
4. Carefully reinsert the tray into the phone until it clicks into place.

Dual SIM+Dedicated micro SD Card Slot

Expandable storage. Supports simultaneous use of two SIM cards for data and phone calls or a micro SD card for data storage.



Figure 5.1: SIM and Micro SD Card Installation

5.2. Initial Power On

Press and hold the Power button located on the side of the device until the screen lights up. Follow the on-screen prompts to select your language, connect to Wi-Fi, and set up your Google account.

5.3. Charging the Battery

Before first use, it is recommended to fully charge your device. Connect the USB cable to the phone's charging port and the other end to the provided charger head. Plug the charger into a power outlet. The device supports 30W fast charging.

6. OPERATING YOUR DEVICE

6.1. Basic Navigation

The viquee Camon 30 Pro operates on Android 13.0. Use touch gestures such as tapping, swiping, pinching, and spreading to navigate the interface, open apps, and interact with content.

6.2. Fingerprint and Face ID Unlock

Enhance your device security using biometric authentication:

- **Screen Fingerprint Unlock:** To set up, go to *Settings > Security > Fingerprint* and follow the instructions to register your fingerprint. This allows for quick and secure unlocking directly from the display.



Figure 6.1: Screen Fingerprint Unlock

- **Zero Photosensitive Face Recognition:** To set up, go to *Settings > Security > Face Unlock*. This feature uses hidden infrared light for accurate recognition even in dark environments.

Zero photosensitive ace recognition

With zero-light face recognition, zero-light face recognition can accurately recognize all the time, bringing a science fiction unlocking experience. Zero-light face recognition with hidden infrared light, no need to glare in the dark environment, still easy to read your "face"



Figure 6.2: Zero Photosensitive Face Recognition

6.3. Camera Usage

The device is equipped with a 64MP main camera, a 48MP front camera, and a 12MP ultra-wide angle camera. Open the Camera app to access various modes and settings for photography and videography.

6.4. Connectivity (5G, GPS)

Your viqee Camon 30 Pro supports 5G cellular technology for high-speed internet access. It also features GPS for accurate positioning and navigation. The GPS navigation system can guide you to destinations and provide indoor navigation in supported areas.

GPS navigation

GPS positioning and navigation, to protect you and create indoor navigation function the national super high 300 airports High-speed rail stations, shopping malls and other public places



Figure 6.3: GPS Navigation

7. MAINTENANCE

7.1. Cleaning the Device

Use a soft, lint-free cloth to clean the screen and body of your phone. Avoid using harsh chemicals or abrasive materials that could damage the finish.

7.2. Software Updates

Regularly check for and install software updates to ensure your device has the latest features, security patches, and performance improvements. Go to *Settings > System > System update* to check for updates.

7.3. Battery Care

To prolong battery life, avoid fully discharging the battery frequently. Charge your phone when the battery level is low, and disconnect the charger once it's fully charged. Avoid exposing the phone to extreme heat or cold.

8. TROUBLESHOOTING

If you encounter issues with your device, try the following solutions:

- **Device not turning on:** Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on again.
- **Apps freezing or crashing:** Close the problematic app and reopen it. If the issue persists, restart your phone.
- **Poor network signal:** Check if your SIM card is properly inserted. Move to an area with better network coverage.
- **Fingerprint/Face ID not working:** Ensure your fingers/face are clean and dry. Re-register your biometrics if necessary.
- **Device unresponsive:** Press and hold the Power button for about 10-15 seconds to force a restart.

9. SPECIFICATIONS

Feature	Specification
Model Name	Camon 30 Pro
Operating System	Android 13.0
Display Size	6.8 Inches FHD+ 120Hz
Resolution	1920 x 1080
Processor	Octa-Core (Qualcomm Snapdragon 8 Gen 2)
RAM	6 GB
Internal Storage	128 GB
Battery Capacity	6800 mAh
Main Camera	64 MP
Front Camera	48 MP
Ultra-Wide Camera	12 MP
Cellular Technology	5G
Connectivity	GPS, Wireless
Audio Jack	3.5 mm
Color	Black
ASIN	B0DN6GL17D

Note: Specifications are subject to change without prior notice. Actual performance may vary.

10. WARRANTY AND SUPPORT

Your viquee Camon 30 Pro smartphone comes with a limited warranty. Please refer to the warranty card included in your package for specific terms and conditions. For technical support, troubleshooting assistance, or warranty claims, please contact your retailer or the manufacturer's customer service. Keep your proof of purchase for warranty validation.

© 2025 viquee. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question