

## KitchenAid KSM150PSDC

# KitchenAid Artisan Series 5 Quart Tilt-Head Stand Mixer Instruction Manual

*Model: KSM150PSDC*

## INTRODUCTION

The KitchenAid Artisan Series 5 Quart Tilt-Head Stand Mixer is a versatile and durable appliance designed to assist with a wide variety of culinary tasks. Its robust metal construction and efficient mixing action ensure thorough ingredient incorporation for recipes ranging from delicate meringues to heavy bread doughs. This manual provides essential information for the safe and effective use of your mixer.

## IMPORTANT SAFETY INFORMATION

**WARNING: To avoid the risk of electrical shock, always unplug the mixer from the outlet before cleaning or attempting to move it. Do not immerse the mixer base in water or other liquids.**

**Proposition 65 Warning: This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.**

- Read all instructions before operating the mixer.
- Keep hands, hair, and clothing, as well as spatulas and other utensils, away from moving beaters during operation to reduce the risk of injury to persons and/or damage to the mixer.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been dropped or damaged in any manner.
- Close supervision is necessary when any appliance is used by or near children.

## WHAT'S IN THE BOX

- KitchenAid Artisan Series 5 Quart Tilt-Head Stand Mixer Unit
- 5 Quart Stainless Steel Bowl with comfortable handle
- Flat Beater
- Wire Whip
- Dough Hook
- Pouring Shield



Image: The KitchenAid Artisan Series Stand Mixer shown with its standard accessories: the flat beater, wire whip, and dough hook, alongside the stainless steel bowl.

## SETUP

1. **Unpack the Mixer:** Carefully remove all packaging materials and place the mixer on a clean, dry, and stable surface.
2. **Tilt the Head:** To raise the motor head, push the tilt-head lock lever to the unlocked position and lift the head.
3. **Attach the Bowl:** Place the 5-quart stainless steel bowl onto the clamping plate, twisting gently to secure it.
4. **Attach an Accessory:** Select the appropriate accessory (flat beater, wire whip, or dough hook) for your recipe. Slide the accessory shaft onto the beater shaft and turn it clockwise until it locks into place.
5. **Lower the Head:** Lower the motor head by pushing the tilt-head lock lever to the unlocked position and gently lowering the head until it clicks into the locked position.
6. **Attach Pouring Shield (Optional):** If desired, attach the pouring shield by sliding it over the bowl. The pouring shield helps prevent splashing and allows for easy addition of ingredients during mixing.



Image: The KitchenAid Artisan Series Stand Mixer with its head tilted back, illustrating the ease of attaching the bowl and accessories.

## OPERATING INSTRUCTIONS

The KitchenAid Artisan Series Stand Mixer features 10 speeds for precise control over your mixing tasks.

1. **Power On:** Ensure the mixer is properly assembled and plugged into a grounded electrical outlet.
2. **Select Speed:** Use the speed control lever located on the side of the mixer to select the desired speed. Start with a lower speed (Stir-2) for initial mixing to prevent splashing, then gradually increase as needed.
  - **Stir (Speed 1):** For slow stirring, combining, and adding dry ingredients.
  - **Slow Mixing (Speed 2):** For slow mixing, mashing, and cutting in shortening.
  - **Medium Mixing (Speeds 4-6):** For beating, creaming, and mixing medium batters.
  - **Fast Mixing (Speeds 8-10):** For fast beating, whipping, and mixing light batters.
3. **Add Ingredients:** Add ingredients to the bowl as specified by your recipe. The tilt-head design provides easy access to the bowl for adding ingredients.
4. **Mixing:** Allow the mixer to operate until ingredients are thoroughly combined or the desired consistency is

achieved. The planetary mixing action ensures 59 touchpoints around the bowl for comprehensive mixing.

5. **Power Off:** When finished, return the speed control lever to the "Off/0" position and unplug the mixer.



Image: The KitchenAid Artisan Series Stand Mixer actively mixing ingredients in a kitchen environment, demonstrating its operational use.

## MAINTENANCE

Proper care and maintenance will extend the life of your KitchenAid Stand Mixer.

- **Cleaning the Bowl and Accessories:** The 5-quart stainless steel bowl, flat beater, wire whip, and dough hook are all dishwasher safe. For best results, wash them on the top rack of your dishwasher.
- **Cleaning the Mixer Unit:** Wipe the mixer unit with a damp cloth. Do not immerse the mixer unit in water or other liquids.
- **Storage:** Store the mixer in a clean, dry place. Ensure all attachments are clean and dry before storing.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Mixer does not turn on.	Not plugged in; power outage; speed control not set.	Ensure mixer is securely plugged in. Check circuit breaker. Turn speed control to 'Off/0' then to desired speed.
Attachments do not reach ingredients at the bottom of the bowl.	Accessory not properly attached or bowl not seated correctly.	Ensure accessory is fully locked into the shaft. Verify bowl is twisted securely onto the clamping plate.
Motor head not locking into place.	Tilt-head lock lever not fully engaged.	Push the tilt-head lock lever firmly to the locked position after lowering the head.

## SPECIFICATIONS

- **Brand:** KitchenAid
- **Model Name:** Artisan Series
- **Model Number:** KSM150PSPDC
- **Color:** Cardamom
- **Capacity:** 5 Quarts
- **Product Dimensions:** 14.1"D x 8.7"W x 13.9"H
- **Item Weight:** 22.8 Pounds
- **Blade Material:** Stainless Steel
- **Controls Type:** Knob
- **Special Features:** Adjustable Speed Control, Removable Bowl, Tilt Head
- **Manufacturer:** KitchenAid
- **Manufacture Year:** 2024
- **UPC:** 883049696089

## WARRANTY & SUPPORT

For warranty information or technical support, please contact KitchenAid Customer Service. Details regarding your product's warranty coverage and how to obtain service can typically be found on the official KitchenAid website or by referring to the warranty card included with your purchase.

You can also visit the official KitchenAid Store for additional product information and accessories[KitchenAid Store on Amazon](#)