

[Manuals.plus](#) /

> [JBL](#) /

> JBL PartyBox Club 120 & Wireless Microphones User Manual

JBL JBLBDL241018-40

JBL PartyBox Club 120 & Wireless Microphones User Manual

Model: JBLBDL241018-40

INTRODUCTION

This manual provides essential information for the safe and effective use of your JBL PartyBox Club 120 Portable Bluetooth Party Speaker and the included JBLPBWIRELESSMICAM Digital Wireless Microphones. Please read this manual thoroughly before operating the product to ensure proper setup, operation, and maintenance.

The JBL PartyBox Club 120 delivers powerful JBL Pro Sound with deep bass and a dynamic light show. It is designed for portability with a long-lasting battery and an ergonomic folding handle. The included digital wireless microphones are specifically designed for seamless integration with your PartyBox speaker, enhancing your karaoke or live performance experience.

WHAT'S IN THE BOX

Verify that all components are present in your package:

- JBL PartyBox Club 120 speaker
- JBL PartyBox Two-Person Wireless Handheld Microphone System (includes 2 microphones and 1 receiver)
- Power Cable
- Quick Start Guide (this document)
- Safety Sheet
- Warranty Card

PRODUCT OVERVIEW



Figure 1: JBL PartyBox Club 120 speaker with two wireless microphones and receiver.



Figure 2: Two JBL wireless microphones with their receiver, designed for use with PartyBox speakers.

JBL PartyBox Club 120 Speaker

The PartyBox Club 120 features a robust design with integrated controls and connectivity options. The front grille houses the speaker drivers and dynamic light show elements. The top panel contains the main control buttons, while the rear panel provides various input and output ports.





Figure 3: Top panel controls including power, Bluetooth, volume, play/pause, and light show buttons.



Figure 4: Rear panel with USB, AUX In, Microphone/Guitar inputs, and Daisy Chain In/Out ports.

JBL Wireless Microphones

The two included wireless microphones are pre-paired with the PartyBox Club 120 receiver for immediate use. Each microphone features a power button and an LED display for channel indication.





Figure 5: Wireless microphone with power button and channel display.





Figure 6: Wireless microphone front view.

SETUP

1. Charging the Speaker

Before first use, fully charge the JBL PartyBox Club 120. Connect the provided power cable to the AC power input on the rear of the speaker and then to a power outlet. The battery indicator will show charging status.

2. Connecting Wireless Microphones

Insert the wireless microphone receiver into one of the microphone input jacks (GAIN 1 or GAIN 2) on the rear panel of the PartyBox Club 120. Ensure the receiver is fully seated. The microphones are pre-paired and should connect automatically when powered on.

3. Power On

Press the Power button on the top panel of the PartyBox Club 120 to turn it on. Press the Power button on each wireless microphone to activate them.

4. Bluetooth Pairing

To connect a Bluetooth device:

1. Press the Bluetooth button on the PartyBox Club 120. The Bluetooth indicator will flash.
2. On your device (smartphone, tablet, etc.), enable Bluetooth and select "JBL PartyBox Club 120" from the list of available devices.
3. Once connected, the Bluetooth indicator will glow solid.

The speaker supports multi-point connection, allowing two devices to be connected simultaneously.

5. JBL PartyBox App

Download the JBL PartyBox app from your device's app store for enhanced control, interactive party effects, and stereo pairing with another PartyBox speaker.

OPERATING

Speaker Controls

- **Power Button:** Turns the speaker on/off.
- **Bluetooth Button:** Initiates Bluetooth pairing mode.
- **Volume Control:** Adjusts the overall speaker volume.
- **Play/Pause Button:** Controls audio playback from connected Bluetooth or USB devices.
- **Light Show Button:** Cycles through different light show modes or turns the light show off.
- **Bass Boost Button:** Enhances bass output.

Microphone Usage

- **Power On/Off:** Press the power button on the microphone.
- **Volume Control:** Adjust the GAIN knob corresponding to the microphone input on the speaker's rear panel.
- **Channel Selection:** The microphones are pre-paired. If interference occurs, refer to the full user guide for manual channel selection instructions.

Input Sources

- **Bluetooth:** Stream audio wirelessly from your Bluetooth-enabled device.
- **AUX In:** Connect external audio devices using a 3.5mm audio cable to the AUX IN port.
- **USB:** Insert a USB drive with audio files into the USB port for playback.
- **Microphone/Guitar Inputs:** Connect wired microphones or a guitar to the 6.3mm input jacks. Adjust individual GAIN knobs for optimal levels.
- **Daisy Chain:** Use the DAISY CHAIN IN and OUT ports to link multiple PartyBox speakers for a larger sound system. Connect the DAISY CHAIN OUT of one speaker to the DAISY CHAIN IN of another.

MAINTENANCE

Cleaning

Wipe the speaker and microphones with a soft, dry cloth. Do not use abrasive cleaners or solvents. Ensure all ports are dry before connecting cables.

Battery Care

To prolong battery life:

- Fully charge the speaker before first use.
- Recharge the battery at least once every 3 months if not in regular use.
- Avoid exposing the speaker to extreme temperatures.

Storage

Store the speaker and microphones in a cool, dry place away from direct sunlight and excessive moisture.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on	Battery is depleted; Power cable not connected	Connect to power outlet and charge; Ensure power cable is securely connected
No sound from speaker	Volume too low; Incorrect input source selected; Device not connected	Increase volume; Select correct input (Bluetooth, AUX, USB); Reconnect device
Bluetooth connection issues	Speaker not in pairing mode; Device too far; Interference	Press Bluetooth button to enter pairing mode; Move device closer; Avoid obstacles; Try re-pairing

Problem	Possible Cause	Solution
Microphones not working	Microphone not powered on; Receiver not connected; Gain too low; Battery low	Power on microphones; Ensure receiver is fully inserted into mic input; Increase GAIN knob; Replace microphone batteries
Light show not working	Light show turned off	Press the Light Show button to cycle through modes

SPECIFICATIONS

Feature	Detail
Brand	JBL
Model Number	JBLBDL241018-40
UPC	840425818282
Speaker Type	Multimedia
Audio Output Mode	Stereo
Connectivity Technology	Bluetooth
Speaker Maximum Output Power	160 Watts
Battery Life	12 Hours
Water Resistance Level	Not Water Resistant (IPX4 splash-proof for speaker)
Woofer Diameter	5.25 Inches
Number of Microphones	2 (included)
Control Method	App, On-device buttons
Compatible Devices	Karaoke Machine, Laptop, Smartphone, Tablet
Included Components	JBL PartyBox Two-Person Wireless Handheld Microphone System, JBL PartyBox Club 120 speaker

WARRANTY

The JBL PartyBox Club 120 and JBLPBWIRELESSMICAM Digital Wireless Microphones come with a Limited Warranty. Please refer to the included warranty card for specific terms and conditions, including coverage duration and claim procedures. Keep your proof of purchase for warranty service.

SUPPORT

For further assistance, product registration, or to access the full digital manual, please visit the official JBL website. You can also contact JBL customer support for technical inquiries or service requests.

JBL Official Website: www.jbl.com

