

[Manuals.plus](#) /

› [Effireli](#) /

› Effireli COV31736202 Replacement Remote Control User Manual for LG DVD Players

Effireli YK-COV31736202

Effireli COV31736202 Replacement Remote Control User Manual

For LG DVD Models: DP132-H, DP132H, DP132, DP132NU

1. INTRODUCTION

This manual provides essential information for the proper use and care of your Effireli COV31736202 replacement remote control. This remote is designed to be compatible with various LG DVD player models, including DP132-H, DP132H, DP132, and DP132NU. It requires no programming or setup and operates using infrared technology.

2. SETUP

The Effireli COV31736202 remote control is designed for immediate use without any programming. Simply insert the required batteries, and it will be ready to operate your compatible LG DVD player.

2.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert two AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover securely.



Image: The Effireli COV31736202 replacement remote control. This image shows the front of the remote with various buttons for DVD player operation.

3. OPERATING INSTRUCTIONS

Once batteries are installed, point the remote control directly at your LG DVD player. The remote operates using infrared signals.

3.1 Basic Functions

- **Power:** Turns the DVD player on or off.
- **Play/Pause:** Starts or pauses disc playback.
- **Stop:** Stops disc playback.
- **Fast Forward/Rewind:** Skips forward or backward through content.
- **Next/Previous:** Skips to the next or previous chapter/track.
- **Volume Up/Down:** Adjusts the audio volume (if supported by the DVD player and connected audio system).

- **Menu:** Accesses the disc menu or system settings.
- **Navigation Buttons (Up, Down, Left, Right, Enter):** Used to navigate menus and confirm selections.

Refer to your LG DVD player's original manual for specific functions and button layouts if you require advanced operations.

4. MAINTENANCE

To ensure the longevity and proper functioning of your remote control, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time.
- **Storage:** Store the remote in a dry place, away from direct sunlight and extreme temperatures. If storing for extended periods, remove the batteries to prevent leakage.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

5. TROUBLESHOOTING

If you experience issues with your remote control, try the following troubleshooting steps:

Problem	Solution
Remote is not responding.	◦ Check if the batteries are inserted correctly with the correct polarity. ◦ Replace old batteries with new ones. ◦ Ensure there are no obstructions between the remote and the DVD player's infrared sensor. ◦ Make sure you are within the effective range of the DVD player.
Some buttons are not working.	◦ Clean the remote's surface, especially around the buttons, to remove any dirt or debris. ◦ Ensure the batteries are fresh. ◦ Confirm that the function you are trying to use is supported by your specific LG DVD player model.
Remote works intermittently.	◦ This often indicates low battery power. Replace the batteries. ◦ Ensure a clear line of sight to the DVD player.

6. SPECIFICATIONS

- **Model Number:** YK-COV31736202
- **Brand:** Effireli
- **Connectivity Technology:** Infrared (IR)
- **Special Feature:** No Programming Required
- **Compatible Devices:** LG DVD/Blu-ray Players (specifically DP132-H, DP132H, DP132, DP132NU)
- **Max Number of Supported Devices:** 1
- **Power Source:** 2 x AAA Batteries (not included)

7. WARRANTY AND SUPPORT

Your Effireli COV31736202 replacement remote control comes with the following:

- **Money-Back Guarantee:** A 30-day money-back guarantee from the date of purchase.
- **Warranty:** A 12-month warranty covering manufacturing defects.
- **Returns and Exchanges:** Accepted within the warranty period for manufacturing defects.

If your model number is not listed as compatible or if your original remote appears different, please contact the seller directly to confirm compatibility before purchase or for support inquiries.
For warranty claims or technical assistance, please contact your retailer or the manufacturer, Effireli, through their official support channels.

© 2024 Effireli. All rights reserved. LG is a registered trademark of LG Corp.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question