

Disney 83063

Disney Winnie the Pooh Squish Light Instruction Manual

Model: 83063

1. INTRODUCTION AND OVERVIEW

The Disney Winnie the Pooh Squish Light is a soft, squeezable night light designed to provide a comforting, warm amber glow. It is suitable for various rooms, including nurseries, bedrooms, playrooms, and living rooms. This light offers adjustable brightness levels and can be powered via USB or AAA batteries, providing flexibility for both stationary and portable use.



WINNIE THE POOH LIGHTS THE NIGHT

Perfect as nursery
lighting, a child's bedroom
night light and much more

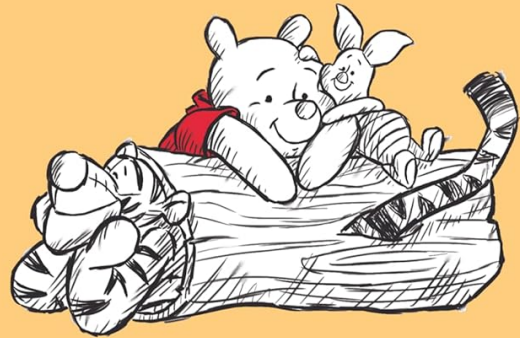 


Image: The Winnie the Pooh Squish Light illuminates a room with a soft, warm light, creating a cozy atmosphere.

2. SAFETY INFORMATION

Please read and understand all safety instructions before using the product. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Keep the device away from water and moisture. Do not use in wet environments.
- Do not attempt to disassemble, repair, or modify the device. Refer all servicing to qualified personnel.
- Use only the specified power sources (USB-C cable with a 5V, 1A USB-A adapter or 3 AAA batteries).
- Ensure batteries are inserted with correct polarity. Do not mix old and new batteries, or different types of batteries.
- Dispose of used batteries properly according to local regulations.
- This product is designed to be cool to the touch, but always supervise children during use.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x Disney Winnie the Pooh Squish Light
- 1 x USB-C Cable

Note: Three AAA batteries and a 5V, 1A USB-A power adapter are required for operation and are not included.

4. SETUP

The Winnie the Pooh Squish Light offers two power options: USB-C cable or AAA batteries.

4.1. USB-C Power Setup

1. Locate the USB-C port on the back of the Squish Light.
2. Insert the included USB-C cable into the light's port.
3. Plug the other end of the USB-C cable into a 5V, 1A USB-A power adapter (not included) or a compatible USB-A port.
4. The light is now ready for use.

4.2. Battery Power Setup

1. Gently remove the silicone outer shell from the light unit to access the battery compartment on the base.
2. Open the battery compartment cover using a small screwdriver (not included).
3. Insert three (3) new AAA batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover and secure it with the screw.
5. Re-attach the silicone outer shell.
6. The light is now ready for portable use.



BATTERY OPTION

Powered by three AAA batteries (not included) or plug the included USB-C cable into any 5V, 1A USB-A port or adapter (not included) for a streamlined power source



USB-C cable (included)



Image: Illustrations demonstrating how to install AAA batteries and connect the USB-C cable for power.

5. OPERATING INSTRUCTIONS

The Winnie the Pooh Squish Light is designed for simple and intuitive operation.

5.1. Power On/Off

- To turn the light **ON**, press the power button located on the base of the unit.
- To turn the light **OFF**, press and hold the power button for a few seconds.

5.2. Adjusting Brightness

The light features three brightness levels: Low, Medium, and High.

- Once the light is on, gently tap the light's base to cycle through the brightness levels. Each tap will switch to the next level (Low → Medium → High → Low).



Image: Visual representation of the three dimmable light settings: Low, Medium, and High.

5.3. Squeezable Design

The soft silicone material allows for gentle squeezing. While primarily for tactile comfort, the light's functionality (on/off, dimming) is controlled by the power button and tapping the base.

SOFT AND SQUEEZABLE

Gently tap or squeeze to switch between three levels of white light

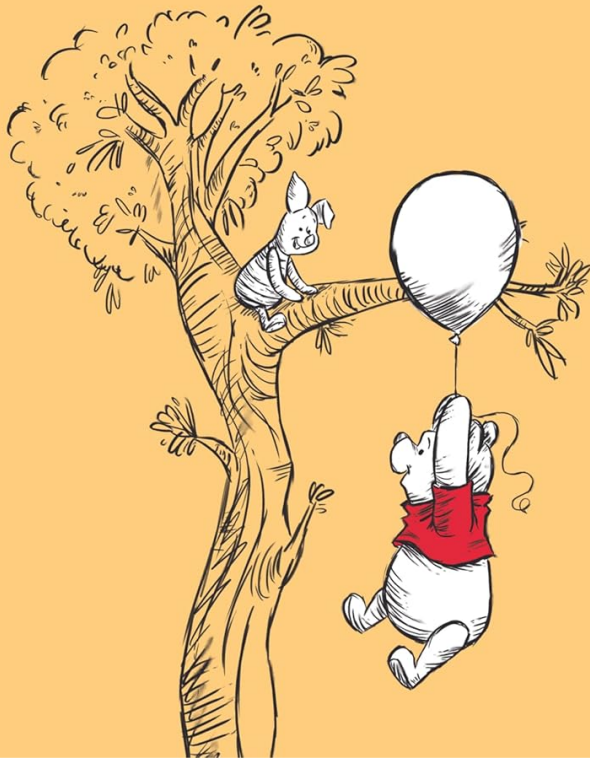 


Image: A hand demonstrating the soft and squeezable feature of the light.

6. MAINTENANCE

To ensure the longevity and proper functioning of your Winnie the Pooh Squish Light, follow these maintenance guidelines:

- **Cleaning:** Wipe the exterior of the light with a soft, dry cloth. Do not use abrasive cleaners, solvents, or immerse the unit in water.
- **Battery Replacement:** When using battery power, replace all three AAA batteries simultaneously when the light dims or stops functioning. Refer to Section 4.2 for battery installation instructions.
- **Storage:** If storing the light for an extended period, remove the AAA batteries to prevent leakage and damage. Store in a cool, dry place.

7. TROUBLESHOOTING

If you encounter issues with your Winnie the Pooh Squish Light, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Light does not turn on.	No power or low battery.	Ensure USB-C cable is securely connected to a working power adapter/port, or replace AAA batteries.
Light is dim or flickers.	Low battery power.	Replace AAA batteries or switch to USB-C power.
Cannot change brightness levels.	Incorrect tapping method.	Ensure you are gently tapping the base of the light, not squeezing the body.
Light turns off automatically after 60 minutes.	This is a built-in feature when operating on battery power.	This is normal operation. To keep the light on continuously, use USB-C power.

8. SPECIFICATIONS

Feature	Detail
Model Number	83063
Product Dimensions	4.19"D x 4.73"W x 5.23"H
Base Material	Silicone
Light Source Type	LED
Power Source	Battery Powered (3x AAA, not included) / USB (5V, 1A)
Control Method	Touch
Additional Features	Dimmable, Energy Efficient, Portable
Color	Yellow Pooh Bear Squishy
UPC	030878831895

Disney
**Winnie
the Pooh**

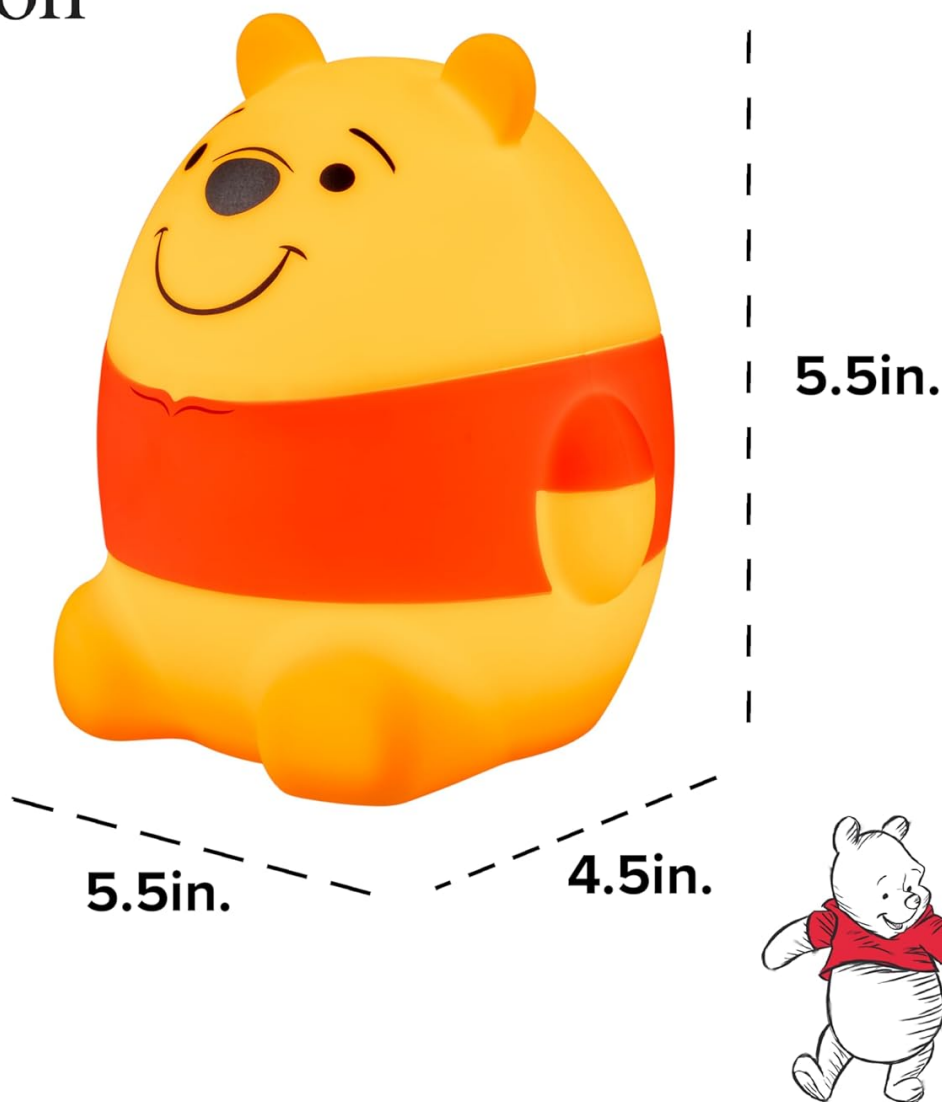 


Image: Diagram showing the approximate dimensions of the Winnie the Pooh Squish Light.

9. WARRANTY AND SUPPORT

9.1. Manufacturer's Warranty

This product is covered by a **90-day limited warranty** from the date of purchase. This warranty covers manufacturing defects and workmanship under normal use. It does not cover damage caused by misuse, accident, unauthorized modification, or improper installation.

Please retain your proof of purchase for warranty claims.

9.2. Customer Support

For technical assistance, troubleshooting not covered in this manual, or warranty inquiries, please contact Disney customer support through their official website or the retailer where the product was purchased.

© 2026 Disney. All rights reserved. Winnie the Pooh elements are © Disney. Based on the "Winnie the Pooh" works by A.A. Milne and E.H. Shepard.