

PINICO N5

PINICO N5 Cordless Vacuum Cleaner Replacement Battery User Manual

Model: N5 Replacement Battery

1. INTRODUCTION

This manual provides essential instructions for the safe and effective use of your PINICO N5 Cordless Vacuum Cleaner Replacement Battery. Please read this manual thoroughly before installation and retain it for future reference.

2. SAFETY INFORMATION

Always adhere to the following safety guidelines to prevent damage to the battery or vacuum cleaner, and to ensure personal safety:

- Always follow the instructions in this user manual and the quick start guide for safe handling and charging.
- Keep the battery away from heat sources, direct sunlight, and liquids.
- Do not attempt to disassemble, modify, or repair the battery. This can lead to electric shock, fire, or explosion.
- In case of damage, swelling, or leakage, stop using the battery immediately and contact customer support for assistance.
- Use only the charger specifically designed for the PINICO N5 vacuum cleaner to charge this battery.
- Do not short-circuit the battery terminals.
- Dispose of used batteries according to local regulations. Do not dispose of in household waste.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- 1 x PINICO N5 Cordless Vacuum Cleaner Replacement Battery



Image: An illustration showing the PINICO N5 vacuum cleaner components, with the replacement battery highlighted as part of the package contents.

4. INSTALLATION AND REMOVAL

The PINICO N5 replacement battery features an easy-to-detach design for convenient replacement.

4.1. Removing the Old Battery

1. Ensure the vacuum cleaner is powered off and disconnected from any charging source.
2. Locate the battery release button or latch on your PINICO N5 cordless vacuum cleaner. This is typically found near the base of the main unit.
3. Press the release button and slide the battery out of its compartment.

4.2. Installing the New Battery

1. Align the new PINICO N5 replacement battery with the battery compartment on the vacuum cleaner.
2. Gently slide the battery into the compartment until it clicks securely into place. Ensure it is firmly seated to establish proper electrical contact.



Image: A close-up view of the PINICO N5 replacement battery, showing its connection points and release button.

Max 40 Min Endurance

Whole house cleaning on a single charge



Image: The PINICO N5 cordless vacuum cleaner with the replacement battery correctly installed in its main unit.

5. CHARGING THE BATTERY

To ensure optimal performance and longevity, charge the battery fully before first use and whenever the battery level is low.

- Connect the vacuum cleaner (with the battery installed) to its dedicated charger.
- Plug the charger into a standard wall outlet.
- A full charge typically takes **3-4 hours**. Refer to your vacuum cleaner's main manual for specific charging indicators (e.g., LED lights).
- Do not leave the battery charging unattended for extended periods.

6. OPERATION AND RUNNING TIME

Once fully charged, the battery provides robust power for your PINICO N5 cordless vacuum cleaner.

- The battery offers a running time of approximately **20-40 minutes**, depending on the power mode selected on your vacuum cleaner and the type of cleaning task.
- For optimal battery life, avoid completely draining the battery before recharging.

7. MAINTENANCE

Proper maintenance helps extend the life of your replacement battery.

- Keep the battery terminals clean and free from dust or debris.
- Store the battery in a cool, dry place when not in use, away from extreme temperatures.
- If storing for an extended period, charge the battery to approximately 50% capacity and recharge every 3-6 months to prevent deep discharge.
- The battery is rechargeable and designed for repeated use.

8. TROUBLESHOOTING

If you encounter issues with your replacement battery, consider the following:

- **Battery not charging:** Ensure the charger is properly connected to both the vacuum and the power outlet. Verify the outlet is functional. Check for any visible damage to the battery or charger.
- **Short running time:** Ensure the battery is fully charged. Running time can vary based on the vacuum's power mode (e.g., max suction mode consumes more power).
- **Battery not fitting:** Double-check that you have the correct replacement battery for the PINICO N5 model. Ensure it is aligned correctly during installation.

If problems persist, please contact customer support.

9. SPECIFICATIONS

Feature	Specification
Product Dimensions	3.3 x 1.1 x 7.2 inches
Item Weight	1.1 pounds
Item Model Number	Battery for PINICO-N5 Vacuum
Battery Type	12V (specific chemistry not provided, typically Li-ion)
Charging Time	3-4 hours (approx.)
Running Time	20-40 minutes (approx., depending on mode)
Compatibility	Exclusively for PINICO N5 Cordless Vacuum Cleaner

10. WARRANTY AND SUPPORT

For any issues or queries regarding your PINICO N5 Replacement Battery, please refer to the contact

information provided in the original User Manual or Quick Start Guide that came with your product. These documents contain the email address specifically designated for customer support, which is the fastest and most effective way to resolve any concerns.

Please retain your purchase receipt for warranty purposes.