

[Manuals.plus](#) /

› [Lenyes](#) /

› Lenyes S828 Bluetooth Party Speaker User Manual

Lenyes S828

Lenyes S828 Bluetooth Party Speaker User Manual

Model: S828

1. INTRODUCTION

The Lenyes S828 is a portable Bluetooth party speaker designed to deliver powerful audio with versatile features. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your device to ensure a seamless audio experience.



Image 1.1: The Lenyes S828 Bluetooth Party Speaker with its accompanying wireless microphones.

Your browser does not support the video tag.

Video 1.1: An overview of the Lenyes S828 Bluetooth Party Speaker, highlighting its key features and design.

2. WHAT'S IN THE BOX

Please check the contents of your package to ensure all items are present:



Image 2.1: The retail packaging of the Lenyes S828 speaker, indicating the included components.

- Lenyes S828 Bluetooth Party Speaker
- Two (2) Wireless Rechargeable Microphones
- Remote Control
- Power Cable
- User Manual (this document)

3. SETUP

3.1 Charging the Speaker

1. Connect the provided power cable to the speaker's charging port.
2. Plug the other end of the power cable into a suitable power outlet.
3. The charging indicator light will illuminate. A full charge takes approximately 7 hours.

4. Once fully charged, the indicator light may change or turn off. Disconnect the speaker from the power source.

3.2 Charging the Microphones

The wireless microphones are rechargeable. Use the appropriate charging cable (not explicitly listed but implied) to charge them when their battery is low.

3.3 Powering On/Off

- To power on the speaker, press and hold the Power button until the indicator lights illuminate.
- To power off, press and hold the Power button again until the lights turn off.

4. OPERATING INSTRUCTIONS

4.1 Bluetooth Pairing



Image 4.1: The Lenyes S828 speaker wirelessly connected to a smartphone, ready for audio playback.

1. Ensure the speaker is powered on and in Bluetooth pairing mode (indicated by a flashing LED).
2. On your device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
3. Select "Lenyes S828" from the list of devices.
4. Once paired, the speaker will emit a confirmation sound, and the LED indicator will stop flashing.

4.2 TWS (True Wireless Stereo) Mode

TWS mode allows you to pair two S828 speakers together for a stereo sound experience.

1. Ensure both S828 speakers are powered on and not connected to any other Bluetooth device.
2. On one speaker (this will be the primary speaker), press the TWS button. It will search for the secondary speaker.
3. The two speakers will automatically connect to each other. A confirmation sound will indicate successful pairing.
4. Now, connect your device to the primary speaker via Bluetooth as described in Section 4.1. Audio will play through both speakers in stereo.

STRONG BASS SUPERB EXPERIENCE



S828

Wireless version: V5.0
TWS connection distance: 6 meters
Bluetooth connection straight-line distance: 18 meters
Horn power: 120W
Battery capacity: 16000mAh
Working time: 20H (50%)
Charging time: 6+1 hour



Image 4.2: The speaker's design emphasizes powerful audio output and deep bass, enhanced by TWS mode.

4.3 Using Wireless Microphones



Image 4.3: The Lenyes S828 speaker is equipped with two wireless microphones, ideal for karaoke and presentations.

1. Power on the wireless microphones. They will automatically connect to the S828 speaker.
2. Adjust microphone volume using the dedicated controls on the speaker or remote control.
3. For karaoke, play music through the speaker and sing into the microphones.

4.4 Multi-Connectivity Options

The S828 supports various input sources:

- **USB Playback:** Insert a USB drive with audio files into the USB port.
- **TF Card Playback:** Insert a TF (microSD) card with audio files into the TF card slot.
- **AUX Input:** Connect an external audio device using a 3.5mm AUX cable to the AUX port.
- **FM Radio:** Switch to FM mode and use the controls to scan and select radio stations.

4.5 Remote Control Functions

The included remote control allows convenient operation from a distance. Functions include:

- Power On/Off
- Volume Up/Down
- Play/Pause
- Next/Previous Track
- Mode Selection (Bluetooth, USB, TF, AUX, FM)
- Microphone Volume Adjustment
- RGB LED Light Control

4.6 RGB LED Lights

The speaker features integrated RGB LED lights that can be controlled via the remote control to enhance the party atmosphere.

5. MAINTENANCE

- Keep the speaker and microphones dry. Do not expose them to water or excessive moisture.
- Clean the device with a soft, dry cloth. Avoid using abrasive cleaners or solvents.
- Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- When not in use for extended periods, charge the battery periodically to maintain its lifespan.

6. TROUBLESHOOTING

6.1 No Power

- Ensure the speaker is fully charged.
- Check the power cable connection.

6.2 No Sound

- Increase the volume on both the speaker and your connected device.
- Ensure the correct input mode (Bluetooth, AUX, USB, TF) is selected.
- Check if the device is properly paired via Bluetooth (refer to Section 4.1).

6.3 Bluetooth Pairing Issues

- Make sure the speaker is within the Bluetooth range (approx. 10 meters) of your device.
- Forget "Lenyes S828" from your device's Bluetooth settings and try pairing again.
- Restart both the speaker and your Bluetooth device.

6.4 Microphone Not Working

- Ensure the microphones are powered on and charged.
- Adjust the microphone volume on the speaker or remote control.
- Check for any obstructions between the microphone and the speaker.

7. SPECIFICATIONS

Feature	Detail
Model Number	S828
Output Power	120W
Battery Capacity	16000mAh (12V)
Playtime	12-15 hours (approx.)
Charging Time	7 hours (approx.)
Bluetooth Version	5.3
Connectivity Options	Bluetooth, USB, TF Card, AUX, FM
Microphones	Dual Wireless Rechargeable
Special Features	TWS Mode, RGB LEDs, Remote Control
Material	Acrylonitrile Butadiene Styrene (ABS)
Item Weight	3.7 Kilograms
Product Dimensions	28.4 x 10 x 11 cm
Color	Black

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included in your package or visit the official Lenyes website. Keep your proof of purchase for any warranty claims.

© 2024 Lenyes. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DNB7D9RP>

More documents and user manuals: <https://manuals.plus/>