

[Manuals.plus](#) /

› [SOCICO](#) /

› SOCICO Digital Watch User Manual

SOCICO SOC-3328-1

SOCICO Digital Watch User Manual

Model: SOC-3328-1

INTRODUCTION

Thank you for choosing the SOCICO Digital Watch. This manual provides detailed instructions for setting up, operating, and maintaining your new watch. Designed for outdoor sports and daily wear, this multifunctional digital wrist watch features a durable design and essential functions including time, date, alarm, and stopwatch.



Image: Front view of the SOCICO Digital Watch, displaying the time and various indicators.

PRODUCT FEATURES

- **Digital Multifunction Display:** Imported LED screen for clear visibility, even in low light. Functions include 12/24-hour format, stopwatch, alarm, date, and day display.

- **Durable Design:** Adjustable 250mm soft TPU strap, 45mm resin case, and acrylic lens for easy readability.
- **3ATM Water Resistance:** Suitable for swimming in shallow water and cold showers. Not recommended for hot water, steam, or prolonged underwater activities like diving.
- **Sport Collections:** Ideal for outdoor and indoor activities such as running and climbing.



Image: The SOCICO Digital Watch alongside icons representing its multi-functional capabilities: daily time, daily alarm, calendar, stopwatch, and 12/24 hour format.

WATCH COMPONENTS

Familiarize yourself with the buttons and display areas of your SOCICO Digital Watch.

LIGHT Button: Activates the LED backlight.

 
MODE Button: Cycles through different modes (Time, Alarm, Stopwatch).

START Button: Used to start/stop functions in stopwatch mode, and adjust settings in setting mode.

RESET Button: Used to reset functions in stopwatch mode, and adjust settings in setting mode.

LED Digital Display

Press the "LIGHT" button to clearly view the time even at night



Nomal



EL Light

Image: Comparison of the SOCICO Digital Watch display in normal conditions and with the LED backlight activated, demonstrating improved visibility in darkness.

SETUP INSTRUCTIONS

Setting Time and Date

1. From the normal time display, press the **MODE** button three times to enter time setting mode. The seconds digits will begin to flash.
2. Press the **RESET** button to advance the flashing selection (seconds, hours, minutes, month, date, day of week).
3. While a digit is flashing, press the **START** button to adjust the value. Hold **START** to rapidly advance.
4. To switch between 12-hour and 24-hour format, press the **START** button when the hour digits are flashing.
5. Once all settings are adjusted, press the **MODE** button to exit setting mode and return to normal time display.

Setting Alarm

1. From the normal time display, press the **MODE** button twice to enter alarm setting mode. The hour digits will flash.
2. Press the **START** button to adjust the hour.
3. Press the **RESET** button to select the minute digits.
4. Press the **START** button to adjust the minutes.
5. Press the **MODE** button to exit alarm setting mode.
6. To turn the alarm on/off, in normal time display, press and hold **START** and then press **RESET**. An alarm icon will appear/disappear.

OPERATING INSTRUCTIONS

Using the Stopwatch

1. From the normal time display, press the **MODE** button once to enter stopwatch mode. The display will show "00:00:00".
2. Press the **START** button to begin timing.
3. Press the **START** button again to pause timing.
4. Press the **RESET** button to reset the stopwatch to "00:00:00" while it is paused.
5. Press the **MODE** button to exit stopwatch mode.

Activating Backlight

Press the **LIGHT** button on the top left side of the watch to illuminate the display. The backlight will remain on for a few seconds.

Daily Chime (Hourly Signal)

To activate or deactivate the hourly chime, press the **MODE** button twice to enter alarm mode. Then, press the **RESET** button to toggle the hourly chime on/off. An icon (often a bell or signal bars) will indicate if it's active.

WATER RESISTANCE GUIDELINES

Your SOCICO Digital Watch is rated 3ATM (30 meters) water resistant. This means it is suitable for:

- Daily splashes
- Rain
- Hand washing
- Swimming in shallow water
- Cold showers

Important Precautions:

- **DO NOT** press any buttons while the watch is submerged in water.
- **AVOID** exposure to hot water, steam, or saunas, as this can compromise the watch's seals.
- **NOT SUITABLE** for diving, snorkeling, or high-pressure water activities.

3ATM WATERPROOF

Sweat resistant, rain resistant, can support swimming and shower



Image: The SOCICO Digital Watch partially submerged in water, illustrating its 3ATM water resistance capability.

MAINTENANCE AND CARE

- **Cleaning:** Wipe the watch case and strap with a soft, damp cloth. Avoid harsh chemicals or abrasive materials.
- **Storage:** Store your watch in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery:** The watch uses a standard button cell battery. Battery replacement should ideally be performed by a qualified technician to ensure water resistance is maintained.
- **Avoid Impacts:** While durable, avoid dropping the watch or subjecting it to strong impacts.



Image: A man wearing the SOCICO Digital Watch on his wrist while engaged in a running activity, demonstrating its suitability for sports.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Low battery.	Replace the battery.
Buttons are unresponsive.	Watch may be in a locked mode or internal issue.	Try pressing all buttons to see if it responds. If not, a battery reset (removing and reinserting battery) might be needed by a technician.
Time is incorrect.	Time was not set correctly or battery is low.	Re-set the time following the "Setting Time and Date" instructions. Check battery.

Problem	Possible Cause	Solution
Water inside the watch.	Water resistance compromised due to button pressing underwater or exposure to hot water/steam.	Immediately stop using the watch and seek professional repair. Do not attempt to dry it yourself.

SPECIFICATIONS

- **Model Number:** SOC-3328-1
- **Brand:** SOCICO
- **Water Resistance:** 3ATM (30 meters)
- **Display Type:** Digital LED
- **Case Material:** Resin
- **Strap Material:** TPU
- **Lens Material:** Acrylic
- **Functions:** Time (12/24H), Date, Day, Alarm, Stopwatch, LED Backlight
- **Package Dimensions:** 16.31 x 7.59 x 2.39 cm
- **Item Weight:** 100 g

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your purchase or contact SOCICO customer service through the retailer where you purchased the product. Please retain your proof of purchase for any warranty claims.

© 2025 SOCICO. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question