

Huogary N11C

Huogary N11C 4-in-1 Electric Milk Frother Instruction Manual

Model: N11C

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the Huogary N11C Electric Milk Frother. Retain this manual for future reference.

- **Electrical Safety:** This appliance operates at 120V and 500W. Do not immerse the base unit or power cord in water or other liquids. Ensure hands are dry before plugging in or unplugging the appliance.
- **Heat Warning:** The frother heats milk to approximately 70°C/158°F. Exercise caution when handling the hot frother and pouring hot milk.
- **Child Safety:** Keep the appliance out of reach of children. Close supervision is necessary when the appliance is used near children.
- **Proper Use:** Use the frother only for its intended purpose of frothing and heating milk. Do not use it for other food items or liquids.
- **Maintenance:** Always unplug the frother from the power outlet before cleaning. Do not turn the milk frother upside down after cleaning to prevent water from entering electrical components.
- **Damage:** Do not operate the appliance if the cord or plug is damaged, or if the appliance malfunctions or has been dropped or damaged in any manner. Contact customer support for assistance.

2. PRODUCT OVERVIEW

The Huogary N11C Electric Milk Frother is a versatile 4-in-1 appliance designed to create various milk

textures for your favorite beverages. It features a sleek design with a stainless steel interior and a comfortable handle.

Key Features:

- **4-in-1 Functionality:** Produces hot dense foam, hot airy foam, cold froth, and warms milk without frothing.
- **One-Touch Operation:** Simple button controls with LED indicators for easy selection of desired function.
- **Automatic Shut-off:** Equipped with temperature control for safe operation, preventing burning or over-frothing.
- **Non-stick Interior:** High-quality stainless steel with a non-stick coating for easy cleaning.
- **Large Capacity:** Heats up to 10.5 oz (300ml) of milk and froths up to 4.39 oz (130ml) of milk.

4 in 1 Function

Tailored Foam for Every Coffee



Hot Dense Foam



Hot Airy Foam



Warm Milk



Cold Airy Foam

Recommended: Whole Milk (fat content > 3%) get better result.

3. SETUP

Before first use, ensure all packaging materials are removed and the frother is clean.

Initial Cleaning:

1. Remove the lid and the whisk from the frother.
2. Wash the interior of the frother, the lid, and the whisk with warm, soapy water. Rinse thoroughly.
3. Wipe the exterior of the frother with a damp cloth. **Do not immerse the base unit in water.**
4. Ensure all parts are completely dry before reassembling and using.

Placement:

- Place the frother on a stable, flat, and dry surface.
- Ensure the power cord is not dangling or in contact with hot surfaces.
- Plug the power cord into a standard 120V electrical outlet.



Image: The frother unit securely placed on its power base.

4. OPERATING INSTRUCTIONS

The Huogary N11C offers four distinct functions for milk preparation. Always ensure the correct whisk is installed for frothing functions.

Understanding Fill Lines:

The interior of the frother has clear markings for maximum and minimum fill levels:

- **MAX (Heating Milk):** 10.5 oz / 300ml (for warming milk without frothing).
- **MAX (Frothing):** 4.39 oz / 130ml (for all frothing functions).
- **MIN (Heating or Frothing):** 3.38 oz / 100ml.

Important: Never exceed the corresponding MAX fill line to prevent overflow.

Large Capacity

Do Not exceed the corresponding line when using



Image: Internal markings indicating maximum fill levels for heating and frothing.

Recommended Milk Type:

For best frothing results, whole milk (fat content > 3%) is recommended.

Steps for Operation:

1. **Insert Whisk:** Ensure the frothing whisk is securely placed at the bottom of the frother for frothing functions. If only warming milk, the whisk with no coil (if provided) should be used, or the frothing whisk can be removed.
2. **Add Milk:** Pour the desired amount of milk into the frother, observing the MAX fill lines for either heating or frothing.
3. **Secure Lid:** Place the lid firmly on the frother.
4. **Select Function:** Press the appropriate button on the control panel for your desired function.

The LED indicator will illuminate.

5. **Start:** The frother will automatically begin operation. It typically takes 60-120 seconds to complete.
6. **Automatic Shut-off:** The frother will automatically turn off once the process is complete.
7. **Pour:** Carefully remove the lid and pour the frothed or warmed milk into your beverage.



Easy to Control

Choose.
Press.
Enjoy.

Image: The easy-to-use control panel for selecting foam modes.

Rich & Creamy Foam

Dream froth in 2 mins



Whole Milk (fat content > 3%) get better result.

Image: Demonstrating pouring frothed milk into a coffee beverage.

Official Product Video:

Your browser does not support the video tag.

Video: An official product video from Huogary demonstrating the features and operation of the 4-in-1 Electric Milk Frother and Steamer.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your frother.

Cleaning Steps:

1. **Unplug:** Always unplug the frother from the power outlet and allow it to cool down before cleaning.
2. **Remove Components:** Take off the lid and remove the whisk.
3. **Wash Interior:** Wash the interior of the frother, the lid, and the whisk with warm, soapy water. The non-stick coating makes cleaning easy. Rinse thoroughly.
4. **Clean Exterior:** Wipe the exterior of the frother with a damp cloth. **Do not rinse the bottom or base unit under running water or immerse it.**
5. **Dry:** Ensure all parts are completely dry before reassembling or storing.

Easy to Clean

Wear and scratch resistant



DO NOT rinse the bottom and base!
Wipe the bottom with a damp cloth
after cleaning.

Image: Proper cleaning method for the frother, emphasizing not to submerge the base.

6. TROUBLESHOOTING

If you encounter any issues with your Huogary N11C Milk Frother, please refer to the following common solutions:

- **Frother Not Starting:**
 - Ensure the frother is properly plugged into a working power outlet.
 - Check if the frother is correctly placed on its power base.
 - Verify that the power button has been pressed firmly.
- **Milk Not Frothing/Heating Properly:**
 - **Check Fill Lines:** Ensure the milk level is between the MIN and MAX frothing lines (4.39 oz / 130ml). Exceeding the MAX line can prevent proper frothing or cause overflow.
 - **Milk Type:** For best results, use whole milk (fat content > 3%). Skim or low-fat milk may produce less dense foam.
 - **Whisk Placement:** Ensure the frothing whisk is correctly installed at the bottom of the frother. If only heating, ensure the non-coil whisk is used or the frothing whisk is removed to prevent excessive frothing.
 - **Cleanliness:** A dirty whisk or interior can affect performance. Clean thoroughly as per maintenance instructions.
- **Milk Overflowing:**
 - The milk level has exceeded the MAX fill line for the selected function. Always observe the specific MAX line for frothing (130ml) or heating (300ml).
 - Ensure the correct whisk is used. Using the frothing whisk when only heating milk can cause it to froth and overflow.
- **Unusual Odor or Smoke:**
 - Immediately unplug the appliance.
 - Do not use the frother again. Contact customer support for inspection and repair.

If the problem persists after trying these solutions, please contact Huogary customer support.

7. SPECIFICATIONS

Feature	Specification
Brand	Huogary
Model Name	N11C
Color	White
Material	Stainless Steel

Special Feature	Automatic shut-off, Temperature control, Non-stick coating, Hot and cold foam functionality
Recommended Uses	Coffee, Latte, Cappuccino, Macchiato
Capacity (Frothing)	4.39 oz / 130 ml
Capacity (Heating)	10.5 oz / 300 ml
Power Source	Electric
Voltage	120V
Wattage	500 watts
Product Dimensions	6.7 x 6.7 x 7.87 inches
Item Weight	2.12 pounds

8. WARRANTY AND SUPPORT

Huogary stands behind the quality of its products. This product is covered by a standard manufacturer's warranty against defects in materials and workmanship.

For Warranty Claims or Technical Support:

- Please refer to the warranty card included with your purchase for specific terms and conditions.
- Contact Huogary customer service directly through the retailer where the product was purchased or visit the official Huogary website for support contact information.
- When contacting support, please have your model number (N11C) and proof of purchase readily available.