

[Manuals.plus](#) /

› [Huogary](#) /

› Huogary 4-in-1 Electric Milk Frother and Steamer Instruction Manual, Model N11C

Huogary N11C

Huogary 4-in-1 Electric Milk Frother and Steamer

INSTRUCTION MANUAL

Model: N11C

Important Safeguards

When using any electrically powered product, basic safety precautions must always be followed. Please read all instructions carefully before using this product.

WARNING: To reduce the risk of fire, electrical shock, or injury to persons or property:

- Carefully read all instructions before operating your new product for the first time and save for future reference.
- Remove and safely discard any packaging material and promotional labels before using the Milk Frother.
- Do not place the Milk Frother near the edge of a bench or table during operation. Ensure the power cord does not hang over the edge of the bench or table.
- Do not operate the appliance without liquid. Always fill to at least the 'Min' mark and never fill past the 'Max' mark.
- This appliance is not intended for commercial or industrial use.
- Do not leave the appliance unattended whilst it is on.

Product Overview

The Huogary 4-in-1 Electric Milk Frother and Steamer is designed to create rich, velvety milk foam and warm milk for a variety of beverages. It features a durable stainless steel interior and an ergonomic handle for ease of use.



Figure 1: Huogary 4-in-1 Electric Milk Frother (Model N11C)

Components:

- **Transparent Lid:** For visibility during operation.
- **Silicone Ring:** Ensures a good seal.
- **Plastic Housing:** Main body of the frother.
- **Whisk for Milk Frothing:** Creates foam.
- **Whisk for Milk Warming:** For heating milk without frothing.
- **Power Base:** Connects to the power supply.



Figure 2: Interior view showing the whisk mechanism.

Setup

1. **Unpack:** Carefully remove the Milk Frother from its packaging and remove any protective materials.
2. **Initial Cleaning:** Before first use, clean the jug and accessories as described in the Maintenance section.
3. **Place on a Stable Surface:** Place the Milk Frother on a flat, level surface.
4. **Insert Whisk:** Choose the appropriate whisk (frothing or warming) and insert it firmly onto the shaft at the base of the jug.
5. **Connect Power:** Fully unwind the power cord and connect the power base to a suitable electrical outlet.



Figure 3: Inserting the whisk into the frother.

Operating Instructions

The Huogary Milk Frother offers 4-in-1 functionality for various milk preparations:

- **Warm Dense Foam (Cappuccino)**
- **Warm Light Foam (Latte)**
- **Cold Foam (Iced Beverage)**
- **Heating Milk**



Figure 4: One-touch four function operation.

Steps for Use:

1. **Add Milk:** Pour milk into the jug according to the MAX and MIN marks inside. The maximum capacity for frothing is 4.39oz (130ml), and for heating milk is 10.14oz (300ml). The minimum level for both is 3.38oz (100ml). **Do not exceed the corresponding line.**
2. **Close Lid:** Place the lid firmly onto the jug.
3. **Select Function:** Press the appropriate button to turn on the desired function. The indicator light will illuminate to show the unit is in operation.
 - Cold milk foam: Blue indicator.
 - Heat up milk: Red indicator.
 - Hot airy milk foam: Red indicator.
 - Hot dense milk foam: Red indicator.
4. **Wait for Completion:** The frother will automatically switch off when the milk or froth is ready.

Large Capacity



10.14 oz / 300ML

Max for heating



4.39oz / 130ML

Max for frothing



3.38oz / 100ML

Min for heating or frothing



Milk Level Indicators are Clean at Glance.
Don't exceed the corresponding line.

Figure 5: Max and Min fill lines for different functions.

Handy Hints:

- We recommend using whole milk (fat content > 3%) for best frothing results.
- Milk heats to approximately 63-75°C (145-167°F).
- After each froth/heat cycle, wait 2 minutes to allow the thermostat to rest before next use.

Your browser does not support the video tag.

Video 1: Official Huogary demonstration of the 4-in-1 Electric Milk Frother and Steamer functions.

Maintenance and Cleaning

Regular cleaning ensures optimal performance and longevity of your milk frother. The interior features a non-stick coating for easy cleaning.

1. **Disconnect:** Always unplug the appliance from the power outlet before cleaning.
2. **Remove Whisk:** Carefully remove the whisk from the shaft.
3. **Clean Jug:** Rinse the interior of the jug thoroughly with running water and a soft brush immediately after use. Wipe it dry with a soft cloth. **Do not rinse the bottom directly where it contacts the power link. Avoid contact with water on the exterior and bottom of the frother.**
4. **Clean Whisk:** Wash the whisk in warm, soapy water and dry thoroughly. Store in a safe place to prevent misplacement.
5. **Lid and Silicone Ring:** Separate the lid and silicone ring from the jug and wash them with warm soapy water.

Easy to clean



Figure 6: Cleaning the frother, highlighting areas to avoid wetting.

NOTE: The Milk Frother or any of its accessories are NOT dishwasher safe.

Troubleshooting

If you encounter any operational problems, please refer to the table below for common issues and solutions. If the problem persists, contact customer support.

Item	Issue	Reason	Solution
1	Indicator light doesn't work / Jug doesn't work	Plug is not inserted properly Jug isn't connected to power base properly No power in the jack	Re-insert plug Remove jug and replace correctly Check the electric circuit
2	Jug doesn't work after operation	Jug temperature is too high	Rinse cold water inside the jug to reduce temperature
3	Motor doesn't work	Jug not cleaned in good time after use, milk locks the mechanism	Clean and move the shaft sleeve of motor by hand to loosen it
4	No heating / Charring	Dosage of milk either too little or too much	Ensure the milk is over the min mark and not past max mark

Specifications

- **Brand:** Huogary
- **Model Name:** MILK FROTHER (N11C)
- **Color:** Black
- **Material:** Stainless Steel
- **Special Feature:** Auto Shut-Off
- **Product Dimensions:** 6.7"W x 7.87"H
- **Capacity:** 10 ounces (300ml for heating, 130ml for frothing)
- **Power Source:** Corded Electric
- **Wattage:** 500 watts
- **Voltage:** 120V
- **Item Weight:** 2.14 pounds
- **Product Care Instructions:** Hand Wash Only

Warranty and Support

For any questions, concerns, or operational problems with your Huogary Milk Frother, please contact our customer support team immediately. We are committed to providing assistance and resolving any issues you may encounter.

Please retain your purchase receipt for warranty purposes. Specific warranty details may vary; refer to your purchase documentation or contact customer service for more information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question