

Outfunny JC308

Outfunny 24V 4WD Electric Ride-On Car (Model JC308) Instruction Manual

Your guide to safe and enjoyable operation.

1. IMPORTANT SAFETY INFORMATION

Please read this manual thoroughly before assembly and operation. Keep it for future reference.

- **Age Range:** Suitable for children aged 3-8 years.
- **Weight Capacity:** Maximum load capacity is 150 lbs. Do not exceed this limit.
- **Adult Supervision:** Always supervise children when operating the ride-on car.
- **Seat Belts:** Ensure children are securely fastened with the 3-point seat belts at all times.
- **Operating Environment:** Use on flat, dry surfaces. Avoid slopes, uneven terrain, or public roads.
- **Charging:** Only use the provided charger. Do not overcharge the battery.
- **Maintenance:** Regularly inspect the vehicle for damage, loose parts, or worn components.

2. PACKAGE CONTENTS

Verify all components are present before beginning assembly. The package includes:

- Main vehicle body
- Wheels (4)
- Steering wheel
- Seats with seatbelts
- Side panels/doors
- Rear roll bar with lights
- Windshield

- Rearview mirrors
- Charger
- Remote control
- Assembly hardware (screws, washers, pins)
- Instruction manual

3. ASSEMBLY INSTRUCTIONS

Follow these steps carefully for proper assembly. Refer to the installation video for visual guidance.

Your browser does not support the video tag.

Video: Outfunny 24V Ride on Car Toy Installation Video. This video provides a step-by-step guide for assembling your ride-on car.

1. **Unboxing and Initial Setup:** Carefully remove all components from the packaging. Place the main body upside down on a soft surface to prevent scratches.
2. **Attach Side Panels:** Secure the left and right side panels to the main body using the provided screws. Ensure they are firmly attached.
3. **Install Suspension Springs:** Place the suspension springs into their designated slots on the underside of the vehicle.
4. **Mount Motors and Axles:** Attach the motor assemblies to the rear axle. Insert the axle through the vehicle body and secure the motors.
5. **Install Wheels:** Slide the wheels onto the axles. Secure each wheel with a washer and a locking nut. Cover the nuts with the decorative caps.
6. **Connect Battery:** Locate the battery compartment (usually under the hood or seat). Connect the battery terminals (red to red, black to black).
7. **Install Windshield and Mirrors:** Attach the windshield to the front of the vehicle. Insert the rearview mirrors into their slots on the side.
8. **Attach Steering Wheel:** Connect the steering wheel to the steering column. Ensure it clicks into place. Install batteries into the steering wheel for horn/music functions if applicable.
9. **Install Rear Roll Bar with Lights:** Attach the rear roll bar to the back of the vehicle. Connect any wiring for the lights and secure with screws. Install batteries for the lights if required.
10. **Secure Seats:** Place the seats into the vehicle and secure them with the provided screws. Ensure the seatbelts are accessible and functional.

4. OPERATING INSTRUCTIONS

Familiarize yourself with the controls for a safe and enjoyable ride.

4.1 Powering On/Off

- To turn on the car, press and hold the 'Start/Stop' button on the dashboard.
- To turn off the car, press and hold the 'Start/Stop' button again.

4.2 Driving the Car

- **Foot Pedal:** Press the foot pedal to accelerate. Release to brake.
- **Forward/Reverse:** Use the gear selector switch on the dashboard to choose between forward and reverse.
- **Speed Settings:** The car features multiple speed settings (e.g., low, medium, high). Adjust using the speed button on the dashboard or remote control.
- **4WD/2WD Switch:** Easily switch between 2-wheel drive and 4-wheel drive modes for different terrains.

4.3 Remote Control Operation

The parental remote control allows you to guide the vehicle and intervene when necessary.

- **Pairing:** Follow the instructions in the remote control manual to pair it with the car.
- **Controls:** The remote typically includes controls for forward/reverse, left/right steering, speed adjustment, and emergency stop.

4.4 Entertainment Features

- **Built-in Music:** The car includes a built-in music player. Use the buttons on the dashboard to select tracks or adjust volume.
- **Bluetooth Connection:** Connect your mobile device via Bluetooth to play your own music through the car's speakers.
- **Headlights & Searchlights:** Activate the working headlights and rear searchlights for a realistic driving experience.



Image: The Outfunny 24V 4WD Electric Ride-On Car, showcasing its robust design and features.

Parent Remote Control

Join your kids playtime



Image: A parent operating the ride-on car using the remote control, demonstrating the parental control feature.

Your browser does not support the video tag.

Video: Outfunny 24V 2 Seater Ride on Car. This video highlights the car's features, including its 4x200W motors and 150 lb capacity.

5. CHARGING THE BATTERY

To ensure optimal performance and battery life, follow these charging guidelines:

- **First Use:** Charge the battery for 8-12 hours before the first use.
- **Regular Charging:** A full charge typically takes 8-10 hours. Do not charge for more than 12 hours.
- **Charging Port:** The charging port is located on the dashboard, labeled 'Input'.
- **Indicator:** The charger will typically have an indicator light (e.g., red for charging, green for fully charged).
- **Storage:** If storing the car for an extended period, charge the battery fully every 3 months to maintain its

health.

6. MAINTENANCE

Regular maintenance helps prolong the life of your ride-on car.

- **Cleaning:** Wipe the car with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the car in a dry, covered area away from direct sunlight and moisture.
- **Battery Care:** Disconnect the battery if the car will not be used for a long time.
- **Inspection:** Periodically check all screws, nuts, and electrical connections to ensure they are secure.

7. TROUBLESHOOTING

If you encounter issues, refer to this section before contacting support.

Problem	Possible Cause	Solution
Car does not move	Battery low or disconnected; Loose wiring; Overload protection activated.	Charge battery; Check all connections; Reduce load; Reset circuit breaker.
Car moves slowly	Low battery; Overloaded; Operating on rough terrain.	Charge battery; Reduce load; Move to smoother surface.
Remote control not working	Remote batteries low/dead; Not paired correctly.	Replace remote batteries; Re-pair remote control.
No sound from music player	Volume too low; Bluetooth not connected.	Increase volume; Ensure Bluetooth is paired.

8. SPECIFICATIONS

- **Model Number:** JC308
- **Product Dimensions:** 47.2 x 31.5 x 32.3 inches
- **Item Weight:** 60.4 pounds
- **Motor:** 4 x 200W
- **Battery:** 24V
- **Max Speed:** 3.1 - 4.5 MPH
- **Load Capacity:** 150 lbs
- **Recommended Age:** 3 - 8 years

Product Dimensions



Recommended age:
3-8 Years old



Load Capacity:
150 lbs



Image: Visual representation of the product dimensions, recommended age, and load capacity.

9. WARRANTY AND SUPPORT


For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official Outfunny website. Keep your proof of purchase for warranty claims.

Related Documents - JC308



[Outfunny 3-in-1 Toddler Push Car: Installation Manual & Safety Guide](#)

Detailed installation manual and safety guide for the Outfunny 3-in-1 Toddler Push Car (Model: MXTH17X0965-SJ312201). Provides parts list, step-by-step assembly instructions, usage guidelines, and maintenance tips for ride-on toys suitable for children aged 18-36 months.

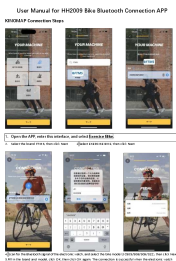

[User Manual: HH2009 Bike Bluetooth Connection App and Exercise Monitor](#)

Step-by-step guide for connecting the HH2009 bike to the KINOMAP and ZWIFT applications via Bluetooth. Includes specifications and operational procedures for the exercise monitor.