

Hykolity WHG-0606

Hykolity 1500W Oscillating Ceramic Tower Space Heater User Manual

Model: WHG-0606

INTRODUCTION

Thank you for choosing the Hykolity 1500W Oscillating Ceramic Tower Space Heater. This manual provides essential information for the safe and efficient operation of your new appliance. Please read all instructions carefully before use and retain this manual for future reference.

IMPORTANT SAFETY INFORMATION

To reduce the risk of fire, electric shock, or injury, always follow these basic precautions:

- Read all instructions before using this heater.
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces.
- Always use the carry handle when moving this heater.
- Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 meters) from the front of the heater and keep them away from the sides and rear.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating unattended.
- Always unplug the heater when not in use.
- Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped, or damaged in any manner.
- Do not use outdoors. This heater is intended for indoor use only.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar

coverings. Arrange cord away from traffic area and where it will not be tripped over.

- To disconnect heater, turn controls to OFF, then remove plug from outlet.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- This heater has **Overheating Protection** and **Tip-Over Protection**, which automatically shut off the unit in unsafe conditions.
- The heater is constructed from **V0 flame retardant material** and is **ETL listed** for safety.
- It is recommended not to use extension cords for safety.

PACKAGE CONTENTS

Your Hykolity Ceramic Tower Space Heater comes fully assembled and includes the following:

- Hykolity 1500W Oscillating Ceramic Tower Space Heater (Model WHG-0606)
- Remote Control
- User Manual

PRODUCT FEATURES

The Hykolity 1500W Oscillating Ceramic Tower Space Heater is designed for efficient and safe indoor heating. Key features include:

- **Fast Heating:** Equipped with a powerful 1500-Watt elongated heating element for rapid warmth.
- **Multiple Heat Settings:** Offers two quiet heat settings (750W/1500W) and a fan-only mode.
- **Wide Oscillation:** Features 70° oscillation to distribute heat evenly across a room up to 230 sq. ft.
- **Digital Display & Thermostat:** Large LED display with a customized smart control and adjustable temperature range from 50°F to 95°F.
- **Remote Control:** Wireless remote control allows operation from up to 26 feet, with convenient storage on the unit.
- **8-Hour Timer:** Programmable timer for automatic shut-off, saving energy.
- **Safety Features:** Includes overheating protection and tip-over switch protection. Made from V0 flame retardant material and ETL listed.
- **Portability:** Lightweight design with a built-in carry handle for easy movement between rooms.
- **Low Noise Operation:** Operates at approximately 35dB, ensuring a quiet environment.



Hykolity 1500W Oscillating Ceramic Tower Space Heater with remote control, illustrating heat output.

TOUCH CONTROL & REMOTE CONTROL

Makes Everything in Your Hands



Control panel and remote control for the Hykolity space heater, highlighting touch controls for various functions like High/Low/Fan, Oscillation, ON/OFF, and 8-hour Timer.



Diagram illustrating the 70-degree oscillation and 230 sq. ft. heating coverage of the Hykolity space heater.

PORTABLE SPACE HEATER



Carry Handle



Remote Control Storage



Display showing the three operational modes: Low heat, High heat, and Fan mode, with a temperature range of 50°F to 95°F.

LOW NOISE OPERATION



Images detailing the portable design of the heater, including a built-in carry handle and integrated remote control storage.

WIDE HEATING COVERAGE

Provide you with warmth anywhere

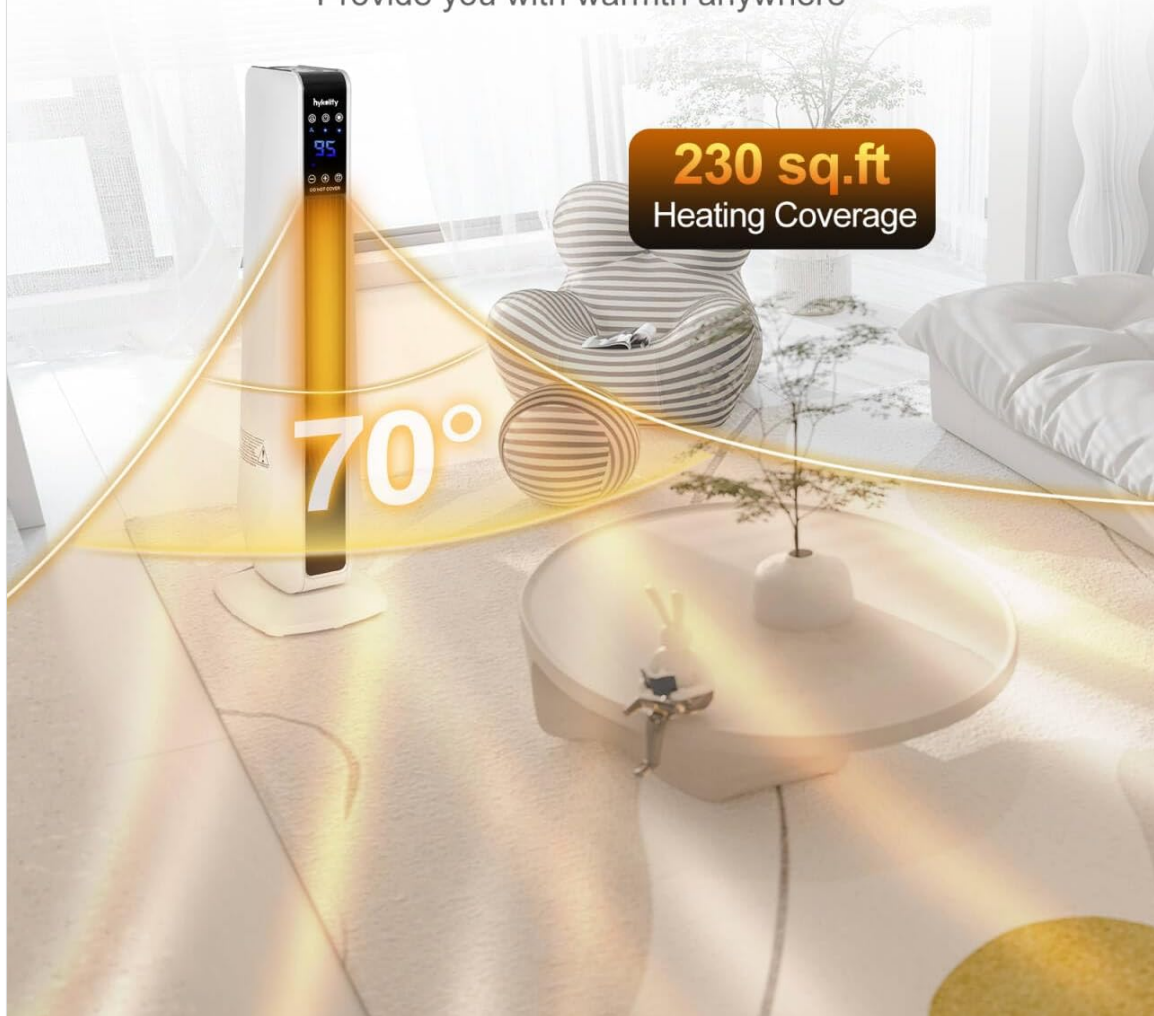 


Image depicting the low noise operation of the Hykolity heater, suitable for quiet environments like a bedroom or office.

SETUP

The Hykolity Ceramic Tower Space Heater comes fully assembled and ready for immediate use. No complex assembly is required.

1. Remove the heater from its packaging.
2. Place the heater on a firm, level surface, ensuring it is at least 3 feet (0.9 meters) away from walls, furniture, and other combustible materials.
3. Plug the 6-foot power cord directly into a standard 120V AC wall outlet. **Do not use extension cords.**

OPERATING INSTRUCTIONS

Your heater can be operated using the touch controls on the unit's top panel or via the included remote control.

Control Panel and Remote Control



Close-up of the heater's top control panel and the remote control, showing button layout.



A hand holding the remote control for the Hykolity space heater, demonstrating its compact size.

Power On/Off

- Press the **Power button** (🔴) on the control panel or remote to turn the heater on or off.

Adjusting Temperature (Thermostat)

- When the heater is on, use the '+' and '-' buttons on the control panel or remote to set your desired temperature. The temperature range is 50°F to 95°F.
- The heater will automatically cycle on and off to maintain the set temperature.

Selecting Modes

- Press the **Mode button** (🔥) to cycle through the available modes:
 - **Low Heat (750W)**: For gentle, energy-efficient heating.
 - **High Heat (1500W)**: For rapid and powerful heating.
 - **Fan Only**: Circulates air without heat.

Activating Oscillation

- Press the **Oscillation button** (🌀) to activate or deactivate the 70° oscillating function, which helps distribute heat more broadly.

Setting the Timer

- Press the **Timer button** (🕒) to set the automatic shut-off timer. Each press will increase the timer by 1 hour, up to a maximum of 8 hours.
- The display will show the remaining time before the heater turns off.

Your browser does not support the video tag.

MAINTENANCE

Regular cleaning and maintenance ensure optimal performance and longevity of your heater.

Cleaning the Exterior

- Always unplug the heater and allow it to cool completely before cleaning.
- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Ensure no water enters the interior of the heater.

Cleaning the Air Filter



Illustration of how to remove the air filter for cleaning and maintenance.

- The heater features a removable air filter for easy cleaning.
- Gently pull out the filter from its slot (refer to the image above for location).
- Clean the filter with a soft brush or vacuum cleaner to remove dust and debris.
- Reinsert the clean filter back into its slot.
- Clean the filter regularly, especially during periods of heavy use, to maintain airflow and heating efficiency.

TROUBLESHOOTING

If you encounter issues with your heater, refer to the following common problems and solutions:

- **Heater does not turn on:**
 - Ensure the power cord is securely plugged into a working 120V outlet.
 - Check if the room thermostat is set to a temperature lower than the ambient room temperature. Increase the set temperature.
 - Verify that the tip-over switch has not been activated (heater is on a stable, level surface).
 - Check for tripped circuit breakers or blown fuses.
- **Heater stops operating unexpectedly:**

- The overheating protection may have activated. Unplug the heater, allow it to cool for 30 minutes, and ensure no obstructions are blocking the air inlets or outlets.
- The tip-over protection may have activated. Place the heater on a firm, level surface.

- **Reduced heat output or airflow:**

- Clean the air filter as described in the Maintenance section.
- Ensure air inlets and outlets are not blocked.

- **Remote control not working:**

- Check and replace the batteries in the remote control.
- Ensure there are no obstructions between the remote and the heater's sensor.

If the problem persists after checking these points, please contact customer support.

SPECIFICATIONS

Attribute	Value
Brand	Hykolity
Model Number	WHG-0606
Power Output	1500W (High), 750W (Low)
Voltage	120 Volts
Form Factor	Tower
Indoor/Outdoor Usage	Indoor
Product Dimensions	8.5"D x 8.8"W x 29"H
Item Weight	9.9 pounds
Heating Coverage	Up to 230 Sq. ft
Special Features	Adjustable Temperature, Digital Display, Remote Control, Oscillation, Overheating & Tip-Over Protection



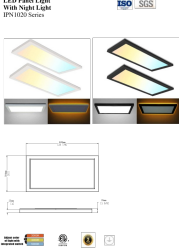
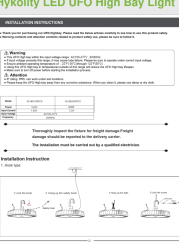
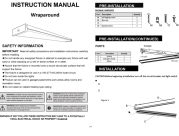
WARRANTY AND SUPPORT

 
Hykolity offers a **1-year warranty** on this oscillating electric space heater. We are committed to product quality and provide direct customer service for any quality issues that may arise during the

warranty period.

For warranty claims, technical support, or any questions regarding your Hykolity product, please contact our customer service team. Refer to the product packaging or the official Hykolity website for current contact information.

Related Documents - WHG-0606

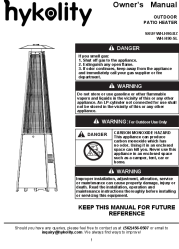 <p>The cover of the Hykolity Outdoor Patio Heater Owner's Manual features the Hykolity logo at the top left. Below it is a photograph of a tall, silver patio heater. To the right of the photo is a table of contents with sections for 'CONTENTS', 'WARNING', 'INSTALLATION', 'OPERATION', and 'TROUBLESHOOTING'. At the bottom, it says 'KEEP THIS MANUAL FOR FUTURE REFERENCE'.</p>	<p>Hykolity Outdoor Patio Heater Owner's Manual</p> <p>Owner's manual for the Hykolity Outdoor Patio Heater (SKU# WH-H90-BZ, WH-H90-SL) covering safety information, package contents, hardware, assembly, operation, maintenance, and troubleshooting.</p>
 <p>The cover of the Hykolity 31" Wood Burning Fire Pit w/grill User Manual (WHB-0106) features the Hykolity logo at the top left. Below it is a photograph of a round, black fire pit with a grill on top. To the right of the photo is the text '31\" Wood Burning Fire Pit w/grill', 'WHB-0106', and 'For Outdoor Use Only'.</p>	<p>hykolity 31" Wood Burning Fire Pit w/grill - User Manual (WHB-0106)</p> <p>User manual for the hykolity 31" Wood Burning Fire Pit w/grill (Model WHB-0106). Includes package contents, safety information, assembly instructions, and care & maintenance guidelines for safe and proper use.</p>
 <p>The cover of the Hykolity IPN1020 Series LED Panel Light with Night Light features the Hykolity logo at the top left. Below it is a photograph of a rectangular LED panel light. To the right of the photo is the text 'LED Panel Light With Night Light', 'IPN1020 Series', and 'ISO 9001' and 'ISO 14001' logos.</p>	<p>Hykolity IPN1020 Series LED Panel Light with Night Light - Features, Specs. and Installation</p> <p>Detailed information on the Hykolity IPN1020 Series LED Panel Light, featuring selectable color temperature (3000K-5000K), dimmability, a 2000K night light, and easy installation. Includes product specifications and installation guide.</p>
 <p>The cover of the Hykolity LED UFO High Bay Light Installation Instructions features the Hykolity logo at the top left. Below it is a photograph of a UFO-shaped LED high bay light. To the right of the photo is the text 'Hykolity LED UFO High Bay Light' and 'INSTALLATION INSTRUCTIONS'.</p>	<p>Hykolity LED UFO High Bay Light Installation Instructions</p> <p>Comprehensive installation guide for Hykolity LED UFO High Bay Lights, covering safety warnings, attention points, product dimensions, and wiring instructions.</p>
 <p>The cover of the Hykolity Wraparound Light Fixture Instruction Manual features the Hykolity logo at the top left. Below it is a photograph of a wraparound light fixture. To the right of the photo is the text 'INSTRUCTION MANUAL', 'Wraparound', and 'SAFETY INFORMATION'.</p>	<p>Hykolity Wraparound Light Fixture Instruction Manual</p> <p>Comprehensive instruction manual for installing and using the Hykolity Wraparound light fixture, covering safety precautions, package contents, parts identification, and detailed installation steps for junction box and keyhole mounting.</p>

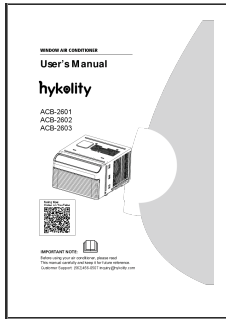

[Hykolity Window Air Conditioner User Manual ACB-2601, ACB-2602, ACB-2603](#)

Comprehensive user manual for Hykolity window air conditioners, models ACB-2601, ACB-2602, and ACB-2603. Covers safety, installation, operation, features, maintenance, and troubleshooting.