

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [HOMCOM](#) /

› [HOMCOM Radiator Cover with 2 Drawers - Model 820-398V01WT Instruction Manual](#)

HOMCOM 820-398V01WT

HOMCOM Radiator Cover with 2 Drawers

MODEL: 820-398V01WT - INSTRUCTION MANUAL

1. Introduction

Thank you for choosing the HOMCOM Radiator Cover. This product is designed to enhance the safety and aesthetics of your living space by covering your radiator. It features a horizontal slatted design, integrated drawers for storage, and pre-made cutouts for easy integration with skirting boards. This manual provides essential information for safe assembly, operation, and maintenance of your new radiator cover.



Image 1: The HOMCOM Radiator Cover in a typical home environment, showcasing its design and functionality.

2. Safety Information

- **Hot Surfaces:** Radiators can become very hot. While this cover provides a barrier, exercise caution, especially with children and pets, as the cover itself may warm up.
- **Ventilation:** Ensure the radiator cover does not obstruct airflow excessively. The slatted design is intended to allow heat dissipation.
- **Stability:** Always secure the radiator cover to the wall using the provided clips to prevent tipping, especially if drawers are used for storage.
- **Weight Limit:** Do not exceed the recommended maximum load of 3 kg per drawer. Overloading can compromise stability and damage the unit.
- **Assembly:** Follow all assembly instructions carefully. Incorrect assembly can lead to instability and potential hazards.

3. Package Contents

Before beginning assembly, please verify that all components are present and undamaged. Refer to the

included assembly manual for a detailed list of parts and hardware.

- 1 x HOMCOM Radiator Cover (unassembled components)
- 1 x Assembly Manual
- Required assembly hardware (screws, clips, etc.)

4. Setup and Assembly

Assembly of the HOMCOM Radiator Cover requires careful attention to the provided assembly manual. The following points highlight key features and steps:

1. **Pre-Assembly Measurement:** Before purchasing and assembling, measure your radiator's dimensions to ensure it fits within the inner dimensions of the cover. The inner dimensions are 107 cm (L) x 14.5 cm (W) x 81 cm (H).



Image 2: Illustration demonstrating how to measure your radiator to ensure proper fit with the cover.

2. **Plinth Integration:** The cover features pre-made cutouts at the base to accommodate skirting boards, allowing for a flush fit against the wall.



Image 3: Detail of the plinth cutout at the bottom of the radiator cover, designed for seamless integration with skirting boards.

3. **Wall Mounting:** Use the provided clips to securely attach the radiator cover to the wall. This prevents accidental tipping and ensures stability. The clips also allow for quick removal for cleaning or radiator inspection.

ESPACE DE STOCKAGE SUPPLÉMENTAIRE



Image 4: Visual representation of the easy-attach clips used for wall mounting, facilitating quick installation and removal.

4. **Drawer Installation:** The two integrated drawers provide additional storage. Follow the assembly manual for correct drawer slide and handle installation.

Veillez mesurer la taille de votre radiateur avant d'acheter



Image 5: The two functional storage drawers integrated into the top of the radiator cover, offering convenient extra space.

Refer to the detailed assembly manual included in your package for step-by-step instructions and diagrams.

5. Operating Instructions

Once properly assembled and installed, the HOMCOM Radiator Cover functions passively. It provides a protective barrier against the hot radiator surface and offers additional storage space via its two drawers. Ensure that items placed on top or in the drawers do not obstruct the radiator's heat output or ventilation slots.

6. Maintenance

- **Cleaning:** Wipe the surface with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- **Dusting:** Regularly dust the slatted grid to maintain optimal airflow and appearance.
- **Inspection:** Periodically check the wall mounting clips and all assembled connections to ensure they remain secure.

7. Troubleshooting

- **Cover does not fit:** Verify your radiator's dimensions against the inner dimensions provided in the specifications section. Ensure the plinth cutouts align with your skirting board.
- **Unit feels unstable:** Ensure the wall mounting clips are correctly installed and securely fastened to a suitable wall material. Re-tighten all assembly screws.
- **Drawers are stiff:** Check that the drawer slides are correctly installed and lubricated if necessary. Ensure no objects are obstructing the drawer's movement.

8. Specifications

Feature	Detail
Model Number	820-398V01WT
Total Dimensions (W x D x H)	111 cm x 19 cm x 95.5 cm
Inner Dimensions (L x W x H)	107 cm x 14.5 cm x 81 cm
Drawer Interior Dimensions (L x D x H)	40 cm x 14 cm x 10 cm
Leg Height	10 cm
Skirting Cutout Height	16 cm
Maximum Load per Drawer	3 kg
Material	MDF, Particle Board
Color	White



Image 6: Detailed diagram illustrating the external dimensions of the radiator cover.

9. Warranty and Support

For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official HOMCOM website. Keep your proof of purchase for any warranty claims.