

Oilsky A55

Oilsky A55 MP3 Player User Manual

Model: A55 | Brand: Oilsky

1. INTRODUCTION

Thank you for choosing the Oilsky A55 MP3 Player. This manual provides essential information for setting up, operating, and maintaining your device. Please read it carefully to ensure optimal performance and longevity of your MP3 player.

Key Features:

- Bluetooth 5.3:** Enjoy high-quality music with faster data transfer and stable connections to Bluetooth speakers and headphones. *Note: This device cannot pair with mobile phones.*
- 128GB Internal Storage:** Store thousands of songs, e-books, and other files. *Note: As of April 23, 2025, the device includes 128GB built-in memory and no additional 64GB Micro SD card.)*
- 2.4-inch Touchscreen:** Navigate through menus and functions with ease using the intuitive touchscreen interface.
- Multifunctionality:** Supports FM radio, voice recording, e-books (TXT format only), videos (AMV/AVI), photos, alarm clock, and stopwatch.
- Built-in HD Speaker:** Listen to music directly from the device without needing headphones.
- HiFi Sound Quality:** Equipped with a professional digital noise reduction chip for a superior audio experience. Supports MP3, WMA, APE, FLAC, WAV, AAC audio formats.
- Portable Design:** Lightweight (89g) and compact (3.32 × 1.98 × 0.46 inches) for easy carrying during various activities.

2. PACKAGE CONTENTS

Ensure all items are present in the box:

- 1x Oilsky A55 MP3 Player
- 1x USB Type-C Cable
- 1x Wired Earphones

- 1x User Manual



Image: Contents of the Oilsky A55 MP3 Player package. Please note that the 64GB TF card shown in this image is no longer included with new purchases as per product updates effective April 23, 2025.

3. SETUP

3.1 Charging the Device

Before first use, fully charge your MP3 player. Connect the provided USB Type-C cable to the device's charging port and the other end to a USB power adapter (not included) or a computer's USB port.

- A full charge typically takes approximately 2-3 hours.
- The battery indicator on the screen will show charging status.

3.2 Powering On/Off

- To power on: Press and hold the Power button until the screen lights up.
- To power off: Press and hold the Power button, then select "Power Off" on the screen.

3.3 Transferring Files

To transfer music, videos, e-books, or photos to your MP3 player:

1. Connect the MP3 player to your computer using the provided USB Type-C cable.
2. The device will appear as a removable disk on your computer.
3. Drag and drop your desired files into the appropriate folders (e.g., "Music," "Videos," "E-books," "Pictures") on the MP3 player.
4. Once files are transferred, safely eject the device from your computer before disconnecting the cable.

4. OPERATING INSTRUCTIONS

4.1 Device Layout and Buttons



Grande capacité de 128 Go

Avec une mémoire intégrée de 64 Go et une carte TF de 64 Go incluse, il prend en charge jusqu'à 128 Go de mémoire étendue. Vous n'avez donc pas à vous soucier de manquer de mémoire et pouvez profiter pleinement de votre musique préférée.

Image: Button and port layout of the OiSky A55 MP3 Player.

Button Functions

Feature	Description
Headphone Jack	Connect wired earphones.
TF Card Slot	For external memory expansion (if applicable, refer to storage section for current model).
Speaker Hole	Built-in speaker output.
Power Button	Press and hold to power on/off. Short press to turn screen on/off.
Volume Up/Down	Adjust the audio volume.
Previous Track	Go to the previous song/file.
Next Track	Go to the next song/file.
Reset Button	Use a pin to press for a hard reset if the device becomes unresponsive.

4.2 Navigating the Touchscreen Interface

The Oilsky A55 features a 2.4-inch full touchscreen. Swipe left/right or up/down to navigate between menus and applications. Tap icons to select functions.

4.3 Playing Music

1. Tap the "Music" icon on the main screen.
2. Browse your music library by artist, album, genre, or all songs.
3. Tap a song to start playback.
4. Use the on-screen controls or physical buttons for play/pause, next/previous track, and volume adjustment.

Image: Music playback interface on the OiLsky A55 MP3 Player.

4.4 Bluetooth Pairing

To connect to Bluetooth headphones or speakers:

1. Go to the "Settings" menu and select "Bluetooth."
2. Turn Bluetooth "On."
3. Ensure your Bluetooth headphones/speaker are in pairing mode.
4. The MP3 player will scan for available devices. Select your device from the list to pair.
5. Once paired, audio will be routed to the Bluetooth device.



Image: Bluetooth 5.3 connectivity feature of the Oilsky A55 MP3 Player.

4.5 FM Radio

To use the FM Radio function:

1. Connect wired earphones to the headphone jack (they act as an antenna).
2. Tap the "FM Radio" icon.
3. Use the on-screen controls to scan for stations or manually tune to a frequency.


4.6 Voice Recording

To record audio:

1. Tap the "Recordings" icon.
2. Tap the record button to start and stop recording.
3. Recordings are saved internally and can be played back from the same menu.

Ce n'est pas seulement un lecteur de musique, c'est un compagnon de vie.

Qu'il s'agisse d'une course matinale, d'un long voyage, de conduire ou de dormir, il contient la musique et les histoires dont vous avez besoin, où que vous soyez.

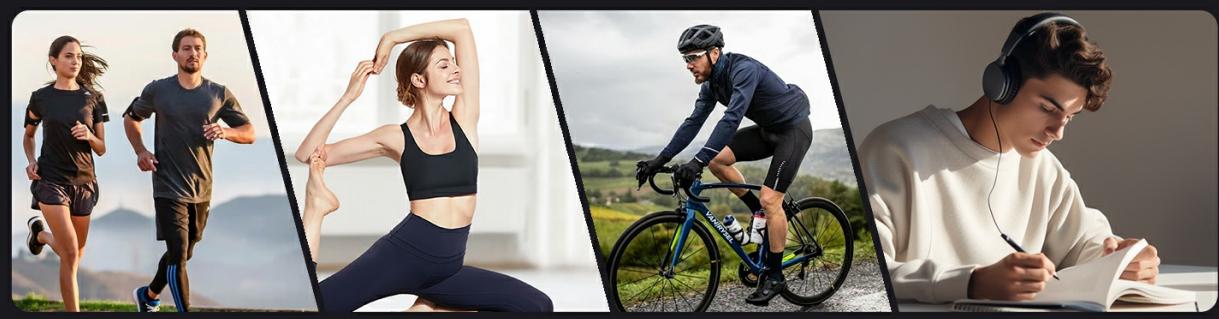

4.7 Other Functions

- **E-books:** Supports TXT format. Tap the "E-book" icon to read.
- **Videos:** Supports AMV/AVI formats. Tap the "Video" icon to watch.
- **Photos:** View images by tapping the "Photos" icon.
- **Alarm/Stopwatch:** Access these tools from the main menu.

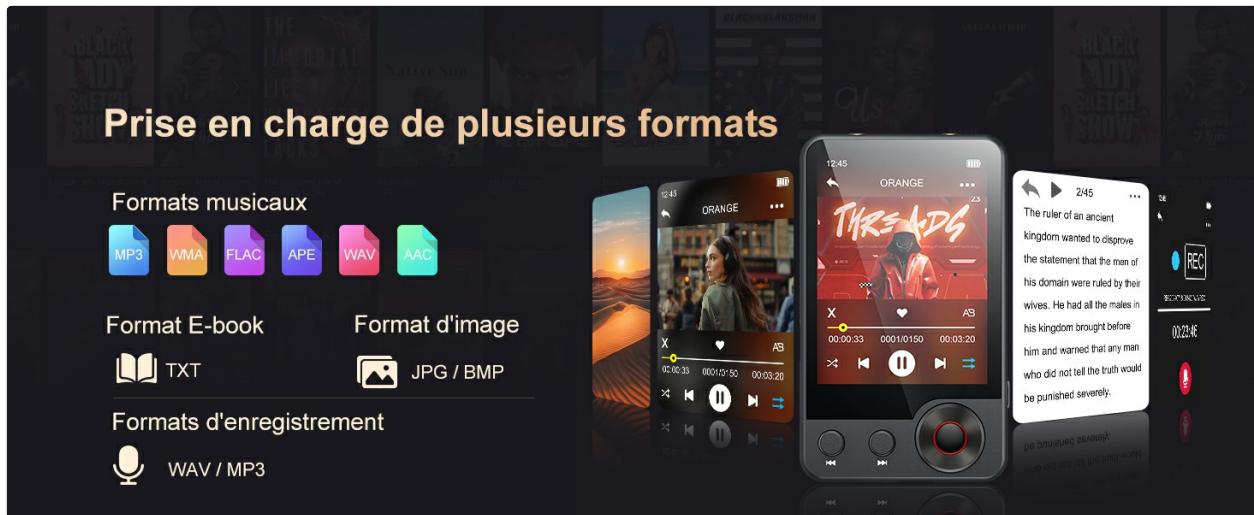


Image: Multifunction display of the Oilsky A55 MP3 Player.

5. MAINTENANCE

5.1 Cleaning

Wipe the device with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the screen or casing.

5.2 Battery Care

- Avoid exposing the device to extreme temperatures (hot or cold).
- Do not allow the battery to fully discharge for extended periods.
- Charge the device regularly, even if not in frequent use, to maintain battery health.

6. TROUBLESHOOTING

Common Issues and Solutions

Problem	Solution
Device does not turn on.	Ensure the device is charged. Connect it to a charger for at least 10 minutes before attempting to power on again. If unresponsive, use a pin to press the Reset button.

Problem	Solution
Cannot connect to Bluetooth device.	<ul style="list-style-type: none"> Ensure Bluetooth is enabled on both the MP3 player and the target device. Make sure the target device is in pairing mode. Keep devices within close range (typically 10 meters). <i>Remember: The MP3 player cannot pair with mobile phones.</i>
No sound from headphones/speaker.	<ul style="list-style-type: none"> Check volume levels on both the MP3 player and connected audio device. Ensure headphones are properly plugged into the jack. If using Bluetooth, verify successful pairing.
Files not appearing on the device.	<ul style="list-style-type: none"> Ensure files are in supported formats (e.g., MP3 for music, AMV/AVI for video, TXT for e-books). Verify files were transferred to the correct folders on the device. Try refreshing the media library if available in settings.

7. SPECIFICATIONS

Feature	Detail
Brand	Oilsky
Model Number	A55
Color	Black
Screen Size	2.4 Inches
Display Technology	LCD
Connectivity Technology	Bluetooth, USB
Bluetooth Version	5.3
Memory Storage Capacity	128 GB (Internal)
Compatible Devices	Earphones, Speaker
Supported Audio Formats	MP3, WMA, APE, FLAC, WAV, AAC
Supported Video Formats	AMV, AVI
Supported E-book Format	TXT
Rechargeable Battery	Yes
Item Weight	89 Grams
Dimensions	3.32 x 1.98 x 0.46 inches (approx.)

8. WARRANTY AND SUPPORT

8.1 Warranty Information

Please refer to the warranty card included with your product or contact Oilsky customer service for detailed warranty information. Keep your proof of purchase for any warranty claims.

8.2 Customer Support

For technical assistance, troubleshooting, or general inquiries, please visit the official Oilsky brand store or contact their customer support. You can find more information at the [Oilsky Brand Store](#).

© 2025 Oilsky. All rights reserved.