

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Hasbro](#) /

› [Hasbro Furby DJ Furblets Rain-Bow-Cat Mini Friend \(Model G1783\) - Instruction Manual](#)

Hasbro G1783

Hasbro Furby DJ Furblets Rain-Bow-Cat Mini Friend (Model G1783) - Instruction Manual

Brand: Hasbro | Model: G1783

INTRODUCTION

The Furby DJ Furblets Rain-Bow-Cat is a small, interactive plush friend designed to bring joy and entertainment. This manual provides detailed instructions on how to operate, maintain, and ensure the safe use of your Furby DJ Furblets.



Image: The Furby DJ Furblets Rain-Bow-Cat Mini Friend, showcasing its vibrant colors and extendable body.

PACKAGE CONTENTS

- DJ Furblets Main Unit (Rain-Bow-Cat)
- Instruction Manual
- 3 LR44 Button Cell Batteries (demo batteries included)



Image: The product packaging, highlighting the included items and important safety warnings.

SETUP

Battery Installation

1. Locate the battery compartment on the underside of the DJ Furblets unit.
2. Using a small screwdriver (not included), open the battery compartment cover.
3. Insert three (3) LR44 button cell batteries, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.
5. Dispose of used batteries immediately and safely.

WARNING: This product uses button cell batteries. If swallowed, button cell batteries can cause internal chemical burns in as little as two hours and can lead to death. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

OPERATING INSTRUCTIONS

Basic Interactions

- **Stretching the Body:** Gently pull the Furblets' body to extend it. This action triggers music and sounds, with the tempo comically speeding up.
- **Retracting the Body:** Press behind the Furblets' ears to make its extended body retract to its original size, similar to a measuring tape.
- **Heart Button:** Press the heart button on the Furblets to play songs and hear various Furby language phrases and fun munching sounds.
- **Petting:** Gently pet the Furblets to elicit happy sounds and reactions.
- **Shaking:** Shake the Furblets to activate different sounds and movements.
- **Upside Down:** Turning the Furblets upside down may cause it to react with playful grumbling or other unique responses.

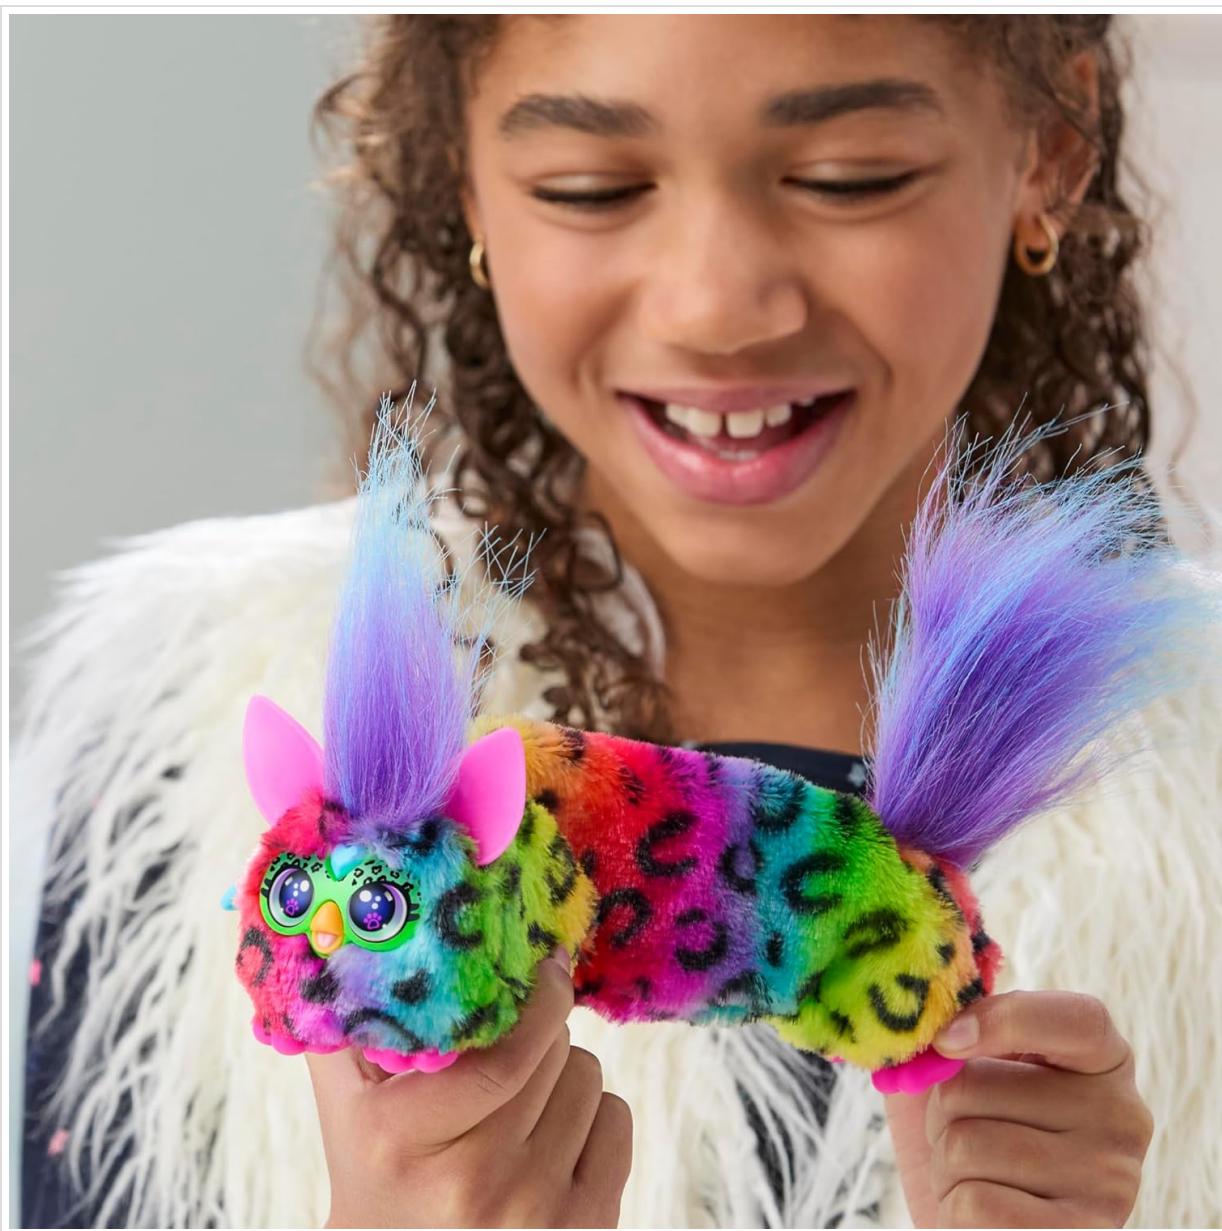


Image: A child engaging with the Furby DJ Furblets, demonstrating its interactive nature.

Interactive Play

The Furby DJ Furblets is designed to be a unique friend. Its reactions and sounds are varied, encouraging continuous interaction. The more you play and interact, the more expressions and responses it will show.



Image: Children playing with multiple Furby DJ Furblets, highlighting the variety and social play aspect.

Portability

Your Furby DJ Furblets comes with a clip, allowing you to attach it to your bag or backpack. This makes it easy to carry your little 'Nu-iaa' (friend in Furby language) wherever you go.



Image: Furby DJ Furblets attached to a backpack, illustrating its clip-on feature for on-the-go fun.

MAINTENANCE

Cleaning Instructions

To clean your Furby DJ Furblets, gently wipe the surface with a soft, dry cloth. Do not immerse the toy in water or use harsh cleaning agents, as this may damage the electronic components.

TROUBLESHOOTING

- No Sound/Movement:** Check if the batteries are correctly installed and not depleted. Replace with fresh LR44 batteries if necessary.
- Unexpected Behavior:** If the Furblets exhibits unusual behavior, try removing and reinserting the batteries to reset the device.
- Not Responding:** Ensure you are interacting with the designated touchpoints (body stretch, ears, heart button).

SPECIFICATIONS

Product Number	G1783
Quantity	1
Battery Use	Yes
Batteries Included	Yes (demo batteries)
Main Material	Plastic
Target Gender	Unisex
Manufacturer Recommended Age	6 years and up
Release Date	2025/10/3
Language	English
Product Model Number	G1783
Product Dimensions	12.4 x 6.8 x 11.4 cm; 120 g
ASIN	B0DNFPG9C9
First Available on Amazon.co.jp	2025/7/23

OFFICIAL PRODUCT VIDEOS

Video: How to Interact with Furblets. This video demonstrates various ways to play and engage with your Furblets toy.

Video: Furby Furblets Interactive Play. Watch how Furby Furblets respond to different interactions and sounds.

Video: 360-Degree Product View. A comprehensive view of the Furby DJ Furblets from all angles.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the contact details provided on the product packaging or visit the official Hasbro website. Keep your purchase receipt as proof of purchase.

SAFETY INFORMATION

WARNING: Button Cell Batteries

- This product uses button cell batteries.
- Swallowing button cell batteries can cause severe internal chemical burns in as little as two hours and can lead to death.
- Keep new and used batteries away from children.
- If you suspect a battery has been swallowed or placed inside any part of the body, seek immediate medical attention.
- Dispose of used batteries immediately and safely according to local regulations.

For detailed safety instructions, please refer to the full instruction manual included with your product.

