

Play-Doh G1615

Play-Doh Little Bakery Playset Instruction Manual

Model: G1615

[Included](#) [Setup](#) [Operation](#) [Introduction](#) [Safety Information](#) [What's](#)
[Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

The Play-Doh Little Bakery Playset provides a creative and engaging experience for children aged 3 and up. This set allows aspiring bakers to create various pretend sweet treats using Play-Doh modeling compound and specialized tools. It encourages imaginative play and fine motor skill development.

2. SAFETY INFORMATION

WARNING: CHOKING HAZARD – Small parts may be generated. Not for children under 3 years. Adult supervision is recommended during play.

- Play-Doh compound is non-toxic but not intended for consumption.
- Contains wheat. Individuals with wheat allergies may have an allergic reaction.
- Keep Play-Doh away from carpets and fabrics. If Play-Doh gets on carpet or fabric, let it dry completely, then scrape it off and vacuum.

3. WHAT'S INCLUDED

Your Play-Doh Little Bakery Playset includes the following components:

- Various food molds and cutters (e.g., cookie cutters, cake stamper, cupcake mold, ice cream sandwich mold)
- 6 cans of Play-Doh Brand Modeling Compound (total 12 oz/340 g) in assorted colors (purple, pink, orange, brown, tan, and white).



Image: All components of the Play-Doh Little Bakery Playset.

4. SETUP

1. **Unpack Contents:** Carefully remove all items from the packaging. Ensure all listed components are present.
2. **Prepare Play Area:** Choose a clean, flat, and washable surface for play. Play-Doh can stick to carpets and fabrics.
3. **Open Play-Doh Cans:** Twist and pull the lids off the Play-Doh compound cans. The compound is ready for immediate use.



Image: Play-Doh Little Bakery Playset packaging.

5. OPERATING INSTRUCTIONS

Follow these steps to create various pretend bakery treats:

1. **Select Play-Doh:** Choose a color of Play-Doh compound from the included cans.
2. **Prepare Compound:** Knead the Play-Doh in your hands to soften it. This makes it easier to mold and shape.
3. **Use Molds and Cutters:**
 - **For Stampers/Molds:** Press a piece of Play-Doh firmly into the desired mold. Ensure it fills all cavities. Carefully remove the molded shape.
 - **For Cutters:** Flatten a piece of Play-Doh with your hands or a rolling motion. Place a cutter over the flattened Play-Doh and press down firmly. Lift the cutter to reveal the cut shape.
4. **Decorate Creations:** Use smaller pieces of Play-Doh to add details like frosting, sprinkles, or fillings to your pretend treats. You can mix colors to create new shades.
5. **Assemble Treats:** Combine different molded pieces to create complex bakery items, such as layered cakes or ice cream sandwiches.



Image: Demonstrating Play-Doh molding and various creations.



Image: Examples of Play-Doh bakery creations and tools.

6. MAINTENANCE

- **Storing Play-Doh:** Always return Play-Doh compound to its airtight container after use. This prevents it from drying out. If the compound becomes a little dry, add a few drops of water and knead it to restore its softness.
- **Cleaning Tools:** Wash all plastic tools and molds with warm water and mild soap after each use. Allow them to air dry completely before storing.
- **Storage:** Store the playset and all its components in a clean, dry place away from direct sunlight or extreme temperatures.

7. TROUBLESHOOTING

Problem	Solution
Play-Doh is dry or crumbly.	Add a few drops of water to the Play-Doh and knead it thoroughly. Repeat until desired consistency is achieved. Ensure lids are tightly sealed after use.

Problem	Solution
Play-Doh stuck to surfaces.	Allow the Play-Doh to dry completely on the surface. Once dry, it can usually be scraped off or vacuumed. For fabrics, use a stiff brush.
Molds are difficult to clean.	Soak molds in warm, soapy water for a few minutes to loosen any stuck Play-Doh. Use a small brush or toothpick to remove residue from intricate areas.

8. SPECIFICATIONS

- **Brand:** Play-Doh
- **Model Number:** G1615
- **Age Range:** 3+ Years
- **Material:** Plastic (tools), Play-Doh Modeling Compound (contains wheat)
- **Total Play-Doh Weight:** 12 oz (340 g)
- **Included Play-Doh Colors:** Purple, Pink, Orange, Brown, Tan, White
- **Item Dimensions:** Approximately 7.01 x 7.99 x 2.64 inches (packaging)
- **Item Weight:** 0.43 Kilograms
- **Assembly Required:** No
- **Batteries Required:** No

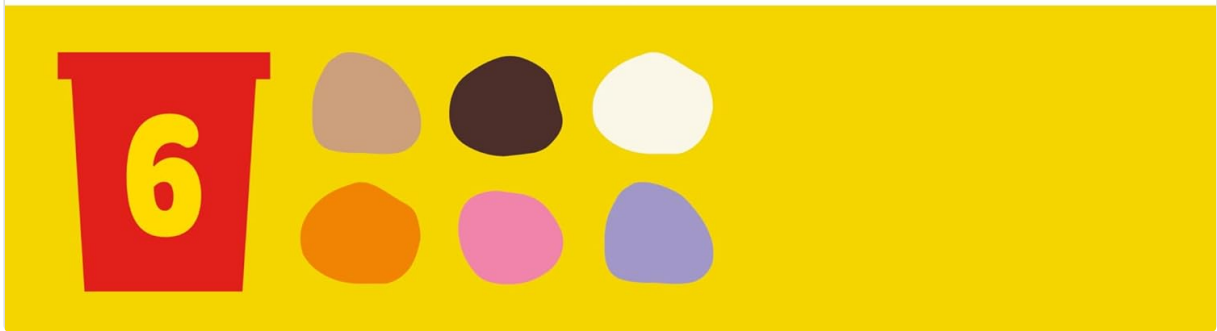


Image: Included Play-Doh colors.

9. WARRANTY AND SUPPORT

For information regarding warranty, product support, or to view other Play-Doh products, please visit the official Play-Doh brand store or contact Hasbro customer service.

Official Play-Doh Store: [Visit the Play-Doh Store on Amazon](#)

For additional support, refer to the manufacturer's website or contact their customer service department directly.