

[Manuals.plus](#) /

> [Furby](#) /

> Furby DJ Furbles Kitt-Ee-Luv Electronic Plush Toy Instruction Manual

Furby G1785

Furby DJ Furbles Kitt-Ee-Luv Electronic Plush Toy Instruction Manual

Model: G1785

Instructions	Introduction	Safety Information	Setup	Operating
Maintenance	Troubleshooting	Specifications	Warranty & Support	

1. INTRODUCTION

The Furby DJ Furbles Kitt-Ee-Luv is a mini electronic plush toy designed for interactive play. This guide provides essential information for setting up, operating, and maintaining your Furbles to ensure a fun and safe experience.



Figure 1: The Furby DJ Furbles Kitt-Ee-Luv electronic plush toy.

2. SAFETY INFORMATION

WARNING: Small parts may be generated. Not for children under 3 years. A swallowed button cell or coin battery can cause internal chemical burns in as little as 2 hours.

- Always supervise young children during play.
- Keep batteries out of reach of children. If swallowed, seek immediate medical attention.
- Do not attempt to open or modify the toy's electronic components.
- Dispose of batteries properly according to local regulations.

3. SETUP

3.1 Unboxing

Your Furby DJ Furblets Kitt-Ee-Luv comes ready to use out of the box. Carefully remove the toy and any included accessories from its packaging.



Figure 2: Furby DJ Furblets Kitt-Ee-Luv packaging, highlighting safety information.

3.2 Battery Installation

The Furblet requires 3 LR44 (A76) button cell batteries, which are included and pre-installed. If replacement is needed:

1. Locate the battery compartment on the underside of the toy.
2. Using a small Phillips-head screwdriver, loosen the screw and open the battery cover.
3. Remove the old batteries and insert three new LR44 (A76) batteries, ensuring correct polarity (+/-).
4. Replace the battery cover and tighten the screw.

4. OPERATING INSTRUCTIONS

4.1 Basic Interaction

Your Kitt-Ee-Luv Furblet is designed for interactive play with various sounds and movements.

- **Press the Heart Gem:** Pressing the heart gem on its forehead will play music or Furbish phrases.
- **Stretch the Body:** Gently stretch the Furblet's body to activate fun sound effects. The music or voice will hilariously speed up as it stretches longer.
- **Retract the Body:** Press the button located behind its ear to retract the Furblet back to its original compact size.
- **Feeding Noises:** The mouth makes silly feeding noises and sound effects.



Figure 3: Stretching the Kitt-Ee-Luv Furblet to activate sound effects.

4.2 Interacting with Other Furby Friends

The Kitt-Ee-Luv Furblet can interact with other DJ Furblets and larger Furby toys (sold separately). When placed near each other, they will sing and interact, enhancing the play experience.



Figure 4: Multiple Furblets interacting together.

4.3 Using the Keychain Clip

The included clip allows you to attach your Furblet to a bag, backpack, or stroller, making it easy to take your mini friend on the go. The clip is removable.



Figure 5: Furblets attached to a backpack using the keychain clip.

4.4 Product Overview Video

Watch this official video for a comprehensive overview of the DJ Furblets features and interactions.

Video 1: Official overview of the DJ Furblets Mini Electronic Plush Toy, demonstrating its various features and interactive capabilities.

5. MAINTENANCE

5.1 Cleaning

To clean your Furblet, gently wipe the surface with a damp cloth. Do not immerse the toy in water or use harsh cleaning agents, as this may damage the electronic components.

5.2 Storage

Store your Furblet in a cool, dry place away from direct sunlight when not in use. If storing for an extended period, it is recommended to remove the batteries to prevent leakage.

6. TROUBLESHOOTING

If your Furblet is not functioning as expected, please refer to the following common issues and solutions:

- **No Sound/Intermittent Sound:**
 - Check if the batteries are correctly installed and not depleted. Replace if necessary.
 - Ensure there is no obstruction around the speaker.
- **Not Stretching/Retracting:**
 - Ensure the mechanism is not jammed by foreign objects.
 - Gently try to stretch and retract manually to see if it frees up.
- **Interactions with other Furblets not working:**
 - Ensure both Furblets have fresh batteries and are turned on.
 - Place them in close proximity to each other.

If problems persist, please contact customer support (see Section 8).

7. SPECIFICATIONS

Feature	Detail
Brand	Furby
Model Name	DJ FURBLET KITT EE
Model Number	G1785
Character	Kitt-Ee-Luv
Color	Kitt-ee-luv (Pink Cheetah Print)
Item Type	Plush, Interactive Gaming Figure
Material	Plastic, Cotton Plush
Dimensions (L x W x H)	4.88" x 2.68" x 4.49"
Item Weight	0.12 Kilograms
Age Range	6+ Years
Power Source	Battery
Batteries Required	3 LR44 (A76) batteries (included)
Included Components	DJ Furblets toy and clip

8. WARRANTY & SUPPORT

8.1 Warranty Information

For specific warranty details, please refer to the documentation included with your purchase or visit the official Hasbro

website. Warranty terms may vary by region and retailer.

8.2 Customer Support

If you have any questions, concerns, or require assistance with your Furby DJ Furbles Kitt-Ee-Luv, please contact Hasbro customer service through their official website or the contact information provided on the product packaging.

Official Furby Store: [Visit the Furby Store on Amazon](#)