

[Manuals.plus](#) /

› [Hasbro](#) /

› Hasbro Furby DJ Furblets Can-Dee Swirl Mini Friend Instruction Manual G1782

Hasbro G1782

Hasbro Furby DJ Furblets Can-Dee Swirl Mini Friend Instruction Manual

Brand: Hasbro | Model: G1782

INTRODUCTION

The DJ Furblets Can-Dee Swirl is a small, unique friend from the Furby family. This electronic plush toy features extendable limbs, a variety of fun music, sounds, and Furbish phrases designed to enhance playtime. It's an interactive companion that responds to touch and movement, offering engaging play for children aged 6 and up.

This manual provides essential information for setting up, operating, and maintaining your DJ Furblets Can-Dee Swirl to ensure a safe and enjoyable experience.

IMPORTANT SAFETY WARNINGS

Button Cell Battery Warning: This product uses button cell batteries. Swallowing a button cell battery can cause severe internal chemical burns in as little as two hours and may lead to death. Keep new and used batteries away from children. If you suspect a battery has been swallowed or placed inside any part of the body, seek immediate medical attention.

Dispose of used batteries immediately and safely. Always ensure the battery compartment is securely fastened. If it does not close securely, stop using the product and keep it away from children.



Image: Back of the Furby DJ Furbblets packaging, highlighting the button cell battery warning. The warning text is visible, advising against ingestion and proper disposal of batteries.

PACKAGE CONTENTS

- DJ Furbblets Can-Dee Swirl main unit
- Instruction Manual
- 3 x LR44 Button Cell Batteries (demo batteries included)

SETUP

Battery Installation

1. Locate the battery compartment on the underside of the DJ Furbblets unit.
2. Using a small Phillips head screwdriver (not included), loosen the screw on the battery compartment cover.
3. Remove the cover and insert 3 new LR44 button cell batteries, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and tighten the screw securely. Ensure the cover is firmly closed to prevent battery access by children.

Initial Power On

Once batteries are installed, your DJ Furblets Can-Dee Swirl is ready to play. There is no separate power switch; the toy activates upon interaction.

OPERATING INSTRUCTIONS

Interactive Features

- **Extendable Limbs:** Gently pull on the limbs to extend them. The toy will respond with music or Furbish phrases. The tempo of sounds and songs may comically speed up as the limbs are extended.
- **Retracting Limbs:** Press near the ears of the DJ Furblets. The extended limbs will retract back to their original size, similar to a measuring tape.
- **Heart Button:** Locate and press the heart button on the toy. This will trigger the toy to play various songs or make fun munching sounds.
- **Furbish Language:** The DJ Furblets primarily communicates in Furbish, its unique language. Listen closely to discover its different phrases and sounds.

Portability

The DJ Furblets Can-Dee Swirl comes with a convenient clip. Attach it to your bag, backpack, or other items to take your little companion with you wherever you go. The clip is detachable.



Image: A young girl happily wearing a backpack adorned with multiple colorful Furby DJ Furblets, demonstrating their portability with the attached clips.



Image: A young girl smiling while holding the Furby DJ Furbblets Can-Dee Swirl. The toy's colorful, extendable body is visible, showcasing one of its primary interactive features.



Image: Three different Furby DJ Furblets, including the Can-Dee Swirl model, are displayed on a table. Musical notes are depicted floating around them, indicating their sound and music features, while a girl observes them.

MAINTENANCE

Cleaning Instructions

To clean your DJ Furblets Can-Dee Swirl, gently wipe its surface with a soft, dry cloth. Do not immerse the toy in water or use harsh cleaning agents, as this may damage the electronic components.

TROUBLESHOOTING

Toy Not Responding / Becoming Unresponsive

- **Check Batteries:** Ensure the LR44 button cell batteries are correctly installed and not depleted. Replace with fresh batteries if necessary.
- **Reset:** If the toy becomes unresponsive, try removing and reinserting the batteries to perform a soft reset.
- **Interaction:** The DJ Furblets thrives on interaction. If left unattended for too long, it may enter a sleep mode or become less

responsive. Engage with it by extending its limbs, pressing its heart button, or gently pressing near its ears to re-activate it.

SPECIFICATIONS

Model Number	G1782
Brand	Hasbro (Furby)
Recommended Age	6 years and up
Power Source	3 x LR44 Button Cell Batteries
Main Material	Plastic
Product Dimensions	12.4 x 6.8 x 11.4 cm
Product Weight	120 g

WARRANTY AND SUPPORT

For warranty information, product support, or to purchase replacement parts, please refer to the contact information provided on the product packaging or visit the official Hasbro website. Keep your purchase receipt as proof of purchase.

RELATED VIDEOS

Furby DJ Furblets Introduction

Your browser does not support the video tag.

Video: A short promotional video from Hasbro Japan G.K. showcasing the Furby DJ Furblets, highlighting its interactive features and playful nature. This video is 29 seconds long.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question