

[Manuals.plus](#) /

› [Voltas Beko](#) /

› Voltas Beko 6 kg Semi-Automatic Top Load Washing Machine User Manual

Voltas Beko WTT60UNX/OK3R0R0W01

Voltas Beko 6 kg Semi-Automatic Top Load Washing Machine

MODEL: WTT60UNX/OK3R0R0W01

Introduction

Welcome to your new Voltas Beko semi-automatic washing machine. This manual provides essential information for safe operation, proper installation, effective maintenance, and basic troubleshooting. Please read it thoroughly before using the appliance.

This 6 kg capacity washing machine is designed for households of 3-4 members, featuring a 5-star energy rating for efficiency. Key technologies include Special Pulsator Wash for tough stain removal and Air Dry for faster drying, all controlled via intuitive knobs.

Safety Information

Always adhere to the following safety guidelines to prevent injury or damage to the appliance.

- Read all instructions before use and retain them for future reference.
- Ensure the washing machine is connected to a properly grounded electrical outlet (230 Volts).
- Do not operate the machine with a damaged power cord or plug.
- Keep children and pets away from the appliance during operation.
- Never reach into the machine while it is operating or moving.
- Disconnect the power supply before performing any maintenance or cleaning.
- Do not wash items that are soiled with flammable substances.

Setup and Installation

Unpacking

1. Carefully remove all packaging materials.
2. Check for any damage during transit. Contact your dealer immediately if damage is found.
3. Ensure all included components (Washing Machine, Inlet/Drain Hose, Safety Cover) are present.

Placement

1. Place the washing machine on a firm, level surface to minimize vibration and noise.
2. Ensure adequate ventilation around the appliance.
3. Avoid placing the machine in direct sunlight or in areas with high humidity.

Connecting Water and Drain Hoses

1. Connect the inlet hose to a cold water tap and securely fasten it to the machine's water inlet.
2. Position the drain hose to allow for proper water drainage, ensuring it is not kinked or blocked.

Electrical Connection

1. Plug the power cord into a dedicated 230 Volt, 50 Hz, grounded electrical outlet.
2. Do not use extension cords or adapters.

VOLTAS beko
A TATA Product

Capacity 6.0 kg

(Suitable for 3-4 members)

Special Pulsator

Air Dry

Rust-free Body

5 Star Energy Rating

Compact Size

Lint Filter

5 Year Motor Warranty

Figure 1: Front view of the Voltas Beko semi-automatic washing machine, illustrating its compact design and top-load access.



Figure 2: Rear view of the washing machine, detailing the connections for water inlet and drain hoses.

Operating Instructions

Control Panel Overview

The washing machine features intuitive knob controls for easy operation:

- **Wash Timer:** Sets the duration for the wash cycle.
- **Program/Drain Selector:** Selects the wash program (Normal, Heavy Duty) or activates the drain function.
- **Spin Timer:** Sets the duration for the spin cycle.



Figure 3: Top view of the washing machine, showing the control panel with its three rotary knobs.

Washing Process

1. Load clothes into the wash tub, ensuring not to overload.
2. Add appropriate amount of detergent to the detergent dispenser.
3. Fill the wash tub with water to the desired level.
4. Select the desired wash program (Normal or Heavy Duty) using the Program/Drain Selector.
5. Set the Wash Timer for the required duration. The machine will begin washing.

VOLTAS
beko

A TATA Product



Air Dry

Removes excess moisture from clothes
using additional air vents.



Figure 4: Close-up of the wash tub, highlighting the Special Pulsator designed for effective cleaning.

Rinsing Process

1. After the wash cycle, drain the water by turning the Program/Drain Selector to 'Drain'.
2. Refill the tub with clean water for rinsing.
3. Run a short wash cycle (e.g., 2-3 minutes) to rinse the clothes.
4. Drain the rinse water. Repeat if necessary.

Spinning Process (Air Dry)

1. Transfer the rinsed clothes to the spin tub.
2. Ensure the safety cover is properly placed over the clothes in the spin tub.
3. Set the Spin Timer for the desired duration. The machine will begin spinning, utilizing the Air Dry feature to remove excess moisture.

VOLTAS
beko

A TATA Product



Figure 5: The Air Dry feature, which uses additional air vents to remove moisture during the spin cycle.

Maintenance

Regular maintenance ensures optimal performance and longevity of your washing machine.

Cleaning the Lint Filter

1. After each wash, remove the lint filter located inside the wash tub.
2. Clean accumulated lint, threads, and other debris under running water.
3. Reinsert the clean lint filter securely.

VOLTAS
beko

A **TATA** Product



Figure 6: The lint filter, which efficiently collects loose threads and debris during washing.

General Cleaning

1. Wipe the exterior of the machine with a soft, damp cloth. Avoid abrasive cleaners.
2. Clean the interior of the tubs periodically to prevent residue buildup.

Rust-free Body Care

The washing machine features a durable plastic body that is non-corrosive and rust-proof, requiring minimal special care. Simply keep it clean and dry.

VOLTAS
beko

A TATA Product



*T&C apply.

Figure 7: Illustration highlighting the rust-free plastic body construction for enhanced durability.

Troubleshooting

Before contacting customer service, refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Machine does not start	Power cord not plugged in; Power outage; Lid not closed properly.	Check power connection; Verify power supply; Ensure lids are fully closed.
Water does not fill	Water tap closed; Inlet hose kinked or blocked.	Open water tap; Straighten or clear inlet hose.
Water does not drain	Drain hose kinked or blocked; Drain selector not set to 'Drain'.	Straighten or clear drain hose; Set Program/Drain Selector to 'Drain'.

Problem	Possible Cause	Solution
Excessive vibration/noise	Machine not level; Overloaded or unbalanced load.	Adjust machine to be level; Redistribute laundry evenly.

Specifications

Detailed technical specifications for the Voltas Beko WTT60UNX/OK3R0R0W01 washing machine.

Feature	Value
Brand	Voltas Beko
Model Number	WTT60UNX/OK3R0R0W01
Capacity	6 Kilograms
Product Dimensions (D x W x H)	44D x 74.5W x 91H Centimeters
Item Weight	18100 Grams
Energy Star Rating	5 Star
Operation Mode	Semi Automatic
Access Location	Top Load
Special Features	Air Dry, Compact, Dry Spin Only, High Efficiency, Wings Pulsator Wash Technology
Controls Type	Knob
Voltage	230 Volts
Installation Type	Freestanding
Laundry Appliance Drum Material	Plastic
Included Components	Washing Machine, Inlet/Drain Hose, Safety Cover

VOLTAS
beko

A **TATA** Product



Lint Filter

Efficiently collects loose threads, lint, and buttons from the water.

Figure 8: Dimensions of the washing machine and its 5-star energy efficiency rating.

Warranty and Support

Warranty Information

This Voltas Beko washing machine comes with a manufacturer's warranty:

- **1 year** on the entire product.
- **5 years** on the motor (Terms & Conditions Apply).

For warranty claims or service, please provide the product's model name and seller's details from your invoice.

Customer Support

For any queries, assistance, or service requests, please contact Voltas Beko customer support:

- **Telephone:** 9818994444 / 18605994444
- **WhatsApp:** 9818994444
- **E-mail:** wecare@voltasbeko.com

The service center will schedule a convenient slot for your service request.