

- Manuals.plus /
- › Effireli /
- › Effireli RC4390 Replacement Remote Control User Manual

Effireli YK-RC4390

Effireli RC4390 Replacement Remote Control User Manual

Model: YK-RC4390

INTRODUCTION

This manual provides instructions for the Effireli RC4390 Replacement Remote Control. This remote is designed to operate various VESTEL, Bush, and Hyundai TV models without the need for programming or complex setup. Simply insert batteries and begin operation.

PRODUCT OVERVIEW

The following image illustrates the Effireli RC4390 Replacement Remote Control and its primary buttons.



Image: Effireli RC4390 Replacement Remote Control. This image displays the full remote, showing the power button at the top, number pad, volume and channel controls, navigation pad with OK button, and dedicated buttons for Netflix and YouTube at the bottom.

Button Functions:

- **Power Button:** Located at the top, used to turn the TV on or off.
- **Number Pad (0-9):** For direct channel input or numerical selections.
- **LANG. Button:** Likely for language or audio track selection.
- **Volume Control (+V-):** Adjusts the audio volume up or down.
- **Mute Button:** Silences the TV audio.
- **Home Button (Red House Icon):** Accesses the TV's main menu or smart hub.
- **Channel Control (P^P):** Changes channels up or down.
- **Navigation Pad (Arrows & OK):** Used to navigate menus and confirm selections.
- **BACK Button:** Returns to the previous screen or menu.
- **EXIT Button:** Exits the current menu or application.
- **Netflix Button:** Direct access to the Netflix application.
- **YouTube Button:** Direct access to the YouTube application.
- **Colored Buttons (Red, Green, Yellow, Blue):** Functionality varies by TV model and context, often used for teletext or specific smart TV features.
- **Media Control Buttons (Rewind, Play/Pause, Fast Forward, Record, Play, Stop):** Controls media playback.

SETUP

Battery Installation:

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert two AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover securely.

Note: This replacement remote control requires no programming or complex setup. Once batteries are installed, it is ready for immediate use with compatible TV models.

OPERATING INSTRUCTIONS

To operate your TV with the Efireli RC4390 remote, ensure there is a clear line of sight between the remote's infrared emitter and the TV's IR receiver.

- **Power On/Off:** Press the **Power** button once.
- **Volume Adjustment:** Press the **V+** button to increase volume or **V-** to decrease volume.
- **Channel Change:** Press the **P^** button to go to the next channel or **P** button to go to the previous channel.
- **Direct Channel Input:** Use the **Number Pad (0-9)** to enter channel numbers directly.
- **Menu Navigation:** Use the **Arrow buttons** (Up, Down, Left, Right) to navigate through on-screen menus. Press **OK** to confirm a selection.
- **Accessing Smart Features:** Press the dedicated **Netflix** or **YouTube** buttons to launch these applications directly (requires internet connection on your TV).

Compatible Models:

This remote is compatible with a wide range of TV models, including but not limited to:

D32F289M4CWII	D49U700M4CWH	D43U297N4CWH
40DTF531	L24H472F4CWV-WI	D32H2899NH4CWI
TE43292S31Y2P	ODL65650U-TIB	ODL43650UV-TIB
ODL40650UV-TIB	ODL65750UV-TI	ODL55750UV-TIB
ODL32750FV-TIB	ODL32653FV-TIW	OODL406650F
ODL32541H-DIB	ODL49650UV-TIB	D40U297M4CW
D50U293N4CWH	XU43E512	JT-55UBS300
D32H289N4CWD	D43U600M4CWII	D40U298N4CWH
SOMNIA24 ESTV	49DTU652	JT-65UBS300
D55U297N4CWH	D50U600M4CWII	L55U405N4CWH
SOMNIA40DSTV	55DTU652	D32H287M4CWI
D43U700M4CWH	TFL 32 SWB17/2	D65U400N4CWH
XU55E512		

Note: If your specific TV model number is not listed or your original remote appears different, please contact customer support to confirm compatibility.

MAINTENANCE

Battery Replacement:

When the remote control's range decreases or buttons become unresponsive, it is likely time to replace the batteries. Follow the battery installation steps outlined in the "Setup" section.

Cleaning:

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or immerse the remote in water.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly installed batteries.	Replace batteries with new ones, ensuring correct polarity (+/-).
Remote has short range or intermittent response.	Weak batteries; Obstruction between remote and TV; Remote not pointed directly at TV's IR receiver.	Replace batteries. Remove any obstructions. Ensure direct line of sight to the TV's IR receiver.
Certain buttons do not work.	Button malfunction; TV model incompatibility for specific advanced functions.	Ensure the remote is compatible with your specific TV model. If basic functions fail, contact support.
Remote works for some TVs but not mine.	TV model is not compatible with this remote.	Verify your TV model against the list of compatible models. If not listed, contact customer support for assistance.

SPECIFICATIONS

Feature	Detail
Model Number	YK-RC4390
Brand	Effireli
Special Feature	No Programming Required
Max Number of Supported Devices	1 (Television)
Compatible Devices	Television (Various VESTEL, Bush, Hyundai models)
Connectivity Technology	Infrared (IR)
Power Source	2 x AAA Batteries (not included)

WARRANTY AND SUPPORT

The Effireli RC4390 Replacement Remote Control comes with a**30-day money-back guarantee** and a **12-month warranty** covering manufacturing defects. Returns and exchanges are accepted within the warranty period.

For any questions regarding compatibility, troubleshooting, or warranty claims, please contact Effireli customer support. Refer to your purchase documentation for specific contact details or visit the seller's page on Amazon.

Note: If your model number isn't listed in the compatible models section or your original remote looks different, please contact us directly to confirm compatibility before purchase or for assistance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DNFZGQJV>

More documents and user manuals: <https://manuals.plus/>