

[Manuals.plus](#) /

› [Princess](#) /

› Princess Nordic Digital Kitchen Machine and Ice Cream Maker Instruction Manual

Princess 01.220138.01.001

Princess Nordic Digital Kitchen Machine and Ice Cream Maker Instruction Manual

Model: 01.220138.01.001

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, maintenance, and troubleshooting of your Princess Nordic Digital Kitchen Machine and Ice Cream Maker. Please read this manual thoroughly before first use and keep it for future reference.

2. SAFETY INSTRUCTIONS

- Always ensure the appliance is unplugged before assembly, disassembly, or cleaning.
- Do not immerse the motor unit in water or any other liquid.
- Keep hands, hair, clothing, and utensils away from moving parts during operation.
- This appliance is for household use only.
- Supervise children to ensure they do not play with the appliance.
- Do not operate the appliance with a damaged cord or plug.
- Place the appliance on a stable, flat, and dry surface.
- Ensure the appliance is switched off before changing accessories or approaching parts that move in use.

3. PRODUCT OVERVIEW AND COMPONENTS

Familiarize yourself with the various parts of your Princess Nordic Digital Kitchen Machine.



Figure 1: Main unit of the Princess Nordic Digital Kitchen Machine with the 5-liter stainless steel mixing bowl and the separate 1.4-liter ice cream bowl. The machine features a digital display and control knob.



Figure 2: The Princess Nordic Digital Kitchen Machine in operation, demonstrating the whisk attachment mixing ingredients in the stainless steel bowl. The machine's head is tilted back for easy access.



Figure 3: The three primary attachments: a whisk for aerating and whipping, a dough hook for kneading heavy doughs, and a flat beater for mixing batters and creams.

Key Components:

- **Motor Unit:** The main body housing the 1200W motor and digital controls.
- **Mixing Bowl (5L):** Stainless steel bowl for mixing and kneading.
- **Ice Cream Bowl (1.4L):** Separate bowl for preparing ice cream and sorbets.
- **Attachments:** Whisk, Dough Hook, Flat Beater.
- **Splash Guard:** With an opening for adding ingredients during operation.
- **Digital Display:** Shows speed and timer settings.
- **Control Knob:** For adjusting speed and setting the timer.

4. SETUP AND FIRST USE

4.1 Unpacking

1. Carefully remove all components from the packaging.
2. Remove any protective films or stickers.
3. Wash all removable parts (mixing bowl, ice cream bowl, attachments, splash guard) in warm soapy water, rinse thoroughly, and dry completely before first use. The motor unit should only be wiped with a damp cloth.

4.2 Assembly for Mixing

1. Place the motor unit on a stable, flat surface.
2. Press the head-lift button to tilt the motor head upwards.
3. Place the 5-liter stainless steel mixing bowl onto the base and turn clockwise until it locks into place.
4. Select the appropriate attachment (whisk, dough hook, or flat beater) for your recipe. Insert the attachment into the shaft and turn counter-clockwise until it locks.
5. Lower the motor head until it clicks into place.
6. Attach the splash guard by aligning it with the motor head and turning it until it secures over the bowl.

4.3 Assembly for Ice Cream Making

1. Ensure the 1.4-liter ice cream bowl is thoroughly frozen (typically 12-24 hours in a freezer at -18°C or colder).

2. Place the motor unit on a stable, flat surface.
3. Press the head-lift button to tilt the motor head upwards.
4. Place the frozen ice cream bowl onto the base and turn clockwise until it locks into place.
5. Insert the ice cream paddle attachment into the shaft and turn counter-clockwise until it locks.
6. Lower the motor head until it clicks into place.
7. Attach the splash guard.

5. OPERATING INSTRUCTIONS

5.1 General Operation (Mixing/Kneading/Whipping)

1. Ensure the machine is correctly assembled with the 5-liter mixing bowl and desired attachment.
2. Add your ingredients to the mixing bowl.
3. Plug the appliance into a suitable power outlet. The digital display will illuminate.
4. Use the control knob to select one of the 8 available speeds. Start with a lower speed and gradually increase as needed.
5. The digital display allows you to set a timer for precise mixing. Refer to your recipe for recommended mixing times.
6. To stop the machine, turn the control knob to the 'OFF' position or press the stop button if available.
7. Unplug the appliance after use.

5.2 Ice Cream Making

1. Ensure the machine is correctly assembled with the frozen 1.4-liter ice cream bowl and paddle attachment.
2. Turn on the machine to a low speed (e.g., speed 1 or 2).
3. Slowly pour your chilled ice cream mixture into the frozen bowl through the opening in the splash guard.
4. Allow the machine to churn for 15-30 minutes, or until the desired consistency is reached. Churning time may vary based on recipe and ambient temperature.
5. Once churning is complete, turn off the machine and unplug it.
6. Remove the ice cream paddle and transfer the ice cream to an airtight container for further freezing if a firmer consistency is desired.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and hygienic operation of your appliance.

1. Always unplug the appliance before cleaning.
2. Press the head-lift button and remove the attachments and bowls.
3. The stainless steel mixing bowl, ice cream bowl, and all attachments (whisk, dough hook, flat beater, ice cream paddle) are dishwasher safe. Alternatively, wash them in warm soapy water, rinse, and dry thoroughly.
4. Wipe the motor unit and exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or immerse the motor unit in water.
5. Ensure all parts are completely dry before reassembling or storing the appliance.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet faulty; motor head not locked down.	Check power connection; test outlet with another appliance; ensure motor head is fully lowered and locked.
Attachments not mixing properly.	Attachment not correctly installed; too much/too little ingredient.	Ensure attachment is securely locked; adjust ingredient quantity according to recipe.
Machine is excessively noisy.	Overload; unstable surface; internal issue.	Reduce load; ensure machine is on a stable surface. If noise persists, contact support.
Ice cream not freezing.	Ice cream bowl not sufficiently frozen; mixture not chilled; ambient temperature too high.	Ensure ice cream bowl is frozen for 12-24 hours; chill mixture thoroughly before adding; operate in a cool environment.

8. SPECIFICATIONS

- Brand:** Princess
- Model Number:** 01.220138.01.001
- Color:** Beige
- Dimensions (L x W x H):** 39 x 31.5 x 23 cm
- Weight:** 6.5 kg
- Mixing Bowl Capacity:** 5 Liters (Stainless Steel)
- Ice Cream Bowl Capacity:** 1.4 Liters
- Power:** 1200 Watts
- Voltage:** 230 Volts
- Number of Speeds:** 8
- Special Features:** Adjustable Speed Control, Digital Display, Dishwasher Safe Jars (attachments and bowls), BPA-free materials, Anti-slip feet.
- Country of Origin:** China

9. WARRANTY AND SUPPORT

Your Princess Nordic Digital Kitchen Machine and Ice Cream Maker comes with **1-year warranty** on parts, covering manufacturing defects from the date of purchase. Please retain your proof of purchase for warranty claims. For technical support, spare parts, or warranty inquiries, please contact Princess customer service. Contact details can typically be found on the official Princess website or on your product packaging.

Online Resources: For additional recipes, tips, and FAQs, visit the official Princess website:www.princesshome.eu

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DNG1XP35>

More documents and user manuals: <https://manuals.plus/>