

Xiaomi BHR8589GB

Xiaomi Air Fryer Essential 6L

USER MANUAL

Important Safety Instructions

Please read all instructions carefully before using the appliance and retain them for future reference. Improper use can result in personal injury and property damage.

- Always place the air fryer on a stable, heat-resistant surface, away from walls or other appliances to allow for adequate ventilation.
- Do not immerse the main unit, cord, or plug in water or other liquids to prevent electric shock.
- Supervise children closely when the appliance is in use.
- Unplug the air fryer from the outlet when not in use and before cleaning. Allow it to cool completely before handling.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use accessories not recommended by the appliance manufacturer, as this may cause injuries.
- Do not block any ventilation openings.
- Do not touch hot surfaces. Use handles or knobs.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use the appliance for anything other than its intended use.

Product Overview

The Xiaomi Air Fryer Essential 6L is designed for healthier cooking with its advanced air circulation technology. It features intuitive controls for easy operation.



This image displays the front of the Xiaomi Air Fryer Essential 6L. It features two prominent rotary knobs for control: the upper knob for setting the cooking time (0-60 minutes) and the lower knob for adjusting the temperature (160-400°F). A 'WORKING' indicator light is visible to the right of the time knob. The large, white handle for the frying basket is centrally located below the control panel.

Components:

- Main Unit
- Frying Basket
- Time Control Knob
- Temperature Control Knob
- Working Indicator Light
- Air Outlet (rear)

- Power Cord

Setup

1. Unpack the air fryer and all accessories. Remove all packaging materials, stickers, and labels.
2. Wipe the exterior of the main unit with a damp cloth.
3. Clean the frying basket and any removable accessories with hot water, dish soap, and a non-abrasive sponge. Rinse thoroughly and dry completely.
4. Place the air fryer on a stable, level, heat-resistant surface. Ensure there is at least 10 cm (4 inches) of free space around the back and sides of the appliance for proper ventilation.
5. Plug the power cord into a grounded electrical outlet.
6. Before first use, it is recommended to run the air fryer empty for about 10-15 minutes at 200°C (400°F) to burn off any manufacturing residues. A slight odor may be present, which is normal.

Operating Instructions

General Operation:

1. Place ingredients into the frying basket. Do not overfill the basket to ensure even cooking.
2. Slide the frying basket back into the main unit until it clicks into place.
3. Turn the Temperature Control Knob to set the desired cooking temperature (160-400°F).
4. Turn the Time Control Knob to set the desired cooking time (0-60 minutes). The air fryer will begin heating automatically. The 'WORKING' indicator light will illuminate.
5. During cooking, the 'WORKING' light may cycle on and off as the air fryer maintains the set temperature.
6. For some recipes, it may be necessary to shake or flip ingredients halfway through the cooking time. Carefully pull out the basket, shake/flip, and reinsert. The air fryer will resume cooking.
7. When the set time has elapsed, the timer will ring, and the air fryer will automatically shut off.
8. Carefully pull out the frying basket and transfer the cooked food to a plate. Use heat-resistant tongs.
9. Unplug the appliance after use.

Key Features:

- **360° Convection Heating:** Ensures even cooking and crispy results without the need to constantly flip food.
- **1550W High Power:** Rapidly heats up and seals in moisture, reducing cooking time and oil usage.
- **6 Liter Capacity:** Ideal for preparing meals for families, accommodating a variety of dishes.
- **Simple Knob Control:** Effortless operation for setting time and temperature.

Cleaning and Maintenance

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

1. Always unplug the air fryer and allow it to cool completely before cleaning.
2. Wipe the exterior of the main unit with a damp cloth. Do not use abrasive cleaners.
3. Remove the frying basket. Clean the basket and any removable accessories with hot water, dish soap, and a non-abrasive sponge. For stubborn food residues, soak the basket in warm soapy water for about 10-15 minutes.
4. The metal interior is high-temperature resistant and easy to clean. Use a soft brush or sponge to clean the interior cavity.
5. Do not use metal utensils or abrasive cleaning materials on the non-stick coating of the basket, as this can damage

the surface.

6. Ensure all parts are thoroughly dry before reassembling and storing the air fryer.

Troubleshooting

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; power outlet not working; timer not set.	Ensure the power cord is securely plugged into a working outlet. Set the timer to the desired cooking duration.
Food is not cooked evenly.	Basket is overfilled; temperature too low; cooking time too short.	Do not overfill the basket. Increase temperature or cooking time. Shake or flip ingredients halfway through cooking.
White smoke coming from the appliance.	Grease residue from previous use; fatty ingredients.	Clean the basket and interior thoroughly after each use. For fatty foods, place a small amount of water in the bottom of the outer pan to prevent smoke.
Food is not crispy.	Too much moisture in food; not enough oil (if applicable); temperature too low.	Pat food dry before air frying. Lightly coat with oil if desired. Increase temperature or cooking time.

Specifications

Feature	Detail
Brand	Xiaomi
Model	Xiaomi Air Fryer Essential 6L
Capacity	6 Liters
Output Wattage	1500 Watts
Voltage	220 Volts
Material	Plastic (Exterior), Metal (Interior)
Dimensions (D x W x H)	33.8D x 29.2W x 31.8H centimetres
Special Features	Dual Zone Features, Temperature Control, Stain Resistant, Automatic Shut-Off
Recommended Uses	Roast, Bake, Defrost, Reheat, Dehydrate

Warranty and Support

For warranty information, please refer to the warranty card included with your product or visit the official Xiaomi website. Keep your purchase receipt as proof of purchase.

If you encounter any issues or require technical assistance, please contact Xiaomi customer support through their official channels. Details can typically be found on the product packaging or the Xiaomi global support website.

Online Support: www.mi.com/global/support/

Model: BHR8589GB