

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Tiny Love](#) /

› [Tiny Love 5-in-1 Here I Grow Stationary Activity Center Instruction Manual](#)

## Tiny Love WA111HBF

# Tiny Love 5-in-1 Here I Grow Stationary Activity Center Instruction Manual

Model: WA111HBF

## 1. PRODUCT OVERVIEW

The Tiny Love 5-in-1 Here I Grow Stationary Activity Center is designed to support your child's development through various stages. Developed with pediatric physical therapists, this versatile activity center offers over 20 activities and 6 unique developmental toys. It transforms into 5 different modes of use to adapt as your child grows, from an infant activity center to a toddler play table.



Image: The Tiny Love 5-in-1 Here I Grow Stationary Activity Center in its primary stationary mode, featuring various detachable toys and a central seat.

## 2. SAFETY INFORMATION

---

- Always supervise your child while they are using the activity center.
- Do not leave child unattended.
- Ensure all components are securely assembled before each use.
- Do not use if any parts are damaged or missing.
- Maximum weight recommendation: 30 Pounds.
- Keep small parts away from children to prevent choking hazards.
- Periodically check for loose screws, worn parts, or damaged components.

## 3. ASSEMBLY AND SETUP

---

The Tiny Love 5-in-1 Here I Grow Stationary Activity Center is designed for easy assembly without the need for special tools. Follow these steps:

1. Unpack all components and verify against the parts list.
2. Assemble the main frame and legs according to the visual instructions.
3. Insert the central seat into the designated opening. Ensure it clicks securely into place.
4. Attach the detachable toys to the activity tray. Toys are easily attached by pushing up from the bottom and turning to secure.
5. For the electronic piano, ensure 2 AA batteries are inserted correctly (batteries not included).

**Grows with your child!**  
With 5 modes of use, our activity center  
transforms itself to grow with your little one



Image: Front view of the fully assembled activity center, showcasing its structure and toy placement.

#### **4. OPERATING MODES AND USAGE**

This activity center offers 5 versatile modes to grow with your child:

#### 4.1. Detachable Tummy-Time Piano

The electronic musical piano can be detached and used as a stand-alone toy for tummy time. It features various play modes and a wide selection of sounds and music to engage your baby.



360-degree seat allows babies to safely explore from any angle

Image: A baby lying on their stomach, engaging with the detachable electronic piano during tummy time.

#### 4.2. Baby Balance Board

The base of the activity center includes a balance board element. This feature helps little ones strengthen their legs and feet while offering a textured surface for sensory stimulation. It can be used when the activity center is in stationary mode.



Uniquely created selection of toys offer diverse tactile experiences and stimulates babies' senses

Image: A close-up view of a baby's feet on the textured surface of the balance board, located at the base of the activity center.

#### 4.3. Stationary Activity Center

In this mode, your baby can explore over 20 activities and 6 engaging developmental toys from their 360-degree rotating seat. Toys can be removed or added to encourage independence and motor skill development.



Different modes let babies enjoy  
their favorite toys from  
new perspectives!

Image: A baby happily seated in the 360-degree rotating seat of the activity center, interacting with the various toys, with an adult nearby.

Enjoy the detachable toys as stand-alone toys for tummy time or independent play



Image: A close-up of the bouncing beads drum toy, showing the colorful beads inside, designed for audio and visual stimulation.

#### 4.4. Toddler Activity Table

As your child gains mobility, the activity center can transform into a toddler activity table. This allows them to walk around the table and engage with the toys from a new perspective, fostering continued exploration and play.

Converts to a fun table and chair for toddlers and young children



Image: A baby standing independently next to the activity center, which has been converted into a low-height table, ready for toddler play.

#### 4.5. Child Table and Chair

The activity center can further convert into a table and a separate chair for older toddlers and young children, providing a dedicated space for drawing, playing, or other activities.

# Bouncing panda with spinning ball fosters motor skills and offers sensory stimulation



Image: A young child sitting comfortably at the converted activity center, now functioning as a small table with a separate chair, engaged in drawing.

## 5. CARE AND MAINTENANCE

- Cleaning:** Wipe down all plastic surfaces with a damp cloth and mild soap. Rinse thoroughly and air dry. The fabric seat pad can be removed and machine washed on a gentle cycle with cold water. Do not bleach. Tumble dry low.
- Toy Care:** Detachable toys can be wiped clean. Avoid submerging electronic components (like the piano) in water.
- Storage:** Store the activity center in a clean, dry place away from direct sunlight when not in use.

## 6. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Electronic piano not working.	Batteries are dead or incorrectly installed.	Replace with 2 new AA batteries. Ensure correct polarity.
Seat is difficult to rotate.	New unit stiffness or child lacks sufficient strength.	The seat may be stiff initially. It will become easier to rotate with use. Ensure the child is strong enough to push off the floor with their feet to aid rotation.
Toys do not attach securely.	Incorrect attachment method.	Ensure you push up from the bottom of the toy and turn it until it locks into place.

## 7. SPECIFICATIONS

Feature	Detail
Model Number	WA111HBF
Package Dimensions	26.5 x 25.5 x 6 inches
Item Weight	14.9 pounds
Maximum Weight Recommendation	30 Pounds
Material Composition	Plastics 65.8%, Fabric 1.3%, Steel Tube 32.3%, Hardware 0.6%
Batteries Required	2 AA batteries (for electronic piano)
Country of Origin	China

## 8. WARRANTY AND SUPPORT

For warranty information or product support, please visit the official Tiny Love website or contact their customer service. You can find more information at the [Tiny Love Store on Amazon](#).