

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Casio](#) /

> [Casio AE1200 Series Digital Watch Instruction Manual](#)

## Casio AE1200WHUB-8AV

# Casio AE1200 Series Digital Watch Instruction Manual

Model: AE1200WHUB-8AV

## INTRODUCTION

---

This manual provides detailed instructions for the Casio AE1200 Series digital watch, model AE1200WHUB-8AV. It covers setup, operation, maintenance, and specifications to help you maximize your watch's functionality and ensure its longevity.

## KEY FEATURES

---

- **Multifunctional Digital Display with World Time:** The Casio AE1200 Series features an easy-to-read digital display with a dedicated world time function, allowing you to track time in 31 time zones and 48 cities. The multi-time mode supports up to 4 different cities, making it ideal for travelers and professionals managing multiple time zones.
- **100M Water Resistance for Versatile Wear:** Designed for everyday durability, this digital watch offers 100-meter water resistance, making it suitable for swimming, water activities, and daily exposure to moisture. The rugged resin case and durable cloth band provide a comfortable yet secure fit for outdoor and active use.
- **1/100-Second Stopwatch & 24-Hour Countdown Timer:** Track time with precision using the 1/100-second stopwatch, featuring elapsed time, split time, and first/second place timing. The countdown timer offers a customizable range from 1 second to 24 hours, perfect for training, sports, and structured time tracking.
- **LED Backlight with Afterglow for Nighttime Readability:** The selectable LED backlight ensures visibility in low-light conditions, making it easy to check the time in dark environments. The auto-calendar function, pre-programmed until 2099, eliminates the need for frequent manual date adjustments, ensuring long-term convenience.
- **10-Year Battery with Multi-Alarm Function:** Powered by a CR2025 battery, this watch provides up to 10 years of continuous operation, reducing the need for frequent replacements. The 5 daily or one-time alarms and hourly time signal help keep schedules on track, while the button mute feature allows for silent operation when needed.

## SETUP

---

### Button Functions

- **MODE:** Cycles through modes (Timekeeping, World Time, Alarm, Stopwatch, Timer).
- **ADJUST:** Used to enter/exit setting mode and confirm settings.
- **LIGHT:** Activates the LED backlight.
- **SEARCH:** Used to change selections or values in setting mode, or to view different world time cities.

## Setting Time and Date

1. In Timekeeping Mode, press and hold the **ADJUST** button until the city code flashes.
2. Use the **SEARCH** button to select your Home City code.
3. Press the **MODE** button to cycle through settings: DST (Daylight Saving Time), 12/24-hour format, Seconds, Hour, Minute, Year, Month, Day.
4. Use the **SEARCH** button to adjust values.
5. Press the **ADJUST** button to exit setting mode.

## Setting World Time

1. In World Time Mode, use the **SEARCH** button to scroll through different city codes.
2. To swap Home City and World Time City, press **ADJUST** and **SEARCH** simultaneously.

## Setting Alarms

1. In Alarm Mode, use the **SEARCH** button to select one of the 5 alarms (AL1 to AL5) or the Hourly Time Signal (SIG).
2. Press the **ADJUST** button to enter setting mode. The hour digits will flash.
3. Use the **SEARCH** button to adjust the hour, then press **MODE** to select minutes.
4. Use the **SEARCH** button to adjust minutes.
5. Press the **ADJUST** button to exit setting mode.
6. To turn an alarm ON/OFF, select the alarm and press **SEARCH**.

## Using the Stopwatch

1. In Stopwatch Mode, press the **SEARCH** button to start/stop the stopwatch.
2. Press the **ADJUST** button to reset to zero when stopped.
3. To record split times, press the **ADJUST** button while the stopwatch is running. Press **ADJUST** again to release the split display.

## Using the Countdown Timer

1. In Timer Mode, press the **ADJUST** button to enter setting mode. The hour digits will flash.
2. Use the **SEARCH** button to adjust the hour, then press **MODE** to select minutes.
3. Use the **SEARCH** button to adjust minutes.
4. Press the **ADJUST** button to exit setting mode.
5. Press the **SEARCH** button to start/stop the countdown.
6. Press the **ADJUST** button to reset to the set time when stopped.

## OPERATING THE WATCH

---

- **Mode Navigation:** Press the **MODE** button repeatedly to cycle through the watch's different functions: Timekeeping, World Time, Alarm, Stopwatch, and Countdown Timer.
- **Backlight Activation:** Press the **LIGHT** button to illuminate the display in low-light conditions. The backlight duration is preset.

- **Button Tone:** The watch features a button mute function. Refer to the full manual for specific instructions on how to enable or disable button tones.

## MAINTENANCE

---

- **Water Resistance:** The watch is water-resistant to 100 meters (10 BAR). This means it is suitable for swimming and snorkeling, but not for scuba diving. Do not operate buttons underwater.
- **Battery Replacement:** The watch is powered by a CR2025 battery with an approximate 10-year life. Battery replacement should be performed by a qualified technician to ensure water resistance is maintained.
- **Cleaning:** Clean the watch case and band regularly with a soft, dry cloth. For the cloth band, gentle hand washing with mild soap and water, followed by thorough rinsing and air drying, may be appropriate. Avoid harsh chemicals.

## TROUBLESHOOTING

---

- **Display is blank:** The battery may be low or depleted. Replace the battery.
- **Time is incorrect:** Ensure the Home City setting is correct and Daylight Saving Time (DST) is set appropriately. Refer to "Setting Time and Date" for adjustment.
- **Buttons do not respond:** The watch may be in a specific mode that restricts button functions, or there might be a temporary software glitch. If the issue persists, contact customer support.
- **Backlight not working:** Check if the battery is low. If the battery is new and the backlight still doesn't work, contact customer support.

## SPECIFICATIONS

---

<b>Model Number</b>	AE1200WHUB-8AV
<b>Brand</b>	Casio
<b>Display Type</b>	Digital
<b>Movement Type</b>	Quartz
<b>Power Source</b>	Battery Powered (1 CR2025 battery included)
<b>Water Resistance Depth</b>	100 Meters
<b>Case Material</b>	Resin
<b>Crystal Material</b>	Resin
<b>Case Diameter</b>	42.1 Millimeters
<b>Case Thickness</b>	12.5 Millimeters
<b>Band Material Type</b>	Cloth
<b>Band Width</b>	22 Millimeters
<b>Clasp Type</b>	Buckle
<b>Item Weight</b>	5 Ounces

## WARRANTY AND SUPPORT

---

This product comes with a **Limited Warranty**. Please refer to the warranty card included with your purchase for specific terms and conditions.

For further assistance, technical support, or warranty claims, please visit the official Casio website or contact their customer service department.

## PRODUCT MEDIA

---

### Product Image



Image: Casio AE1200 Series Digital Watch in Grey (Model: AE1200WHUB-8AV). This image displays the watch's digital display, stainless steel bracelet, and overall design.

### Official Product Video

Your browser does not support the video tag.

Video: "Why you should buy the Casio Royale AE1200WH Watch". This video provides an overview of the Casio AE1200 watch, highlighting its design, features, and functionality. It showcases the watch's retro aesthetic, world time capabilities, and durable construction.