

pot1060cp

Generic 6-Quart Ceramic Slow Cooker Pot Replacement

Model: pot1060cp

Instruction Manual

INTRODUCTION

This document provides instructions for the Generic 6-Quart Ceramic Slow Cooker Pot Replacement, designed to replace the inner pot of specific slow cooker models. This ceramic pot is intended for cooking and warming food within a compatible slow cooker base or for oven use as specified. Please read all instructions carefully before first use.

KEY FEATURES

- **Durable Ceramic Pot:** Constructed for long-lasting performance.
- **Spacious 6-Quart Capacity:** Suitable for preparing large meals.
- **Versatile Compatibility:** Designed as a replacement for select Crockpot slow cooker models.
- **Easy Cleaning:** Features a smooth, glazed ceramic surface for simple cleanup.
- **Oven-Safe Design:** Can be used in an oven for additional cooking flexibility.

6Qt Slow Cooker Replacement Pot

For Crock-Pot Series



Image: The 6-quart ceramic pot replacement, showcasing its design and capacity.

COMPATIBILITY INFORMATION

This ceramic pot is specifically designed to be compatible with the following Crockpot models:

- CPSCVC60LLS
- SCCPV600-S-BR
- CPSCVO60LL-BP

Important: Please verify your slow cooker's model number before purchasing to ensure proper fit and function. Incompatibility may lead to inefficient cooking or damage.

Compatibility

Compatible with : Crock-Pot series **(6qt)**
SCCPVL600-S-BR **CPSCV60LLS**
CPSCV060LL-BP
ONLY



Image: Visual representation of compatible Crockpot slow cooker models.

Compatibility



**Note:
Oval-shape WITHOUT
HANDLE**




Image: The replacement pot is an oval shape without integrated handles, which is crucial for compatibility.

Compatibility


Check your model number here

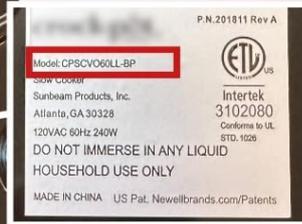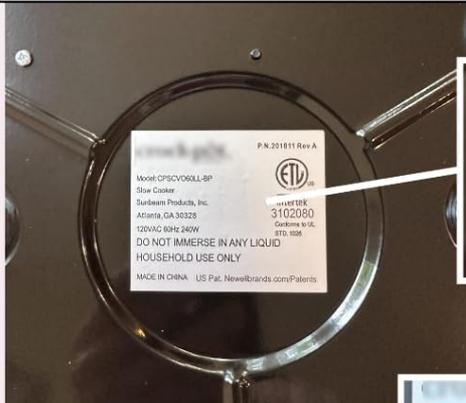

CPSCVO60LL-BP

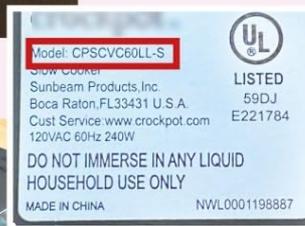

Bottom of CPSCVC60LL-S

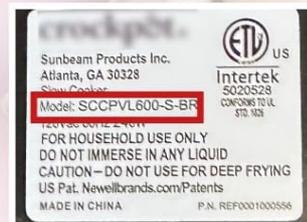

Bottom of SCCPVL600-S-BRv

Image: Guide on where to find the model number on the bottom of your slow cooker base.

Incompatible Models

This pot replacement is **NOT** compatible with the following models:

- CPSCVC70LLEC
- SCCPVL712-S-R
- CPSCVTS70LL-S

NOT Compatible

Do not purchase this slow cooker replacement
if your machine is below model

NOT Compatible with
Slow Cooker
CPSCVC70LLEC




Image: An example of an incompatible Crockpot model (CPSCVC70LLEC) with a warning not to purchase this replacement for it.



This pot replacement is not compatible with crockpot models listed below. Please check your model before placing an order; otherwise, it may **NOT** work properly!



SCCPVLF712-S-R

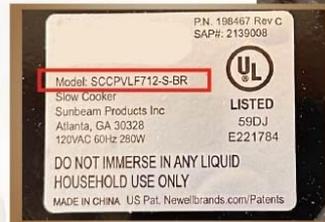

X NOT Fit



CPSCVTS70LL-S



Image: Examples of other incompatible Crockpot models (SCCPVLF712-S-R and CPSCVTS70LL-S) and their model number labels.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove the ceramic pot from its packaging. Inspect for any damage during transit.
2. **Initial Cleaning:** Before first use, wash the ceramic pot thoroughly with warm, soapy water. Rinse completely and dry. This removes any manufacturing residues.
3. **Placement:** Place the clean, dry ceramic pot into the slow cooker heating base. Ensure it is seated properly and securely.

OPERATING INSTRUCTIONS

Using with a Slow Cooker Base

1. Ensure the ceramic pot is correctly placed in the slow cooker base.
2. Add ingredients to the ceramic pot.
3. Place the lid securely on the ceramic pot.

4. Plug in the slow cooker base and select the desired cooking setting (Low, High, Warm) according to your recipe and slow cooker model's instructions.
5. Always use oven mitts or pot holders when handling the hot ceramic pot.

Oven-Safe Use

The ceramic pot is oven-safe. When using in an oven:

- Do not preheat the ceramic pot empty.
- Avoid sudden temperature changes, such as placing a hot pot on a cold surface or adding cold liquids to a hot pot.
- Always use oven mitts when handling.

Your browser does not support the video tag.

Video: A brief demonstration of the 6-quart ceramic pot replacement, highlighting its design and fit.

CARE AND MAINTENANCE

- **Cleaning:** The ceramic pot is dishwasher safe. For hand washing, use warm, soapy water and a non-abrasive sponge or cloth.
- **Stains:** For stubborn food residue, soak the pot in warm, soapy water before cleaning. Avoid using harsh abrasive cleaners or metal scouring pads, which can damage the glazed surface.
- **Storage:** Ensure the pot is completely dry before storing. Store in a safe place to prevent chipping or breakage.



Image: An icon indicating the ceramic pot is dishwasher safe.

TROUBLESHOOTING

Pot Does Not Fit Correctly

If the replacement pot does not fit snugly into your slow cooker base, or if the lid does not seal properly, it is likely due to an incompatibility with your specific slow cooker model. Even if the capacity is the same, the dimensions or shape may differ. Refer to the [Compatibility Information](#) section and double-check your slow cooker's model number against the listed compatible models. Using an ill-fitting pot can lead to uneven cooking, heat loss, and potential damage to the slow cooker or the pot itself.

PRODUCT SPECIFICATIONS

Brand	Generic
Model Number	pot1060cp
Capacity	6 Quarts
Material	Ceramic
Color	Black
Product Dimensions	11.5"D x 15"W x 6"H
Item Weight	8 Pounds
Dishwasher Safe	Yes
Shape	Rectangular (Oval)

WARRANTY AND SUPPORT

For any questions regarding product warranty, technical support, or replacement parts, please contact the manufacturer or the retailer from whom the product was purchased. Keep your purchase receipt for warranty claims.