

## Linkifly XT1DE

# Linkifly Cordless Vacuum Cleaner User Manual

Model: XT1DE | Brand: Linkifly

## INTRODUCTION

Thank you for choosing the Linkifly Cordless Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new vacuum. Please read it thoroughly before first use and keep it for future reference.

## IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Read all instructions before using the appliance.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy.
- Close attention is necessary when used by or near children.
- Use only as described in this manual.
- Do not use with damaged cord or plug.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust cup and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Store the appliance indoors in a cool, dry place.

## WHAT'S INCLUDED

Your Linkifly Cordless Vacuum Cleaner package contains the following components:

- Vacuum Head
- Removable Battery
- Extension Tube
- Electronic Floor Brush
- 2-in-1 Brush
- Crevice Tool

- HEPA Filter (x2)
- Charger
- User Manual
- Wall Mount

## WHAT'S INCLUDED IN THE PACKAGE?

Vacuum Head  
Removable Battery  
Extension Tube  
Electronic Floor brush  
2 in 1 Brush  
Crevice Tool  
HEPA Filter\*2  
Charger  
User Manual  
Wall Mount



Figure 1: All components of the Linkify Cordless Vacuum Cleaner.

## SETUP AND ASSEMBLY

### 1. Charging the Battery

Before first use, fully charge the battery. The battery can be charged while attached to the main unit or separately. Connect the charger to the battery pack and plug it into a power outlet. The LED display on the main unit will show the charging progress.



Figure 2: The removable battery pack being inserted into the main vacuum unit.

## 2. Assembling the Vacuum

Attach the extension tube to the main body. Then, connect the electronic floor brush to the other end of the extension tube. Ensure all connections click securely into place.



Figure 3: The main vacuum unit assembled with the extension tube and floor brush.

## OPERATING INSTRUCTIONS

### 1. Powering On/Off

Press the power button on the main unit's touch screen to turn the vacuum on or off.

# FREE-STANDING DESIGN – EASY STORAGE, NO MESS!

Simply stand it upright anywhere—no drilling, no hassle, just effortless storage!



Figure 4: The intuitive LED display for smart control.

## 2. Adjusting Suction Power

The vacuum features 3 power levels. Tap the power level indicator on the touch screen to cycle through the different suction modes (low, medium, high) to suit your cleaning needs.

## 3. Using Attachments

The extension tube can be removed to use the main body with attachments directly. The 2-in-1 brush is ideal for furniture and keyboards, while the crevice tool is perfect for tight spaces like sofa gaps and car interiors.

# ANTI-TANGLE ROLLER BRUSH – NO MORE HAIR WRAPS!

Designed to prevent hair and pet fur from tangling, making maintenance effortless and cleaning smoother than ever.

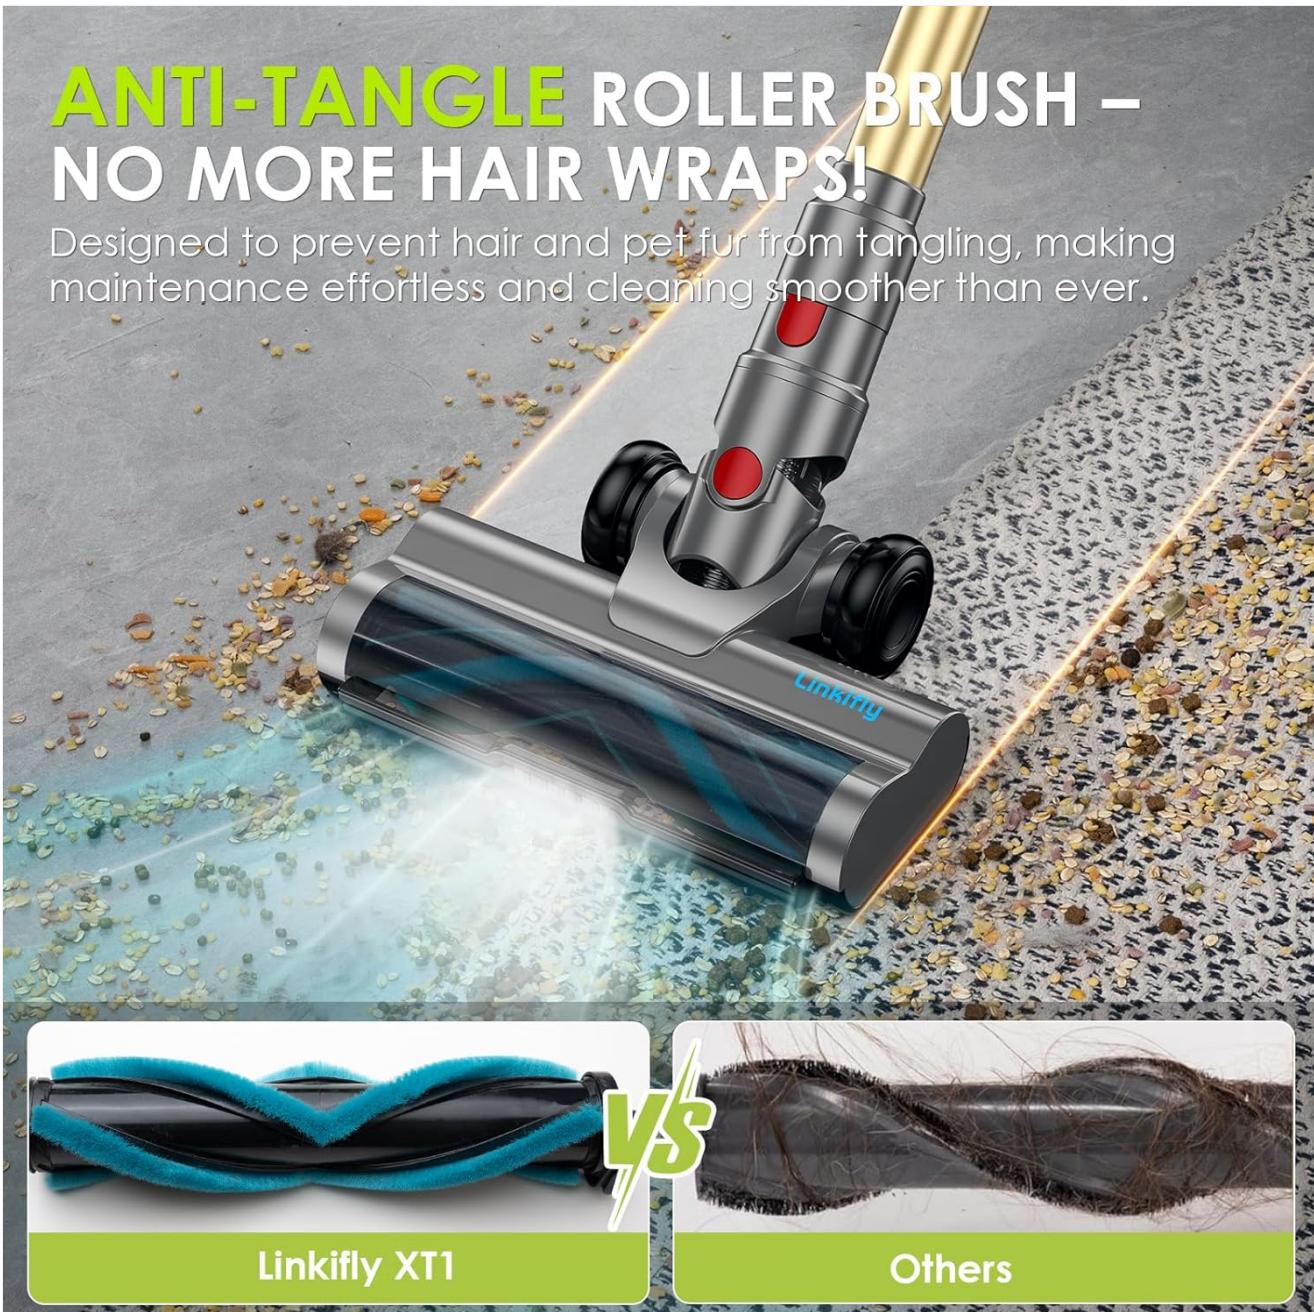


Figure 5: Versatile attachments for comprehensive cleaning.

## MAINTENANCE

### 1. Emptying the Dustbin

To empty the dustbin, press the release button on the dustbin and open the bottom flap. Dispose of the collected debris into a trash can. The dustbin is washable for thorough cleaning.



Figure 6: The multi-cone filtration system and transparent dustbin.

## 2. Cleaning the HEPA Filter

The HEPA filter should be cleaned regularly to maintain optimal suction. Remove the filter from the dustbin, tap off loose debris, and rinse it under running water. Ensure the filter is completely dry before reinserting it. A spare HEPA filter is included for convenience.



Figure 7: Clean HEPA filters ready for use.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum not turning on	Battery is not charged or not properly installed.	Charge the battery fully. Ensure the battery pack is securely clicked into place.
Low suction power	Dustbin is full. Filter is clogged. Brush roll is tangled.	Empty the dustbin. Clean or replace the HEPA filter. Remove any tangled hair or debris from the brush roll.
Vacuum stops unexpectedly	Battery is low. Overheating due to blockage.	Recharge the battery. Check for and clear any blockages in the nozzle, tube, or dustbin.
Brush roll not spinning	Brush roll is jammed or tangled. Motor fault.	Clear any obstructions from the brush roll. If the problem persists, contact customer support.

## SPECIFICATIONS

- Brand: Linkifly
- Model: XT1DE
- Motor Horsepower: 0.73 horsepower
- Suction Power: 550W/48Kpa
- Runtime: Up to 70 minutes (depending on mode)
- Filter Type: HEPA Filter
- Form Factor: Stick
- Product Dimensions: 13 x 16 x 7 inches
- Item Weight: 9.55 pounds
- Battery: 1 A battery required (included)
- Number of Speeds/Power Levels: 3
- Portable: Yes
- Indoor/Outdoor Usage: Indoor

## WARRANTY AND CUSTOMER SUPPORT

Linkifly offers a 12-Month Normal Warranty and a 30-Day Money Back Guarantee. For any questions, issues, or warranty claims, please contact our 24/7 Customer Support. We are committed to 100% Customer Satisfaction.



Figure 8: Linkifly's commitment to quality and customer satisfaction.