

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Best Choice Products](#) /
- › [Best Choice Products Wooden Pretend Play Cottage Kitchen Instruction Manual - Model SKY8536](#)

Best Choice Products SKY8536

Best Choice Products Wooden Pretend Play Cottage Kitchen

MODEL: SKY8536

Introduction

Thank you for choosing the Best Choice Products Wooden Pretend Play Cottage Kitchen. This manual provides essential information for the safe assembly, operation, and maintenance of your new toy kitchen. Please read these instructions carefully before assembly and retain them for future reference.



Image: The Best Choice Products Wooden Pretend Play Cottage Kitchen in cream, featuring a microwave, oven, sink, and stovetop with gold accents.

Safety Information

This product is designed for children aged 3 years and up. Adult supervision is recommended during play. Please ensure all parts are securely fastened before use.

- **Choking Hazard:** Contains small parts before assembly. Keep away from children under 3 years.
- **Assembly:** Adult assembly is required. Follow all instructions carefully.
- **Stability:** Ensure the kitchen is placed on a flat, stable surface to prevent tipping.
- **Materials:** Constructed from engineered wood and metal components. This product is ASTM and CPSIA certified for safety.

Certified and Safe



Certified materials make this a safe and fun option for playtime!

Image: A gold seal indicating ASTM F963 and CPSIA certification, confirming the product meets U.S. federal safety standards.

Package Contents

Verify that all components listed below are present before beginning assembly. If any parts are missing or damaged, please contact customer support.

- Wooden Pretend Play Cottage Kitchen components
- 3 x Cooking Utensils (ladle, slotted spoon, spatula)
- 1 x Play Pot with lid
- 1 x Play Dutch Oven
- Assembly Hardware (screws, fasteners, etc.)
- Instruction Manual

5 PLAY ACCESSORIES INCLUDED



Image: Close-up of the five included play accessories: a gold ladle, slotted spoon, spatula hanging on hooks, and a gold pot and Dutch oven on the stovetop.

Setup and Assembly

Assembly of the Best Choice Products Wooden Pretend Play Cottage Kitchen is required. Please follow the detailed instructions provided in the separate assembly manual included in the package. It is recommended to have two adults for assembly. Ensure you have a clear, spacious area for construction.

- Unpack all components and verify against the parts list.
- Use the provided hardware and tools as specified in the assembly guide.
- Do not overtighten screws to avoid damaging the wood.
- Once assembled, check all connections for stability and tightness.

Operating Instructions

This play kitchen is designed for imaginative play. It features several interactive elements to enhance the experience.

- **Stovetop Knobs:** The gold knobs on the stovetop are designed to produce a realistic clicking sound when turned, simulating the operation of a real stove.
- **Oven Door:** The oven door opens and closes, allowing children to place play food inside.
- **Microwave:** The microwave door opens, and the buttons on the control panel are for pretend play.
- **Sink:** The sink area includes a faucet and basin for pretend washing.
- **Storage:** Utilize the open storage shelves in the pantry, oven, and under the sink to store play accessories.



Image: A close-up view of the stovetop area, highlighting the gold clicking knobs and the digital display for the oven.

PRETEND MICROWAVE



*Pink Color Shown

Image: A child's hand interacting with the pretend microwave, pressing the 'START' button on its control panel.

AMPLE STORAGE

.....

Plenty of room to store all accessories and toys



*Sage Color Shown

Image: The play kitchen with its oven and under-sink cabinet doors open, revealing ample storage space for play accessories.

Maintenance

Proper care will ensure the longevity of your play kitchen.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals.
- **Dusting:** Regularly dust the kitchen to keep it clean.
- **Inspection:** Periodically check all screws and fasteners to ensure they remain tight. Retighten if necessary.
- **Storage:** Store the kitchen in a dry environment, away from direct sunlight or extreme temperatures, to prevent warping or fading.

Troubleshooting

If you encounter any issues with your play kitchen, please refer to the following common solutions:

- **Loose Parts:** If any parts feel loose, gently retighten the corresponding screws. Do not overtighten.
- **Stability Issues:** Ensure the kitchen is on a level surface. Check that all assembly hardware is fully tightened.
- **Missing Components:** If you discover missing parts during assembly, please contact Best Choice Products customer support immediately.

Specifications

Model Number	SKY8536
Overall Dimensions (L x W x H)	23.6" x 11.75" x 36.4" (60.96 cm x 30.48 cm x 91.44 cm)
Base to Counter Height	20.5" (52.07 cm)
Product Weight	23 lbs (10.43 kg)
Material	Engineered Wood (MDF)
Recommended Age	3+ Years
Assembly Required	Yes
Certifications	ASTM, CPSIA
UPC	842957151332



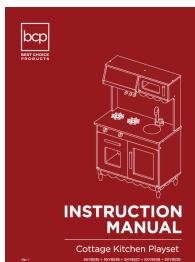
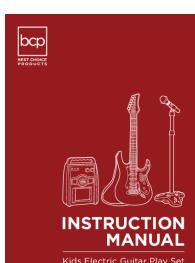
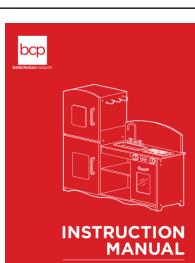
Image: A diagram illustrating the key dimensions of the play kitchen, including overall height (36.4"), width (23.6"), and depth (11.75"), and counter height (20.5").

Warranty and Support

For warranty information, replacement parts, or customer support, please contact Best Choice Products directly. Refer to the contact information provided on the product packaging or their official website.

© 2025 Best Choice Products. All rights reserved.

Related Documents - SKY8536

	<p><u>Best Choice Products Pretend Play Corner Kitchen Wooden Toy Set - SKY6910, 6911, 6912</u></p> <p>Overview of parts and components for the Best Choice Products Pretend Play Corner Kitchen Wooden Toy Set, models SKY6910, SKY6911, and SKY6912. This document outlines the various numbered parts and lettered components that make up the toy kitchen.</p>
	<p><u>Best Choice Products Kitchen Playset Instruction Manual</u></p> <p>Comprehensive instruction manual for assembling the Best Choice Products Kitchen Playset, including parts lists, hardware details, and step-by-step assembly instructions for models SKY5969, SKY6009, SKY6346, SKY6850, SKY6851, SKY6852, and SKY6853.</p>
	<p><u>Best Choice Products Cottage Kitchen Playset Instruction Manual</u></p> <p>Detailed instruction manual for assembling the Best Choice Products Cottage Kitchen Playset, including parts list, tools required, and assembly steps. Model numbers: SKY8535, SKY8536, SKY8537, SKY8538, SKY8539.</p>
	<p><u>Best Choice Products Kids Electric Guitar Play Set Instruction Manual</u></p> <p>Official instruction manual for the Best Choice Products Kids Electric Guitar Play Set (SKY3017, SKY3018, SKY7142, SKY7143). Learn how to set up, operate, and maintain your toy guitar, amplifier, and microphone.</p>
	<p><u>Best Choice Products Kids Kitchen Playset Instruction Manual SKY4954</u></p> <p>Detailed instruction manual for assembling the Best Choice Products Kids Kitchen Playset (Model SKY4954). Includes a list of parts, required tools, hardware, step-by-step assembly instructions, and product warranty information.</p>
	<p><u>Best Choice Products Farmhouse Kitchen Set Instruction Manual</u></p> <p>Instruction manual for the Best Choice Products Farmhouse Kitchen Set (Models SKY6344 + SKY6345), detailing assembly, parts, and safety information.</p>