

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Aikolesa](#) /

› [Aikolesa Folding Rear Bike Basket for Adult Bikes - Instruction Manual](#)

## Aikolesa Large Bike Basket Rear

# Aikolesa Folding Rear Bike Basket for Adult Bikes

Instruction Manual

## INTRODUCTION

---

Thank you for choosing the Aikolesa Folding Rear Bike Basket. This manual provides detailed instructions for the proper installation, operation, and maintenance of your new bike basket. Please read this manual thoroughly before use to ensure safe and efficient operation.

## SAFETY INFORMATION

---

- Ensure all components are securely fastened before each ride. Loose parts can lead to accidents.
- Do not exceed the maximum load capacity of 10 kg (22 lbs). Overloading can affect bike stability and cause damage.
- Distribute weight evenly within the basket to maintain balance while cycling.
- Regularly inspect the basket and mounting hardware for any signs of wear, damage, or corrosion. Replace damaged parts immediately.
- Be aware that adding a basket and cargo can change your bicycle's handling characteristics. Practice riding with a loaded basket in a safe area before riding in traffic.
- When unfolding the basket, exercise caution as it may spring open quickly. Keep hands clear to avoid injury.

## PACKAGE CONTENTS

---

Please verify that all items are present in your package:

- Folding Rear Bike Basket (Metal Frame)
- Mounting Plates (4 pieces)
- Screws and Nuts (various sizes for installation)
- Allen Wrench (for tightening screws)
- Anti-slip Sleeves / S-shaped connecting clips (Blue, 8 pieces)
- Zip Ties (for securing)
- Rear Reflector
- Removable Liner Bag (optional, if included with your model)
- Rainproof Cover (optional, if included with your model)

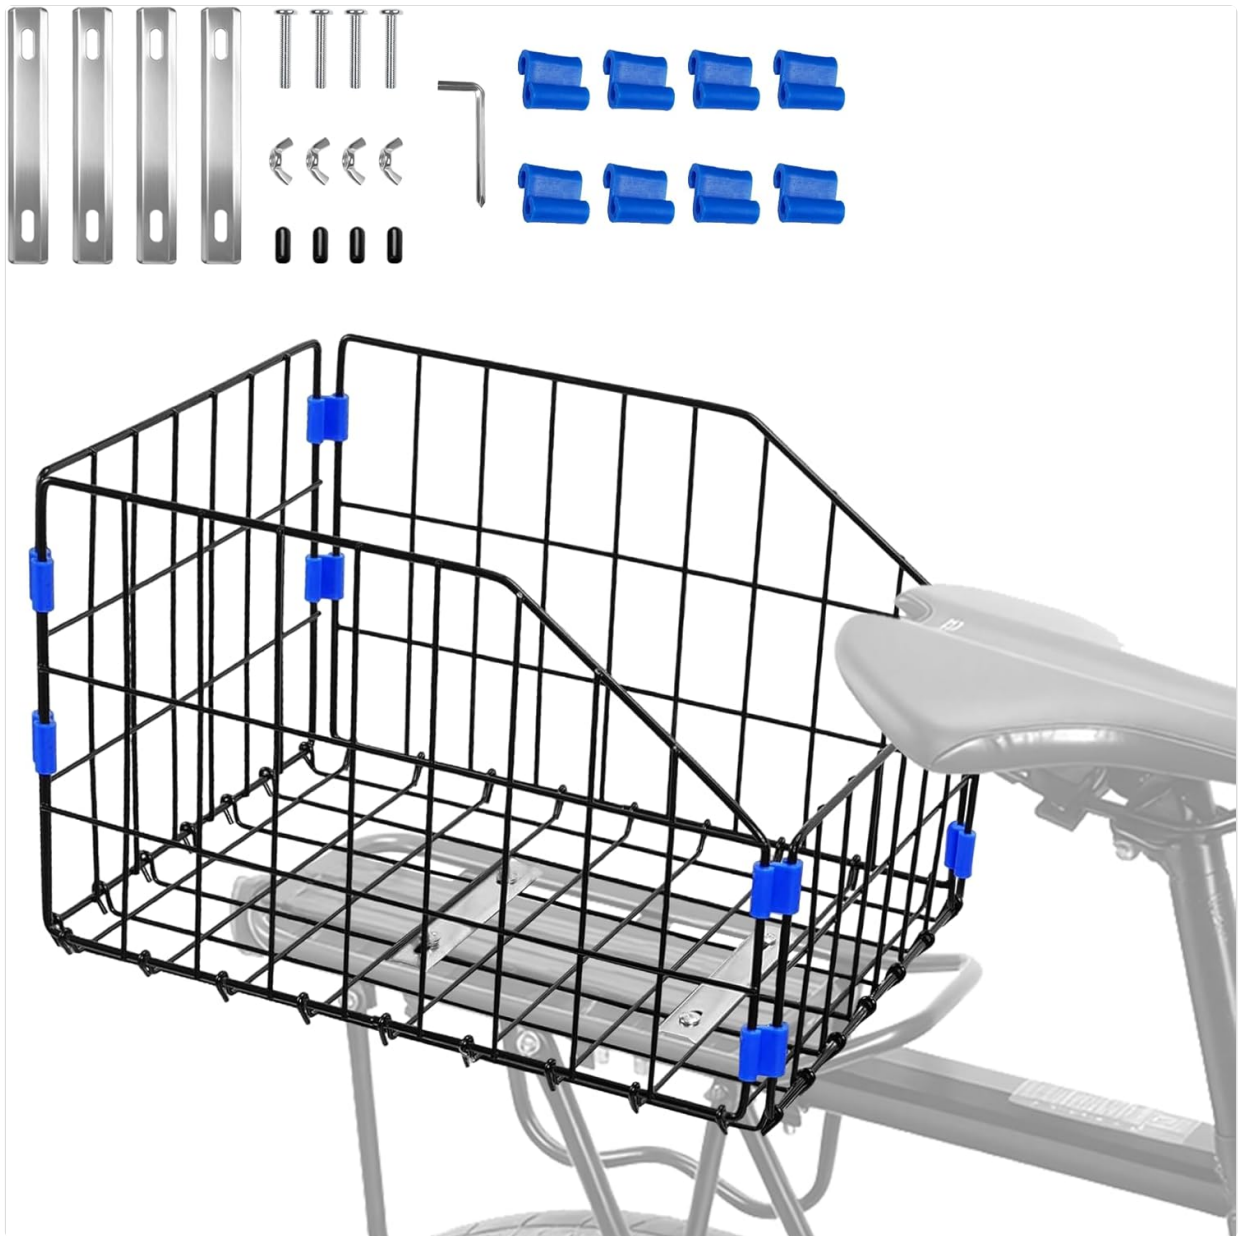 


Image: The Aikolesa Folding Rear Bike Basket shown with all its components, including the metal frame, mounting hardware, and blue anti-slip clips.

## INSTALLATION INSTRUCTIONS (REAR BASKET)

Follow these steps to properly install your Aikolesa Folding Rear Bike Basket:

1. **Unfold the Basket:** Carefully push the folded basket slightly to allow it to spring open. **Attention: The basket will pop open quickly. Exercise caution to avoid pinching your hands.**



Image: A person demonstrating the unfolding process of the wire basket, showing how it expands from a flat state.

2. **Secure the Basket Perimeter:** Once unfolded, secure the perimeter of the basket using the four blue S-shaped snap-on clasps provided. These clasps help maintain the basket's shape and stability.

## FOLDING BIKE BASKET WITH METAL FRAME

Dimensions from all angles

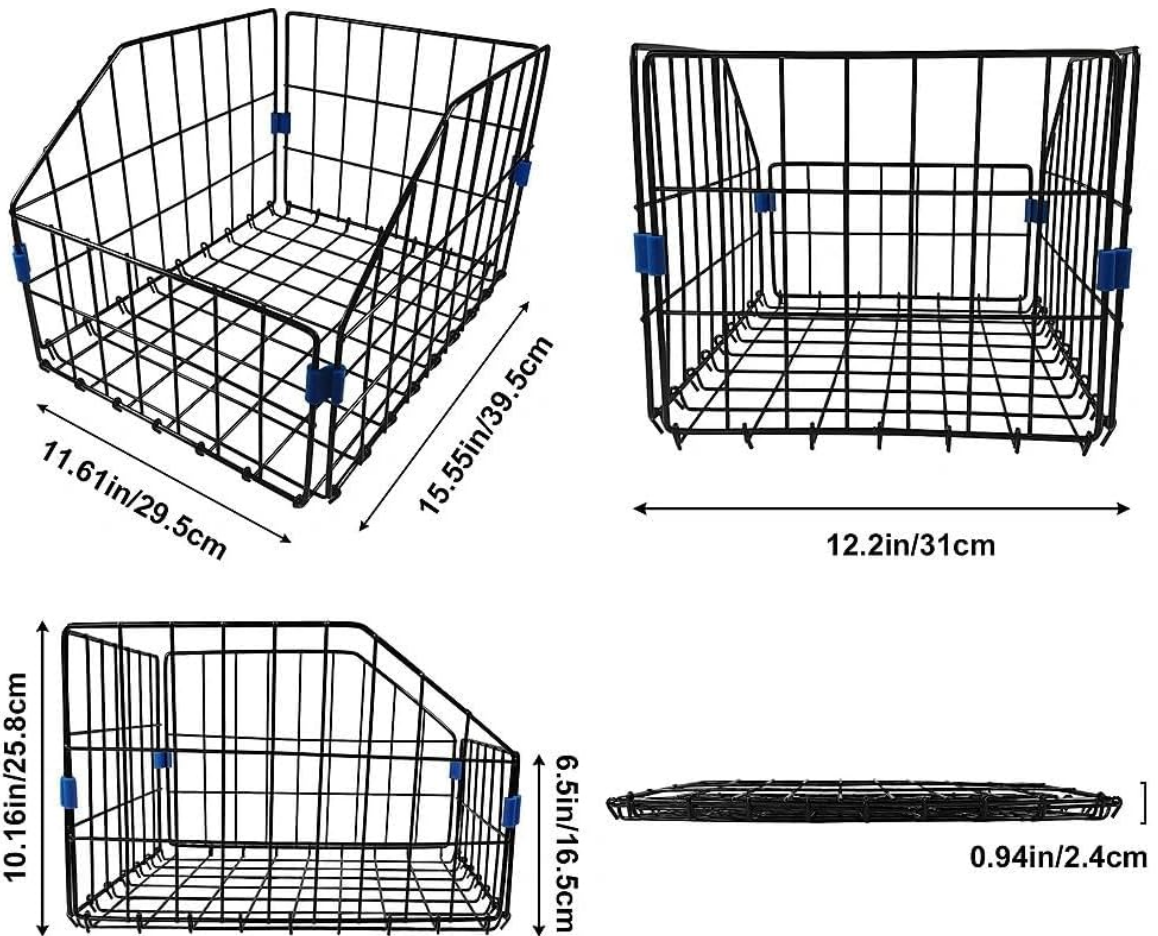 


Image: Close-up of hands attaching a blue clasp to secure the wire frame of the basket.

- Position on Rear Rack:** Place the unfolded basket onto your bicycle's rear rack. Identify the appropriate screw holes on the basket and the rack for mounting.

# MULTI-ANGLE DISPLAY

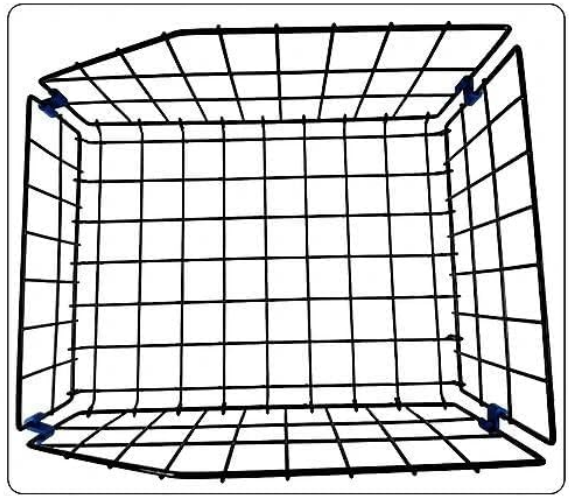 
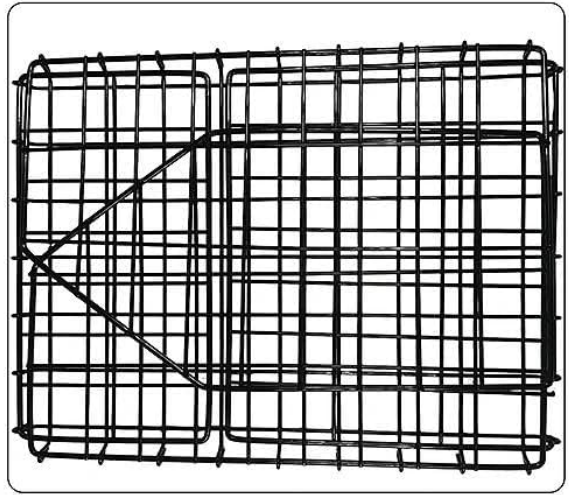 
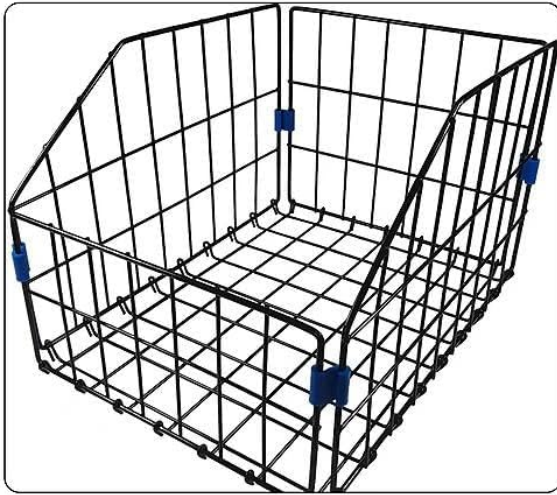 


Image: The bike basket resting on the rear rack of a bicycle, ready for attachment.

4. **Secure Mounting Bars:** Use the provided mounting plates, screws, and nuts to firmly attach the basket to the bike rack. Insert the screws through the basket and mounting plates, then tighten them securely with the Allen wrench. Ensure the basket is centered and stable.



Image: A person using an Allen wrench to tighten screws, securing the basket's mounting plates to the bicycle's rear rack.

- 5. Use Zip Ties for Added Security:** For enhanced stability and to prevent any rattling, use the provided zip ties to further secure the basket to the bike rack at various points. Trim any excess zip tie material.
- 6. Attach Rear Reflector:** Mount the red rear reflector to the back of the basket using the small screws provided. This improves visibility and safety.
- 7. Insert Liner Bag (Optional):** If your model includes a removable liner bag, place it inside the basket. Secure the liner bag to the basket frame using its integrated clasps or straps to prevent it from shifting.

### Installation Video Guide

Your browser does not support the video tag.

Video: A step-by-step guide demonstrating the installation process of the Aikolesa Rear Bike Basket, including unfolding, securing, and attaching accessories.

## OPERATING INSTRUCTIONS

---

### Folding and Unfolding

The basket features a convenient folding design for easy storage when not in use. To fold, release the four S-shaped clasps and gently collapse the basket. To unfold, reverse the process, ensuring the clasps are securely re-attached.



Image: A visual comparison showing the bike basket in its compact, folded state and its expanded, unfolded state on a bicycle.

### **Using the Removable Liner Bag and Rainproof Cover**

The removable liner bag provides a soft interior for your items and can be easily removed for cleaning. The rainproof cover (if included) can be placed over the basket and its contents to protect them from weather elements. Ensure the cover is securely fitted to prevent it from blowing off during transit.



Image: The bike basket in use, holding various items such as a backpack, books, and a water bottle, demonstrating its storage capacity.

## MAINTENANCE

- **Cleaning:** Wipe the metal basket frame with a damp cloth and mild detergent. Dry thoroughly to prevent rust. The liner bag can be hand-washed with mild soap and air-dried.
- **Inspection:** Periodically check all screws, nuts, and clasps to ensure they are tight and secure. Re-tighten as necessary.
- **Storage:** When not in use, store the basket in a dry place. If storing for extended periods, consider folding it to save space.

## TROUBLESHOOTING

- **Basket feels wobbly after installation:**
  - Ensure all mounting screws are fully tightened.
  - Verify that the S-shaped clasps are properly engaged on all four corners of the basket.
  - Add additional zip ties to secure the basket more firmly to the bike rack, if needed.
- **Difficulty unfolding/folding the basket:**

- Ensure no parts are bent or obstructed.
  - Apply gentle pressure to the folding joints. If stiff, a small amount of lubricant can be applied to the pivot points.
- **Items falling out of the basket:**
    - Ensure the basket is not overloaded.
    - Use the removable liner bag to contain smaller items.
    - Consider using a cargo net (not included) for additional security, especially for taller items.

## SPECIFICATIONS

<b>Brand</b>	Aikolesa
<b>Model Name</b>	Large Bike Basket Rear
<b>Material</b>	Metal
<b>Color</b>	Black
<b>Mounting Type</b>	Rack Mount
<b>Product Dimensions (Unfolded)</b>	9.64"D x 12.2"W x 9.64"H (24.5cm D x 31cm W x 24.5cm H)
<b>Load Capacity</b>	Up to 10 kg (22 lbs)
<b>Item Package Dimensions</b>	17.04 x 13.11 x 1.81 inches
<b>Item Package Weight</b>	1.85 Kilograms
<b>Suggested Users</b>	Unisex-teen

## WARRANTY AND SUPPORT

The Aikolesa Folding Rear Bike Basket comes with a **1-month warranty** from the date of purchase, covering manufacturing defects. For warranty claims, technical support, or any questions regarding your product, please contact your retailer or the manufacturer directly through the contact information provided at the point of purchase. Please retain your proof of purchase for warranty purposes.