

- Manuals.plus /
- › Apexcam /
- › Apexcam M80 4K 60FPS 48MP Action Camera User Manual

Apexcam M80

Apexcam M80 4K 60FPS 48MP Action Camera User Manual

Model: M80

INTRODUCTION

Thank you for choosing the Apexcam M80 4K 60FPS 48MP Action Camera. This manual provides essential information for setting up, operating, and maintaining your camera to ensure optimal performance and longevity. Please read this manual thoroughly before using the device.



Image: Apexcam M80 Action Camera, front view.

WHAT'S IN THE BOX

The Apexcam M80 package includes the following items:

- Apexcam M80 Action Camera
- Waterproof Case (up to 40 meters)
- 2 x 1350mAh Rechargeable Batteries
- 64GB MicroSD Card
- Dual Battery Charger (also functions as a card reader)
- 2.4G Wireless Remote Control (splash-resistant)
- Various Mounting Accessories (for helmets, bicycles, wrists, etc.)
- USB Cable
- User Manual (this document)

[illegible]

Image: Contents of the Apexcam M80 package, including camera, waterproof case, batteries, remote, and various mounts.

PRODUCT OVERVIEW

Familiarize yourself with the camera's components and controls.

Camera Body

- **Lens:** Wide-angle lens for capturing broad scenes.
- **Display Screen:** 2-inch screen for live view, playback, and menu navigation.
- **Power/Mode Button:** Press to power on/off, short press to switch modes.
- **Shutter/OK Button:** Press to start/stop recording or take photos, confirm selections.
- **Up/Down Buttons:** Navigate menu options, adjust settings, or zoom (in certain modes).
- **MicroSD Card Slot:** Insert your memory card here.
- **USB Port:** For charging and data transfer.
- **Battery Compartment:** Houses the rechargeable battery.

Native 4K 60FPS Action Camera

Professional M80 action camera can record your highlights moments smoothly



Image: Front and rear views of the Apexcam M80, highlighting the lens and display screen.

SETUP

1. Battery Installation

1. Open the battery compartment cover on the bottom of the camera.
2. Insert a fully charged 1350mAh battery, ensuring the contacts align correctly.
3. Close the battery compartment cover securely.

The camera comes with two batteries for extended use. Charge batteries using the provided dual charger.

Longer Battery Life

With 2x 1350mAh batteries, you can enjoy wonderful journey



Image: A battery being inserted into the Apexcam M80 camera.

2. MicroSD Card Installation

1. Locate the MicroSD card slot on the side of the camera.
2. Insert the 64GB MicroSD card (or another compatible card, Class 10, U3, V30 recommended) with the gold contacts facing the back of the camera.
3. Push the card gently until it clicks into place. To remove, push again until it springs out.
4. It is recommended to format the MicroSD card in the camera before first use.

3. Waterproof Case Usage

The included waterproof case protects your camera up to 40 meters (130 feet) underwater. Ensure the case is clean and free of debris before sealing. Always perform a dry test without the camera inside before submerging.

Waterproof up to 40M



Image: The Apexcam M80 in its waterproof housing, submerged in water.

4. Mounting Accessories

The camera comes with a variety of mounts for different activities. Attach the camera to the desired mount (e.g., helmet mount, bicycle mount, wrist strap) using the provided screws and adapters. Ensure all connections are secure before use.



Image: A cyclist demonstrating the use of various mounting accessories for the Apexcam M80.

OPERATING INSTRUCTIONS

1. Power On/Off

- **Power On:** Press and hold the Power/Mode button for 3 seconds.
- **Power Off:** Press and hold the Power/Mode button for 3 seconds.

2. Mode Selection

Short press the Power/Mode button to cycle through available modes: Video Recording, Photo Mode, Playback Mode, and Settings.

3. Video Recording

- In Video Recording mode, press the Shutter/OK button to start recording.
- Press the Shutter/OK button again to stop recording.
- The camera supports 4K at 60 frames per second (FPS) for smooth, high-definition video.
- **Pre-recording:** This feature captures footage before you press the record button, ensuring you don't miss critical moments. Refer to the camera's settings menu to enable and configure pre-recording.

4. Photo Capture

- In Photo Mode, press the Shutter/OK button to take a photo.
- The camera captures 48MP high-resolution images.
- **8x Digital Zoom:** Use the Up/Down buttons to adjust the digital zoom level in Photo or Video mode (when not recording).

8X Digital ZOOM

8X Zoom and 4K 60FPS makes your adventure no more limits and take sharper and more beautiful landscapes

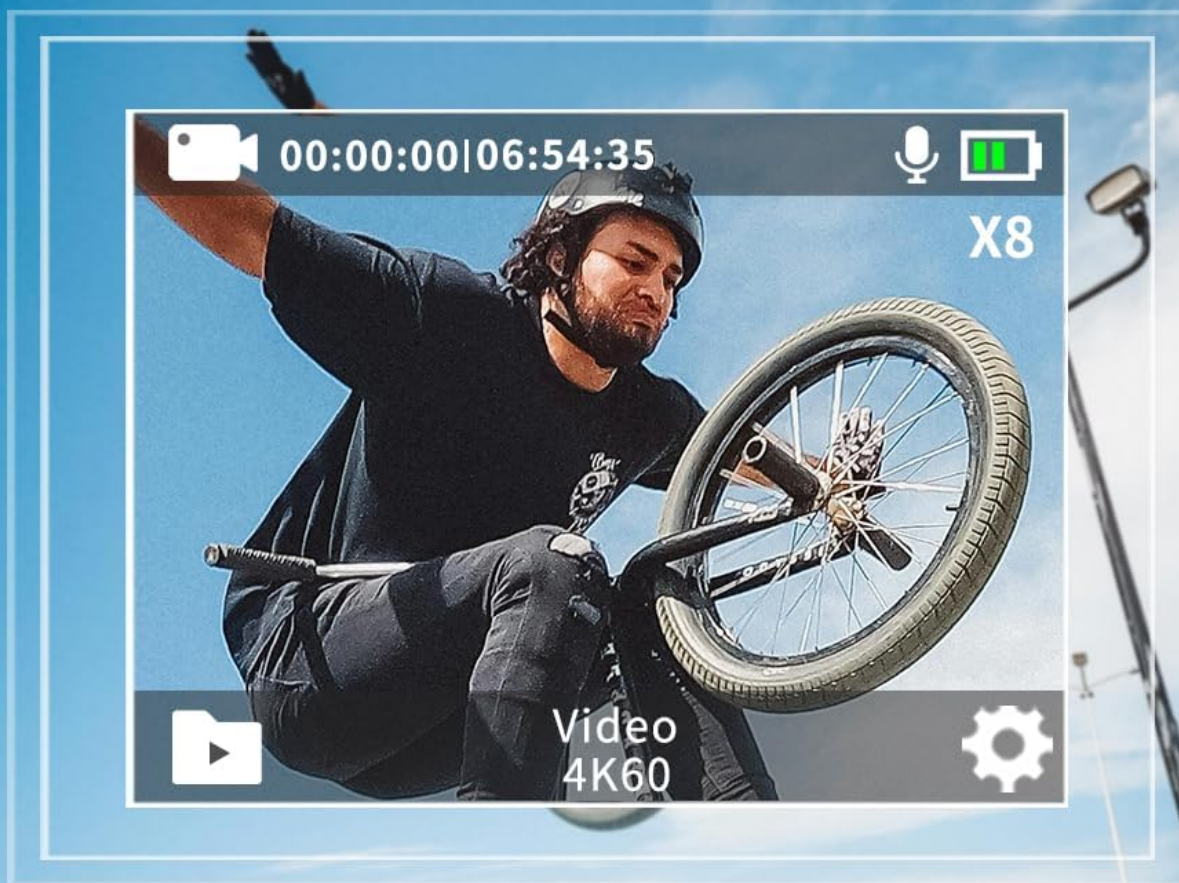


Image: The camera display showing 8x digital zoom in action during a sports activity.

5. Wi-Fi Connection & App

Connect your Apexcam M80 to your smartphone or tablet via Wi-Fi for remote control, live preview, and easy sharing of your content.

1. Download the official Apexcam app from your device's app store.
2. Enable Wi-Fi on your camera through the settings menu.
3. On your smartphone, connect to the camera's Wi-Fi network (SSID and password will be displayed on the camera screen).
4. Open the Apexcam app to control the camera and view media.

WiFi Connection

Share your wonderful moment easily



Image: Apexcam M80 connected via Wi-Fi to a smartphone, showing the app interface.

6. Remote Control

The 2.4G wireless remote control allows you to start/stop recording or take photos from a distance of up to 10 meters. Wear it on your wrist for convenient access. Note that the remote is splash-resistant, not fully waterproof for diving.



Image: The Apexcam M80 camera and its wireless remote control, emphasizing Wi-Fi functionality.

7. Settings Menu

Access the settings menu to customize various camera parameters, including video resolution, photo resolution, loop recording, time-lapse, slow motion, exposure, white balance, and more. Use the Up/Down buttons to navigate and the Shutter/OK button to select.

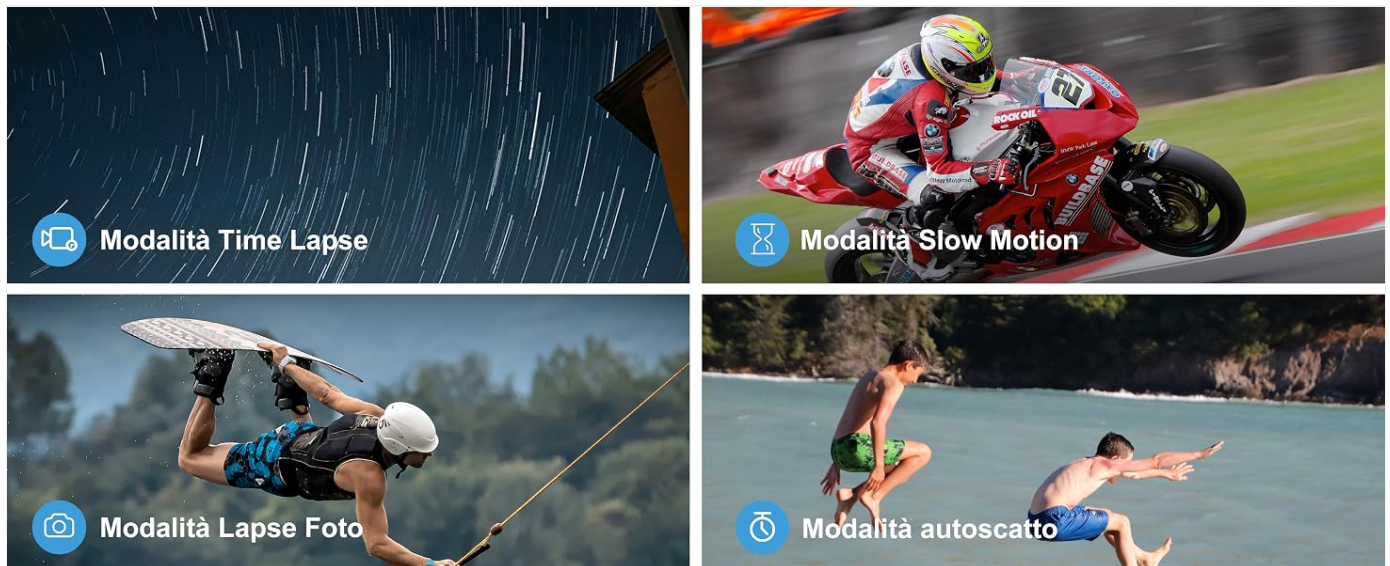


Image: A collage showcasing various sports, illustrating the camera's adaptability for different activities and shooting modes like Time Lapse and Slow Motion.

MAINTENANCE

1. Cleaning

- Use a soft, lint-free cloth to clean the camera lens and screen.
- For the waterproof case, rinse with fresh water after saltwater use and allow to air dry.

- Avoid using chemical cleaners, which may damage the camera or case.

2. Battery Care

- Store batteries in a cool, dry place.
- Do not expose batteries to extreme temperatures or direct sunlight.
- Charge batteries fully before extended storage and recharge every few months to maintain battery health.

3. Storage

When not in use, store the camera and accessories in a protective case to prevent damage from dust, moisture, and impacts.

TROUBLESHOOTING

Problem	Possible Solution
Camera does not power on.	Ensure the battery is fully charged and correctly inserted. Try using the second battery.
Cannot record video or take photos.	Check if the MicroSD card is inserted correctly and has sufficient free space. Format the card if necessary.
Poor image/video quality.	Ensure the lens is clean. Check resolution settings. Ensure adequate lighting.
Wi-Fi connection issues.	Restart both the camera and your smartphone. Ensure the app is up to date. Check Wi-Fi settings on both devices.
Water leakage in waterproof case.	Immediately remove the camera. Check the O-ring seal for dirt, hair, or damage. Ensure the latches are fully closed. Perform a dry test before next use.

SPECIFICATIONS

Feature	Detail
Brand	Apexcam
Model Number	M80
Video Capture Resolution	4K (3840 pixels effective video resolution)
Effective Still Image Resolution	48 MP (64 MP effective non-moving image resolution)
Photo Sensor Technology	CMOS
Screen Size	2 inches (UHD Max Screen Resolution)
Connectivity Technology	Bluetooth, Wi-Fi
Water Resistance Level	Waterproof (up to 40 meters with case)
Image Stabilization	Dynamic (EIS)
Digital Zoom	8x

Feature	Detail
Lens Type	Wide-angle
Focus Type	Automatic
Flash Memory Type	Micro SD (64 GB installed, C10, U3, V30 speed class recommended)
Video Capture Format	MP4 (MOV file format)
Supported Audio Format	AAC
Batteries	2 x 1350mAh rechargeable batteries (included)
Item Dimensions (DxWxH)	11.1 x 7.3 x 20.6 cm
Recommended Uses	Outdoor activities
Country of Origin	China

WARRANTY AND SUPPORT

The Apexcam M80 Action Camera comes with a **2-year warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use.

For technical support, warranty claims, or any questions regarding your product, please refer to the official Apexcam website or contact their customer service directly. Contact information can typically be found on the product packaging or the manufacturer's website.

For additional resources and FAQs, visit the [Apexcam Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DNJRLJQ7>

More documents and user manuals: <https://manuals.plus/>