

## DCOLOR EU014AB

# Dcolor TV Remote Control User Manual

Model: EU014AB

## INTRODUCTION

This manual provides comprehensive instructions for the Dcolor Universal TV Remote Control, Model EU014AB. This remote is designed to offer seamless control over various entertainment devices, including TVs and compatible Dcolor ATSC TV Tuners. Its ergonomic design and intuitive layout ensure ease of use for navigating menus, adjusting volume, changing channels, and controlling playback functions.





Image: The Dcolor Universal TV Remote Control, showcasing its sleek black design and button layout.

## SETUP

---

### 1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery cover.
3. Insert 1 AAA battery, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery cover securely.

### 2. Compatibility and Initial Use

This remote is designed for universal compatibility with most major TV brands and specifically with Dcolor ATSC TV Tuners. No complex programming is typically required for basic functions with compatible Dcolor devices. For other TV brands, the remote may automatically detect and control the device, or refer to the "Remote Control Code" section for advanced setup if needed.

# COMPATIBLE for DCOLOR

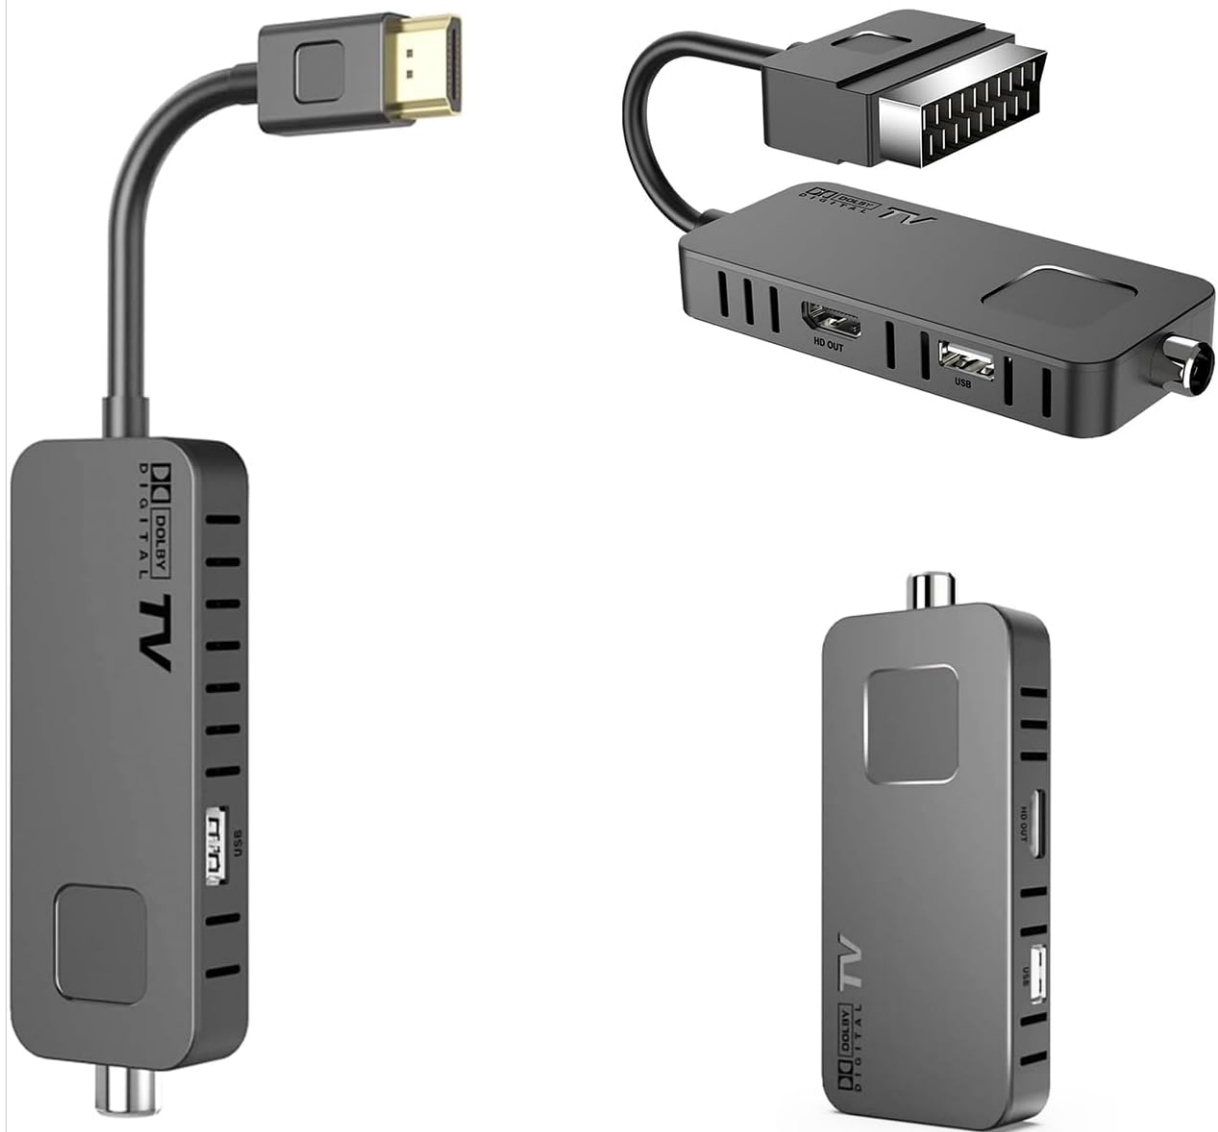 


Image: The Dcolor remote control shown alongside compatible Dcolor TV tuner devices, illustrating its intended use.

## OPERATING INSTRUCTIONS

The Dcolor remote control features a comprehensive layout for intuitive operation. Below is a guide to its primary functions:



Image: A detailed view of the Dcolor remote control, highlighting key buttons and their corresponding functions for TV and decoder control.

- **Power Button** (●): Turns the connected device on or off.
- **SET**: Used for advanced settings or programming.
- **TV/AV**: Switches between TV and AV input modes.
- **VOL+/-**: Adjusts the volume level.
- **CH+/-**: Changes channels up or down.
- **Navigation Pad (Up, Down, Left, Right, OK)**: Navigates through menus and confirms selections.
- **MENU**: Opens the main menu of the device.
- **EXIT**: Exits the current menu or screen.
- **PVR**: Accesses Personal Video Recorder functions.
- **V-FORMAT**: Changes video format settings.
- **ASPECT**: Adjusts screen aspect ratio.
- **TIMER**: Sets sleep timers or recording timers.
- **Playback Controls (Play/Pause, Stop, Rewind, Fast Forward, Previous, Next)**: Controls media playback.
- **EPG**: Displays the Electronic Program Guide.
- **SUB-T**: Toggles subtitles on/off.

- **RECALL:** Recalls the previously viewed channel.
- **INFO:** Displays information about the current program.
- **AUDIO:** Selects audio tracks or modes.
- **FAV:** Accesses favorite channels list.
- **TTX:** Activates Teletext.
- **REC:** Initiates recording.
- **PAGE+/-:** Navigates through pages in menus or guides.
- **Number Buttons (0-9):** Directly enters channel numbers.
- **TV/RADIO:** Switches between TV and Radio modes.

### Remote Control Code (Advanced Setup)

For specific programming or if the remote does not automatically control your device, refer to the remote control code diagram. This diagram illustrates the internal codes corresponding to various buttons, which may be used for manual programming with certain devices or universal remote setup guides.

# REMOTE CONTROL CODE



Image: A diagram showing the internal code mapping for various buttons on the Dcolor remote control, useful for advanced programming.

## MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's responsiveness decreases. Always use new AAA batteries and dispose of old batteries responsibly.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Durability:** While designed for durability, avoid dropping the remote or exposing it to excessive force or moisture.

## TROUBLESHOOTING

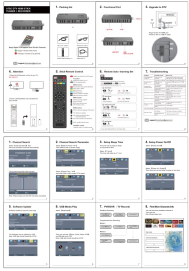
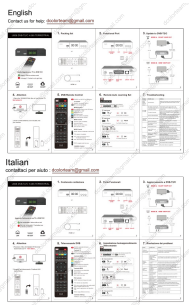
Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly inserted batteries. Obstruction between remote and device. Remote out of range.	Check battery polarity and replace if necessary. Ensure clear line of sight to the device's IR receiver. Move closer to the device.
Certain buttons not working.	Button stuck or damaged. Device not compatible with specific function.	Gently press the button to ensure it's not stuck. Verify if the function is supported by your device.
Remote controls wrong device.	Interference from other remotes. Incorrect device selected (if applicable).	Ensure only one remote is being used at a time. If your device has multiple input modes, ensure the correct one is selected.

## SPECIFICATIONS





- **Model Number:** EU014AB
- **Product Dimensions:** 7.09 x 1.78 x 0.78 inches
- **Item Weight:** 2.12 ounces
- **Batteries Required:** 1 AAA battery
- **Compatible Devices:** Television (specifically Dcolor ATSC TV Tuners and most major TV brands)
- **Special Features:** Infrared Technology, Multi-device Control, Universal Programming
- **Color:** Black

© 2024 DCOLOR. All rights reserved.  
For support, please visit the [DCOLOR Store on Amazon](#).

## Related Documents - EU014AB

	<p><a href="#">ATSC DTV HDMI Stick Tuner + Recorder User Guide</a></p> <p>Comprehensive guide for the ATSC DTV HDMI Stick Tuner + Recorder, covering setup, remote control functions, channel search, software updates, recording, and troubleshooting. Learn how to enjoy free over-the-air digital TV channels.</p>
	<p><a href="#">Dcolor DVB-T2/C H.265 User Manual</a></p> <p>User manual for the Dcolor DVB-T2/C H.265 receiver, detailing packing list, functional ports, software updates, attention points, remote control functions, auto-learning setup, and troubleshooting.</p>



	<p><a href="#"><u>Dcolor DVB-S/S2 HDMI TV Stick: User Guide and Setup</u></a></p> <p>Learn how to set up and use your Dcolor DVB-S/S2 HDMI TV Stick for enhanced TV viewing. Includes packing list, port descriptions, setup instructions, remote control guide, and troubleshooting tips.</p>
	<p><a href="#"><u>Dcolor GD1 4K Android TV Stick: Features, Specifications, and Setup Guide</u></a></p> <p>Comprehensive overview of the Dcolor GD1 4K Android TV Stick, detailing its features, technical specifications, connectivity options, and setup instructions for an enhanced TV experience. Includes information on Google Assistant and Chromecast built-in.</p>
	<p><a href="#"><u>DCOLOR High Definition Digital Terrestrial Receiver H.265 DVB-T2 TV Stick User Manual</u></a></p> <p>User manual for the DCOLOR High Definition Digital Terrestrial Receiver H.265 DVB-T2 TV Stick, providing setup, operation, and troubleshooting information in English and Italian.</p>
	<p><a href="#"><u>EU005 DVB-T2/C TV REC BOX User Manual and Setup Guide</u></a></p> <p>This guide provides comprehensive instructions for setting up and using the EU005 DVB-T2/C TV REC BOX. It covers the packing list, functional ports, upgrading to DVB-T2, remote control operation, auto-learning setup, and troubleshooting tips.</p>