

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Apexcam](#) /

› [Apexcam Action Camera M80 User Manual](#)

Apexcam M80

Apexcam Action Camera M80 User Manual

Model: M80 | Brand: Apexcam

INTRODUCTION

Welcome to the Apexcam Action Camera M80 user manual. This guide provides detailed instructions for setting up, operating, and maintaining your new action camera. The M80 is designed to capture high-quality 4K/60FPS videos and 48MP photos, featuring 8X digital zoom, Wi-Fi connectivity, and a robust waterproof design for various adventures.

WHAT'S IN THE BOX

Your Apexcam Action Camera M80 package includes the following items:

- Apexcam Action Camera M80
- Waterproof Case
- 2 x 1350mAh Rechargeable Batteries
- 64GB MicroSD Card
- Remote Control
- Battery Charger with Card Reader Function
- USB-C Charging Cable
- Various Mounting Accessories (helmet mounts, handlebar mount, clips, adhesive pads, etc.)
- User Manual

Various Accessories



Figure 1: Contents of the Apexcam Action Camera M80 package.

SETUP

Battery Installation and Charging

Before first use, ensure the batteries are fully charged. The camera comes with two 1350mAh rechargeable batteries and a dual battery charger that also functions as a MicroSD card reader.

1. Open the battery compartment cover located at the bottom of the camera by pushing the latch outwards.
2. Insert a charged battery into the camera, ensuring the slot faces the screen, and push it inwards until it

clicks into place.

3. To charge the batteries, insert them into the provided charging case. Connect the charging case to a USB power source using the USB-C cable. The indicator lights on the charger will show the charging status.

Video 1: Demonstration of USB charging and battery installation for the M80 series camera.



Figure 2: Battery insertion into the Apexcam Action Camera M80.

MicroSD Card Installation

The camera supports MicroSD cards up to 64GB. A 64GB card is included in your package.

1. Locate the MicroSD card slot next to the battery compartment.
2. Insert the MicroSD card with the gold contacts facing the back of the camera until it clicks into place.
3. To remove, gently push the card inwards until it pops out.

Waterproof Case Usage

The included waterproof case allows the camera to be submerged up to 40 meters (131 feet), making it ideal for water sports and underwater recording.

1. Ensure the camera is dry before placing it into the waterproof case.
2. Open the latch on the top of the case and gently place the camera inside.
3. Close the latch securely, ensuring a tight seal. Always test the case without the camera first to ensure it is waterproof.

Native 4K 60FPS Action Camera

Professional M80 action camera can record your highlights moments smoothly



Figure 3: Apexcam Action Camera M80 in its waterproof housing.

Mounting Accessories

The camera comes with a variety of mounts for different activities. These include helmet mounts, a handlebar mount for bikes, and adhesive pads for flat surfaces.

Waterproof up to 40M



Figure 4: Camera mounted on a helmet using included accessories.

OPERATING THE CAMERA

Basic Operation

The camera features a touchscreen for easy navigation. You can also use the physical buttons on the side and top of the camera.

- **Power On/Off:** Press and hold the power button on the top of the camera.
- **Mode Selection:** Tap the mode icon on the touchscreen or use the power button to cycle through Video,

Photo, Slow Motion, Time Lapse, Self-Timer, and Photo Lapse modes.

- **Shutter/OK:** Press the shutter button on the top to start/stop recording or confirm selections.

Remote Control

The included 2.4G remote control allows for convenient operation from a distance of up to 15 meters. Note: The remote is not waterproof.

- Ensure the remote control function is enabled in the camera's system settings.
- Press the video button on the remote to start/stop video recording.
- Press the photo button on the remote to take photos.

Video 2: Demonstration of the wireless remote control for the M80 series camera.

Wi-Fi Connection

Connect your camera to your smartphone or tablet via Wi-Fi using the