

ADVWIN x1

ADVWIN 2 Burner Electric Cooktop (Model x1) Instruction Manual

Model: x1

IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the appliance. Keep this manual for future reference.

- **Hot Surface Warning:** The cooktop surface will be hot after cooking. Do not touch with bare hands until it has cooled down.
- **Child Safety Lock:** This appliance includes a child safety lock feature to prevent accidental operation.
- **Over-Temperature Protection:** The cooktop is equipped with an over-temperature protection system to prevent overheating.
- **Automatic Shutdown:** The 99-minute timer function includes an automatic shutdown feature for safety.
- **Residual Heat Warning:** An indicator will show when residual heat is present on the cooking zones.

PRODUCT OVERVIEW



Figure 2: The cooktop can be installed flush with a countertop or used as a portable unit with attached feet.

Countertop Use

- Attach the four small foot pads to the bottom of the cooktop using a screwdriver.
- Place the cooktop on a stable, flat, and heat-resistant surface.
- Ensure adequate ventilation around the unit.

Built-in Installation

- Ensure the opening size in your countertop is correct. The recommended cut-out size is 28 x 19.9 inches.
- Consult a qualified electrician for proper wiring and installation to meet local electrical codes.

Electrical Connection

- The cooktop operates on a standard 110-120V, 50-60Hz electrical supply.
- Plug the appliance into a grounded electrical outlet.

OPERATING INSTRUCTIONS

Powering On/Off

- To turn on a burner, press the corresponding 'ON/OFF' button.
- To turn off a burner, press the corresponding 'ON/OFF' button again.

Adjusting Power Levels

The cooktop offers 9 power levels for precise temperature control.

Power Levels

Multiple cooking modes to create a variety of delicious

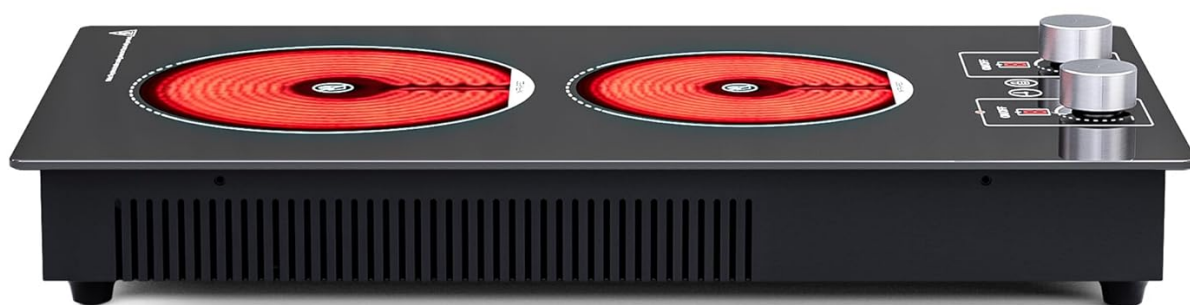
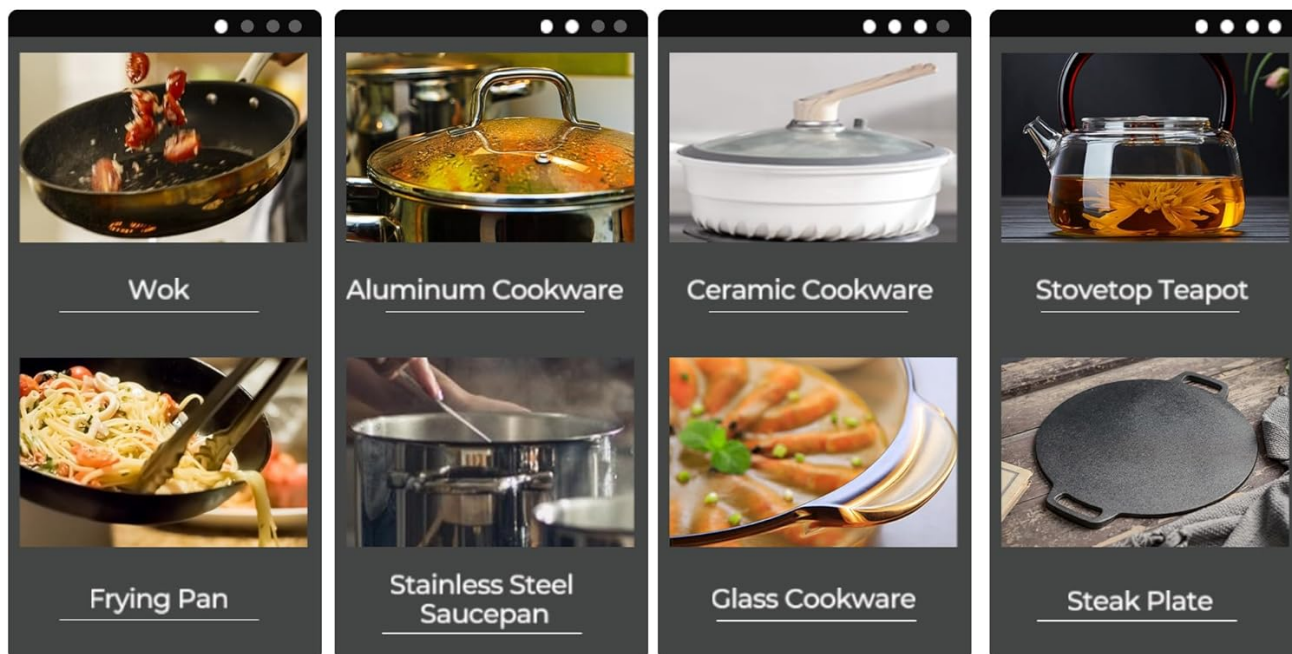 


Figure 3: The cooktop features 9 power levels, suitable for diverse cooking methods from simmering to high-heat searing.

- After turning on a burner, use the rotary knob to select the desired power level from 1 to 9.
- Level 1 is the lowest heat setting, and Level 9 is the highest.
- The left burner provides up to 1600W, and the right burner provides up to 800W.

Timer Function

The integrated timer allows you to set a cooking duration up to 99 minutes.

- Press the timer button (clock icon) to activate the timer.
- Use the rotary knobs to adjust the desired time.

- The cooktop will automatically shut off once the set time has elapsed.

Child Safety Lock

To activate the child safety lock, press and hold the lock button (padlock icon) for approximately 3 seconds. The display will show 'LO' to indicate it is locked. To deactivate, repeat the process.

Cookware Compatibility

This electric cooktop is compatible with a wide range of cookware types, including:



Figure 4: The cooktop supports various cookware materials, ensuring versatility in your kitchen.

- Iron
- Stainless Steel
- Casseroles
- Aluminum
- Copper
- Glass
- Grill Pans
- Ceramics

MAINTENANCE AND CLEANING

The ceramic glass surface of the cooktop is designed for easy cleaning.

- Always ensure the cooktop is turned off and completely cooled before cleaning.
- Wipe the ceramic glass surface with a damp cloth and mild detergent.
- For stubborn stains, use a non-abrasive ceramic cooktop cleaner.
- Avoid using abrasive sponges, scouring pads, or harsh chemicals that could scratch or damage the surface.
- Clean the control knobs and surrounding areas with a soft, damp cloth.

TROUBLESHOOTING

If you encounter issues with your ADVWIN Electric Cooktop, please refer to the following common troubleshooting steps:

- **Appliance not turning on:** Check if the cooktop is properly plugged into a working electrical outlet. Ensure the power button for the desired burner has been pressed.

- **No heat from burner:** Verify that the power level is set above '0'. Ensure the child safety lock is not activated.
- **Error codes on display:** If an error code appears, unplug the unit for a few minutes and then plug it back in. If the error persists, contact customer support.
- **Uneven heating:** Ensure your cookware has a flat bottom and is centered on the heating zone.

For issues not covered here, please contact customer support.

SPECIFICATIONS

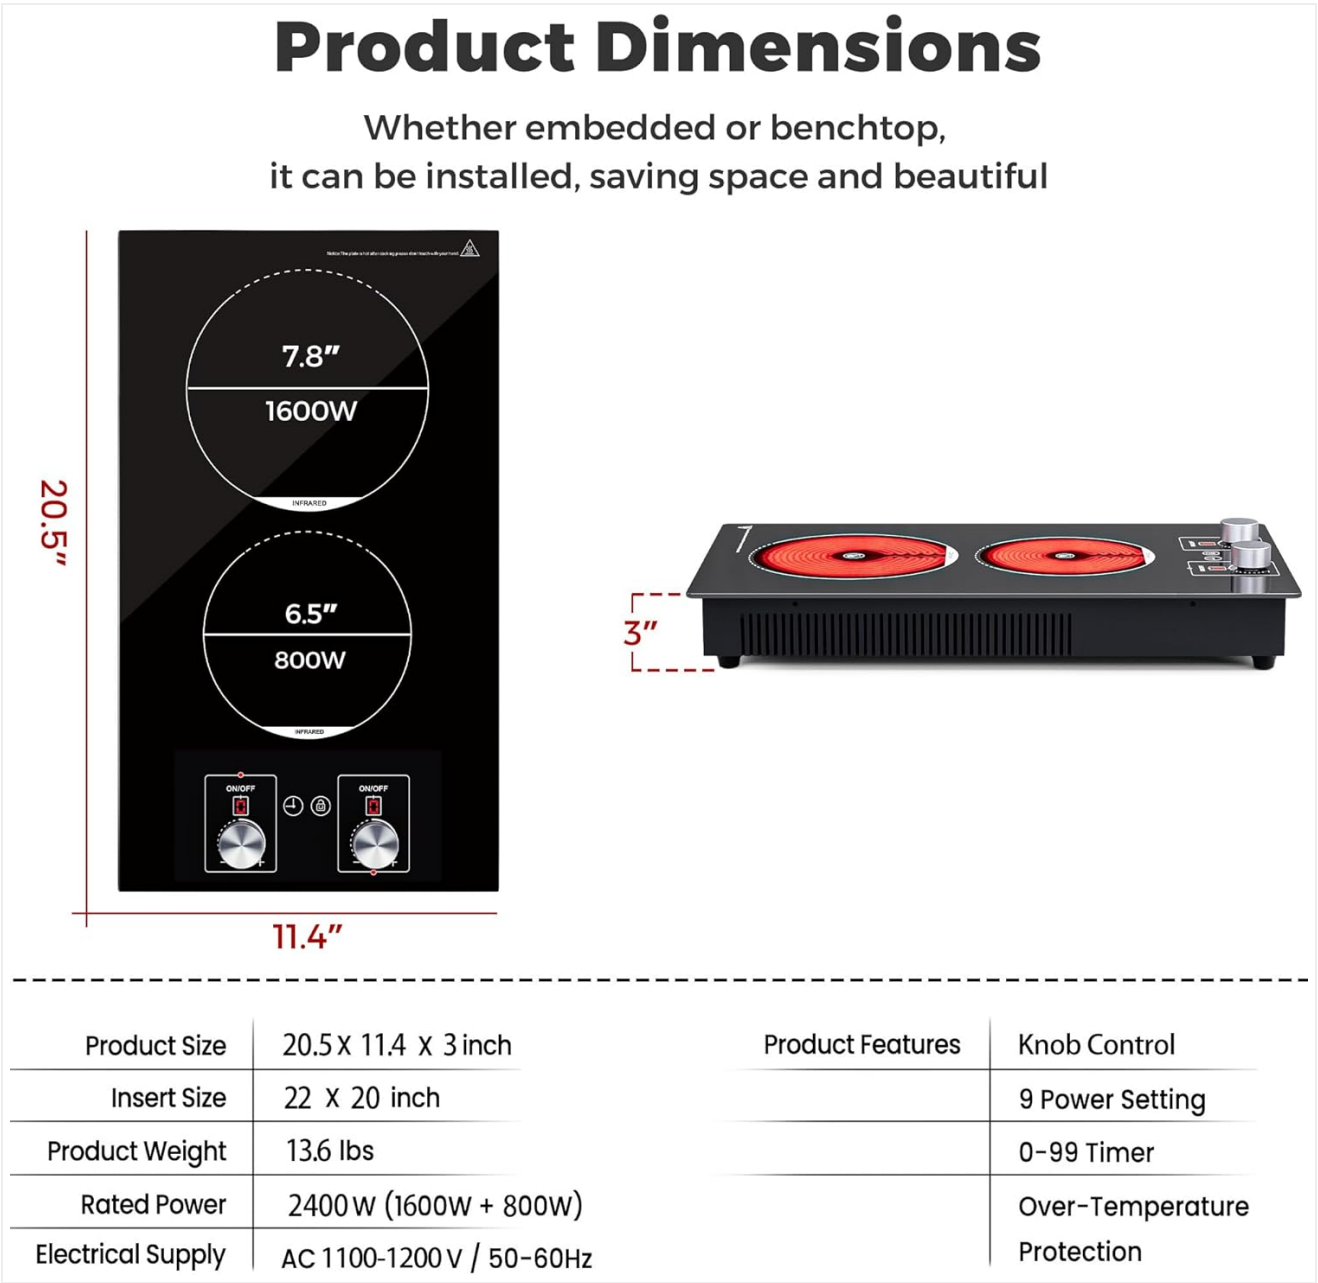 


Figure 5: Key specifications and dimensions of the ADVWIN 2 Burner Electric Cooktop.




Feature	Detail
Brand	ADVWIN
Model	x1
Item Weight	12 pounds
Product Dimensions	20.4 x 11.42 x 2.95 inches

 



Installation Type	Drop-In, Freestanding
Burner Type	2
Heating Elements	2
Color	Black
Wattage	2400 watts (1600W + 800W)
Fuel Type	Electric
Electrical Supply	AC 110-120V / 50-60Hz
Heater Surface Material	Glass Ceramic
Control Type	Knob Control
Included Components	1*Electric Cooktop

WARRANTY AND SUPPORT

Specific warranty details and customer support contact information are not provided in the available product data. Please refer to the product packaging or the manufacturer's official website for the most up-to-date warranty terms and support contacts.

Related Documents - x1

<p>USER MANUAL</p> <p>PORTABLE NUGGET ICE MAKER</p>  <p>Model 140301900</p> <p><small>It is important that you read these instructions carefully and follow the safety instructions and warnings to ensure safe operation.</small></p>	<p>Portable Nugget Ice Maker User Manual (Model 140301900)</p> <p>This user manual provides essential information for operating and maintaining your Portable Nugget Ice Maker, Model 140301900. Includes safety instructions, setup guide, operational procedures, cleaning steps, troubleshooting tips, and technical specifications.</p>
<p>PORTABLE AUTOMATIC ICE MAKER</p>  <p>MODEL 140301300</p> <p><small>It is important that you read these instructions carefully and follow the safety instructions and warnings to ensure safe operation.</small></p>	<p>Portable Automatic Ice Maker Instruction Manual - Model 140301300</p> <p>This instruction manual provides essential information for the ADVWIN Portable Automatic Ice Maker (Model 140301300). It covers safety precautions, setup, operation, cleaning, maintenance, troubleshooting, and technical specifications to ensure optimal performance and user safety.</p>
<p>Portable Household Ice Maker User Manual</p>  <p><small>*Read care for the details for the model. This user manual is for the model 140301300. It is not applicable to other models. For the proper use and maintenance of this product, please read the instructions carefully. The instructions and warnings are for the model 140301300. The instructions and warnings are for the model 140301300. The instructions and warnings are for the model 140301300.</small></p>	<p>Portable Household Ice Maker User Manual</p> <p>User manual for the Portable Household Ice Maker, providing instructions on operation, cleaning, maintenance, and troubleshooting.</p>

<div><div>UPRIGHT FREEZER</div><div>USER'S MANUAL</div><div></div><div>Model BD-88-E 141100200 141100400</div></div>	<div>Upright Freezer User Manual - BD-88-E Installation, Operation, Safety & Care</div> <div>Comprehensive user manual for the ADVWIN BD-88-E upright freezer. Covers important safety instructions, installation, operation, features, defrosting, cleaning, food storage, and troubleshooting for optimal use and maintenance.</div>
<div><div>MUSICAL BOXING PRO</div><div></div><div></div></div>	<div>Musical Boxing Pro: Smart Music Wall Mounted Boxing Training Machine User Manual</div> <div>Learn how to set up and operate the Musical Boxing Pro, a smart music wall-mounted boxing training machine for home workouts and stress relief. Includes technical data, operation guide, assembly instructions, and safety precautions.</div>
<div><div></div></div>	<div>Portable Washing Machine User Manual</div> <div>This manual provides instructions and specifications for the Advwin portable washing machine, covering its electrical principle, parts, operation, maintenance, and troubleshooting.</div>