



Manuals.plus /

› Videocon /

› Videocon Storm 6.5kg Semi-Automatic Top-Loading Washing Machine User Manual

Videocon Storm 6.5kg

Videocon Storm 6.5kg Semi-Automatic Top-Loading Washing Machine User Manual

Model: Storm 6.5kg

[Introduction](#)

[Safety Instructions](#)
[Troubleshooting](#)

[Product Overview](#)
[Specifications](#)

[Setup](#) [Operation](#)
[Warranty & Support](#)

[Maintenance](#)

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Videocon Storm 6.5kg Semi-Automatic Top-Loading Washing Machine. Please read these instructions carefully before using the appliance and retain them for future reference. Proper use and maintenance will ensure optimal performance and extend the lifespan of your washing machine.

2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Ensure the power supply voltage matches the rating label on the machine.
- Do not operate the machine with a damaged power cord or plug.
- Keep children and pets away from the machine during operation.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Unplug the machine before cleaning or performing any maintenance.
- Do not wash items that are soiled with flammable substances.
- Ensure the machine is placed on a stable, level surface.
- Do not open the spin tub lid until the tub has completely stopped.

3. PRODUCT OVERVIEW

Familiarize yourself with the main components of your washing machine.



Figure 1: Front view of the Videocon Storm 6.5kg Semi-Automatic Top-Loading Washing Machine. This image displays the overall design, including the wash tub, spin tub, control panel, and water inlet.

- **Wash Tub:** Where clothes are washed.
- **Spin Tub:** For drying clothes by spinning.
- **Control Panel:** Contains knobs for wash timer, wash program, drain selector, and spin timer.
- **Water Inlet:** For connecting the water supply hose.
- **Drain Hose:** For discharging wastewater.
- **Lids:** Separate lids for the wash tub and spin tub.

4. SETUP

4.1 Unpacking

1. Carefully remove the washing machine from its packaging.
2. Remove all packing materials, including the base packaging.
3. Inspect the machine for any damage incurred during transit. Contact your dealer immediately if damage is found.

4.2 Placement

- Place the machine on a firm, level surface to minimize vibration and noise during operation.
- Ensure there is adequate space around the machine for ventilation and ease of use.
- Avoid direct sunlight or placing the machine in excessively damp areas.

4.3 Water Connection

1. Connect the water inlet hose to a water tap.
2. Ensure the connection is secure to prevent leaks.
3. Position the drain hose to allow for proper water drainage. It should be placed lower than the machine's base or into a drain pipe.

4.4 Power Connection

- Plug the power cord into a grounded electrical outlet.

- Do not use extension cords or adapters.

5. OPERATING INSTRUCTIONS

5.1 Preparing Laundry

- Sort clothes by fabric type, color, and degree of soiling.
- Empty pockets and close zippers and hooks.
- For delicate items, use a mesh laundry bag.

5.2 Washing Cycle

1. Load clothes into the wash tub, ensuring not to overload (maximum 6.5 kg).
2. Add appropriate amount of detergent to the wash tub.
3. Fill the wash tub with water to the desired level using the water inlet.
4. Select the desired wash program (e.g., Gentle, Normal, Heavy) using the control knob.
5. Set the wash timer for the required duration. The machine will start washing.
6. Once the wash cycle is complete, drain the water by setting the drain selector.

5.3 Rinsing Cycle

1. After draining, refill the wash tub with clean water.
2. Run a short wash cycle (e.g., 3-5 minutes) to rinse the clothes.
3. Drain the rinse water. Repeat if necessary for thorough rinsing.

5.4 Spin Drying Cycle

1. Transfer the rinsed clothes to the spin tub. Distribute them evenly to prevent imbalance.
2. Close the inner and outer spin tub lids securely.
3. Set the spin timer for the desired duration (e.g., 1-5 minutes).
4. The spin tub will rotate to remove excess water. Do not open the lid until the tub has completely stopped.
5. Once spinning is complete, carefully remove the clothes.

6. MAINTENANCE

6.1 Cleaning the Exterior

- Wipe the exterior of the machine with a soft, damp cloth.
- Do not use abrasive cleaners, solvents, or harsh chemicals.

6.2 Cleaning the Lint Filter

- Locate the lint filter inside the wash tub (if applicable).
- Remove the filter and clean out any accumulated lint and debris.
- Rinse the filter under running water and reinsert it securely.
- Clean the lint filter regularly to ensure efficient washing.

6.3 Winter Storage (if applicable)

- If storing the machine in an area where temperatures may drop below freezing, drain all water from

the hoses and tubs to prevent damage.

7. TROUBLESHOOTING

Before contacting service, refer to the following table for common issues and solutions.

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged; Power outage; Lid not closed properly.	Check power connection; Check household fuse/breaker; Ensure lids are securely closed.
Water does not drain	Drain hose kinked or blocked; Drain selector not set to drain.	Straighten drain hose, clear blockages; Set drain selector to "Drain".
Excessive vibration/noise during spin	Machine not level; Uneven load in spin tub.	Adjust machine to be level; Redistribute clothes evenly in spin tub.
Water leakage	Water inlet hose loose; Drain hose improperly positioned.	Tighten water inlet hose connections; Ensure drain hose is correctly placed.

8. SPECIFICATIONS

Feature	Detail
Brand	Videocon (Manufacturer) / Generic (Brand listed)
Model	Storm 6.5kg Semi-Automatic Top-Loading Washing Machine
Capacity	6.5 kg
Type	Semi-Automatic, Top-Loading
Product Dimensions (LxWxH)	100 x 50 x 100 cm
Item Weight	6 kg
ASIN	B0DNJTK9DX

9. WARRANTY AND SUPPORT

9.1 Warranty Information

This Videocon Storm washing machine comes with a **1 Year Warranty** from the date of purchase. The warranty covers manufacturing defects under normal use. Please retain your purchase receipt as proof of purchase for warranty claims. The warranty does not cover damage caused by improper installation, misuse, accidents, or unauthorized repairs.

9.2 Customer Support

For technical assistance, service requests, or inquiries regarding your warranty, please contact the manufacturer's customer support. Refer to your purchase documentation or the manufacturer's official website for contact details.

