

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [SERWALL](#) /

› [SERWALL 33" Propane Fire Pit Table Instruction Manual](#)

SERWALL fire table

SERWALL 33" Propane Fire Pit Table Instruction Manual

Model: fire table

INTRODUCTION

Thank you for choosing the SERWALL 33" Propane Fire Pit Table. This manual provides essential information for the safe assembly, operation, and maintenance of your fire pit. Please read all instructions carefully before use and retain this manual for future reference.

IMPORTANT SAFETY INFORMATION

WARNING: Failure to follow these instructions could result in fire, explosion, or burn hazard, which could cause property damage, personal injury, or death.

- Maintain a safe distance from combustible materials.
- Do not leave the fire pit unattended during operation.
- Always extinguish the fire before leaving the area or going to sleep.
- Store fuel canisters upright and away from heat sources when not in use.
- Never dispose of used fuel canisters in a fire.
- Ensure adequate ventilation when operating the fire pit.
- Keep children and pets away from the fire pit.
- Do not use the fire pit in enclosed spaces.
- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

PRODUCT OVERVIEW

The SERWALL Propane Fire Pit Table is designed for outdoor use, providing warmth and ambiance. Key features include a 50,000 BTU heat output, a glass wind guard, a removable lid for versatile use, and a user-friendly pull-out shelf for the propane tank.

Components:

- Fire Pit Table Base
- Stainless Steel Burner

- Glass Wind Guard
- Removable Lid
- Fire Glass (6.6 lbs)
- Propane Tank Pull-out Shelf
- Pulse Ignition System
- High-Quality Hose and Regulator
- Durable Nylon Cover
- Adjustable Feet

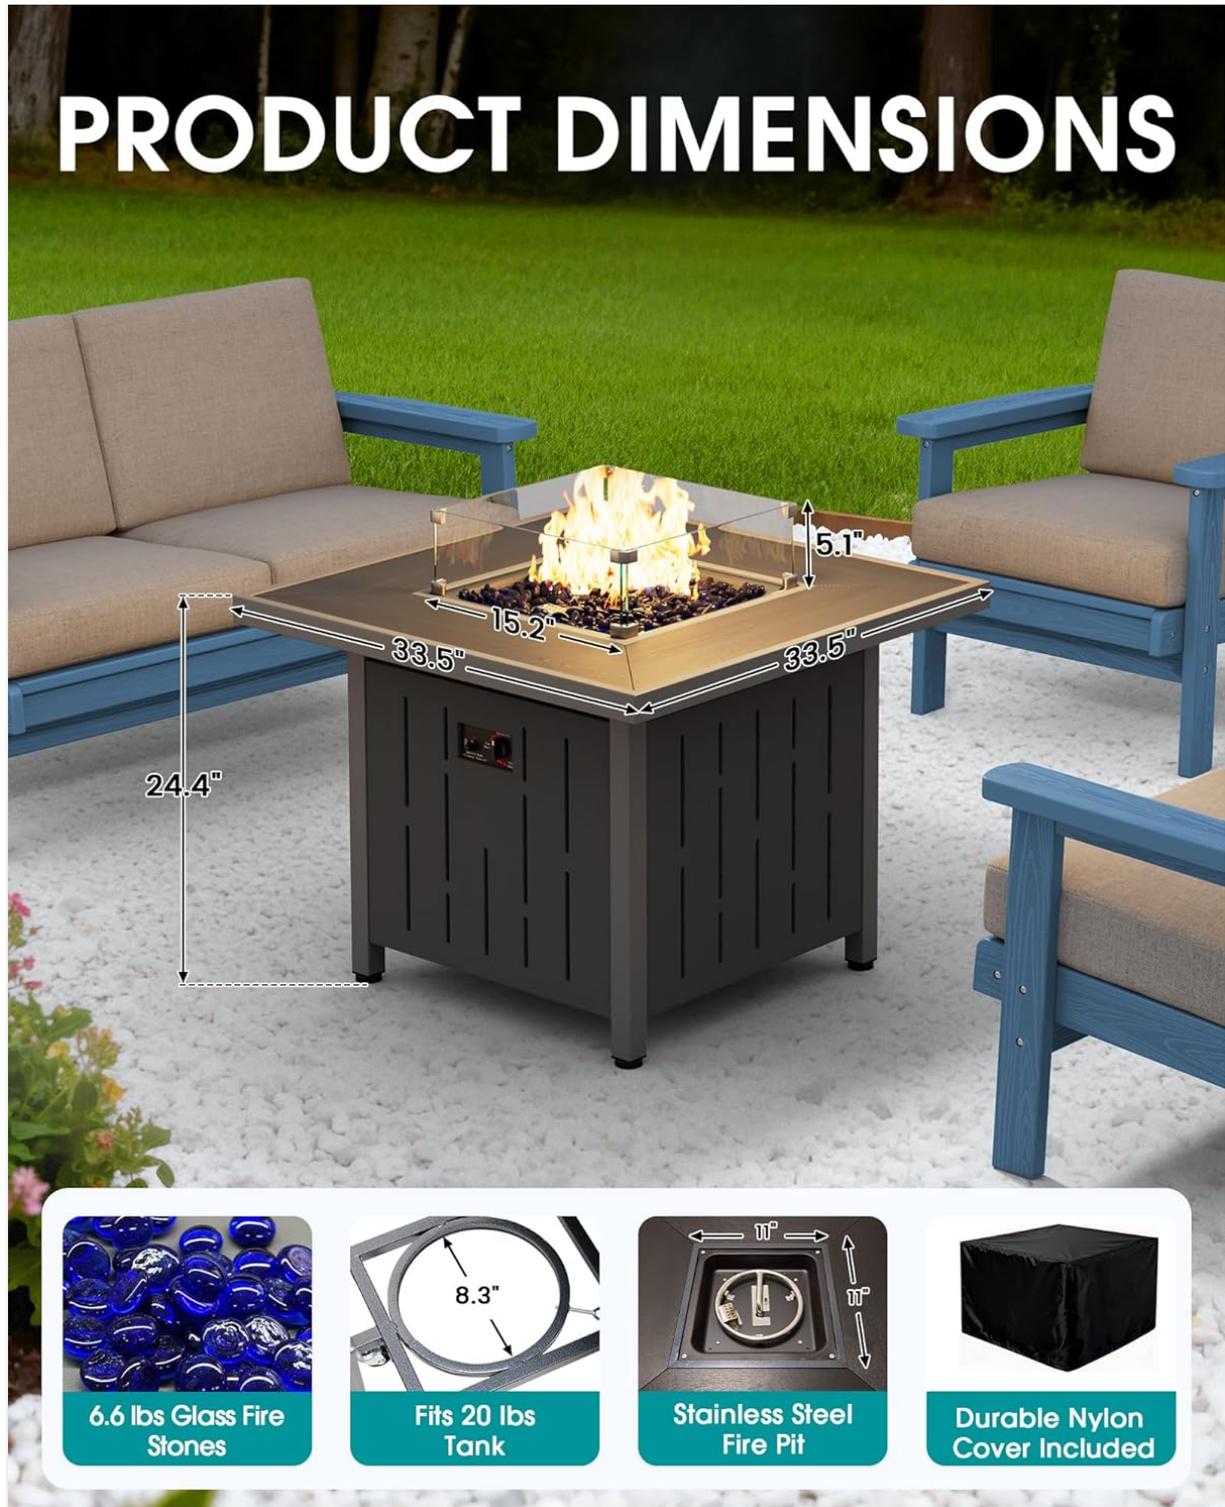


Figure 1: Product dimensions of the SERWALL 33" Propane Fire Pit Table. The table measures 33.5"L x 33.5"W x 24.4"H, with a fire pot size of 11"L x 11"W x 2.4"D.

ASSEMBLY INSTRUCTIONS

The fire pit table is designed for easy assembly, with most components pre-assembled. Follow the steps below for complete setup. It is recommended to have two people for assembly.

Your browser does not support the video tag.

Video 1: Official SERWALL Propane Fire Pit Table Assembly Guide. This video provides a visual walkthrough of the assembly process.

1. **Unpack Components:** Carefully remove all parts from the packaging and verify against the parts list (not provided in this manual, refer to product packaging).
2. **Assemble Base Structure:** Connect the side panels to the main frame using the provided bolts. Ensure all connections are secure.
3. **Install Control Panel:** Secure the control panel to the designated area on the fire pit table.
4. **Attach Pull-out Shelf:** Install the pull-out shelf mechanism for the propane tank. Ensure it slides smoothly.
5. **Place Burner and Fire Glass:** Position the stainless steel burner in the center opening. Carefully distribute the fire glass around the burner.
6. **Install Glass Wind Guard:** Assemble the glass wind guard panels and secure them around the burner area.
7. **Connect Propane Tank:** Slide a 20 lbs propane tank onto the pull-out shelf. Connect the regulator hose to the propane tank valve, ensuring a tight seal.
8. **Insert AAA Battery:** The pulse ignition system requires one AAA battery (not included). Insert it into the ignition switch compartment.
9. **Adjust Feet:** Use the height-adjustable feet to level the fire pit table on uneven surfaces.

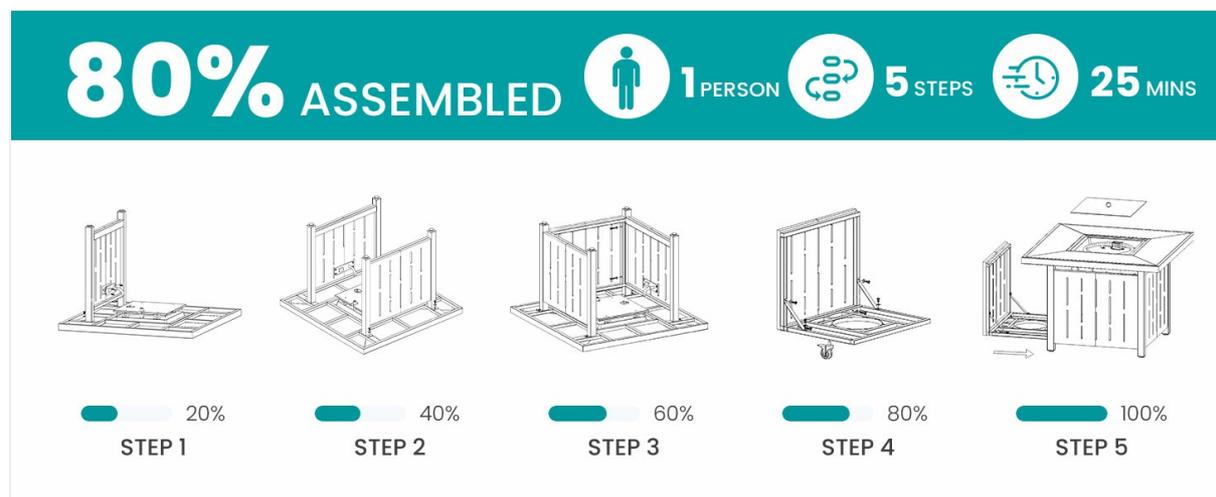


Figure 2: Visual representation of the simplified assembly process, highlighting that 80% of components are pre-assembled for quick setup.

UNINTERRUPTED COMFORT IN ANY WEATHER



Before

After

With high-quality tempered glass, the wind guard offers clarity without obstructing the view

Figure 3: Detail of the pull-out shelf for easy propane tank access and replacement, featuring durable sliding rails, silent rubber wheels, and height-adjustable feet.

OPERATING INSTRUCTIONS

Follow these steps to safely operate your SERWALL Propane Fire Pit Table.

- 1. Before Lighting:** Ensure the propane tank is securely connected and the gas valve is fully open. Check for any gas leaks using a soapy water solution on connections; do not use an open flame.
- 2. Lighting the Fire Pit:**
 - Turn the control knob to the "LOW" position.
 - Press and hold the electronic ignition button. You should hear a clicking sound.

- While holding the ignition button, slowly turn the control knob to the "HIGH" position.
 - Once the burner ignites, continue to hold the ignition button for 10-15 seconds to ensure the flame is established.
 - Release the ignition button. If the flame goes out, repeat the lighting procedure.
3. **Adjusting Flame:** Rotate the control knob between "LOW" and "HIGH" to adjust the flame height and heat output.
4. **Shutting Down:**
- Turn the control knob to the "OFF" position.
 - Close the valve on the propane tank completely.
 - Allow the fire pit to cool down completely before covering or moving.

SAFEGUARD YOUR OUTDOOR MOMENTS


High standard of safety design to ensure safe outdoor time



High-Quality Hose
and Regulator



Pulse Ignition System

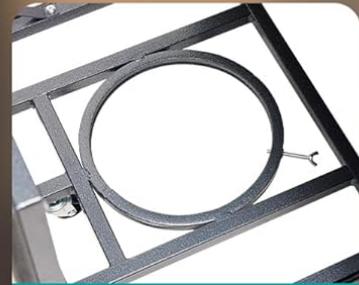

Stable Base Design



Figure 4: The control panel featuring the pulse ignition button and the gas control knob for adjusting flame intensity.

Your browser does not support the video tag.

Video 2: SERWALL 33 Inch Square Propane Fire Pit Table in use, demonstrating its features and ambiance.

MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your fire pit table.

- **Cleaning:** Clean the exterior surfaces with mild soap and fresh water. Avoid abrasive cleaners that may damage the finish. Ensure the fire pit is completely cool before cleaning.
- **Burner Maintenance:** Periodically inspect the burner and gas connections for any blockages or damage. Clean the burner ports with a soft brush if necessary.
- **Storage:** When not in use, especially during inclement weather or off-season, cover the fire pit table with the provided durable nylon cover. Store the propane tank in a well-ventilated area, away from direct sunlight and heat sources.
- **Glass Wind Guard:** Clean the glass panels with a glass cleaner and a soft cloth.



Figure 5: The fire pit table protected by its durable nylon cover, illustrating proper storage during adverse weather conditions.

TROUBLESHOOTING

If you encounter issues with your fire pit table, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Burner does not ignite.	No gas flow, ignition battery dead, clogged burner ports, loose connections.	Check propane tank valve is open. Replace AAA battery. Clean burner ports. Tighten all gas connections.
Low flame or inconsistent flame.	Low propane level, regulator issue, partially clogged burner ports.	Check propane tank level. Ensure regulator is fully connected. Clean burner ports.
Gas odor detected.	Gas leak.	Immediately turn off gas at the tank. Do not operate. Check all connections with soapy water. If odor persists, contact a qualified service technician.

SPECIFICATIONS

- **Product Dimensions:** 33.5"D x 33.5"W x 24.4"H
- **Fire Pot Size:** 11"L x 11"W x 2.4"D
- **Heat Output:** Up to 50,000 BTUs
- **Fuel Type:** Liquefied Petroleum Gas (Propane)
- **Propane Tank Compatibility:** 20 lbs (not included)
- **Tabletop Load Capacity:** 220 lbs
- **Fire Glass Included:** 6.6 lbs
- **Ignition System:** Pulse Ignition (requires 1 AAA battery, not included)
- **Material:** HDPE panels, Stainless steel burner, High-strength metal frame
- **Color:** Black

WARRANTY AND SUPPORT

SERWALL is committed to customer satisfaction. For any product questions, care instructions, or warranty inquiries, please contact our customer support team. Refer to your purchase documentation for specific warranty details.

Contact Information: Please refer to the contact details provided with your purchase or visit the official SERWALL website for support.