

[Manuals.plus](#) /

> [TCL](#) /

> TCL 6.5 kg P6065FLS Fully-Automatic Front Load Washing Machine User Manual

TCL P6065FLS

TCL 6.5 kg P6065FLS Fully-Automatic Front Load Washing Machine User Manual

Model: P6065FLS

Introduction	Safety Instructions	What's in the Box	Setup & Installation	Operating Instructions
	Maintenance	Troubleshooting	Specifications	Warranty & Support

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your new TCL 6.5 kg P6065FLS Fully-Automatic Front Load Washing Machine. Please read these instructions carefully before using the appliance and retain them for future reference. This washing machine is designed for household use only.

2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Ensure the washing machine is properly grounded.
- Do not allow children to play on or in the appliance.
- Keep packaging materials out of reach of children.
- Do not install or store the appliance where it will be exposed to the weather or freezing temperatures.
- Do not operate any appliance with a damaged cord or plug, or if it has been dropped or damaged.
- Unplug the appliance from the power supply before cleaning or performing any maintenance.
- Do not use flammable liquids or vapors near the washing machine.
- Only use detergents and additives suitable for front-load washing machines.
- Do not attempt to repair or replace any part of the appliance unless specifically recommended in this manual.

3. WHAT'S IN THE BOX

Upon unpacking your TCL P6065FLS washing machine, please ensure all the following components are present:

- 1 x TCL 6.5 kg Fully-Automatic Front Load Washing Machine
- 1 x User Manual
- 1 x Tapping Screw
- 1 x Water Inlet Hose
- 1 x Bottom Cover
- 1 x Drain Hose Component

4. SETUP AND INSTALLATION

Proper installation is crucial for the optimal performance and longevity of your washing machine. It is recommended to have the appliance installed by a qualified technician.

4.1 Unpacking and Positioning

Carefully remove all packaging materials. Ensure the machine is placed on a firm, level surface. Adjust the leveling feet to ensure stability and prevent vibrations during operation.



Image: Rear view of the washing machine, illustrating the connections for water inlet and drain hose.

4.2 Water Supply Connection

1. Connect the provided water inlet hose to the cold water tap and the corresponding inlet valve on the back of the washing machine.
2. Ensure all connections are tight to prevent leaks.
3. Open the water tap fully to check for any leaks.

4.3 Drain Hose Installation

Position the drain hose correctly to ensure proper water drainage. The drain hose can be hooked over the edge of a sink or connected to a standpipe. Ensure the hose is not kinked or blocked.

4.4 Power Connection

Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the specifications of the washing machine (240 Volts).

5. OPERATING INSTRUCTIONS

Familiarize yourself with the control panel and various wash programs to achieve the best washing results.

5.1 Control Panel Overview



Image: The washing machine's control panel, featuring the program selection dial, digital display, and touch buttons for various functions.

The control panel features a central program dial to select wash cycles, a digital display for time and settings, and touch buttons for functions like Temperature, Spin Speed, Delay, and Start/Pause.

5.2 Loading Laundry and Detergent

1. Open the washing machine door and load laundry, ensuring not to overload the drum. The capacity is 6.5 kg.
2. Add appropriate detergent and fabric softener to the dispenser drawers.
3. Close the door firmly.

5.3 Wash Programs

Your TCL P6065FLS washing machine offers 16 wash programs to suit various fabric types and soil levels:

- **Mix:** For mixed loads of cotton and synthetics.
- **Super Quick:** A fast wash cycle for lightly soiled items.
- **Wool:** Gentle cycle for woolens and delicate items.
- **Shirt:** Optimized for washing shirts.
- **Bedding:** For larger items like bedsheets and duvet covers.
- **Sportswear:** Designed for synthetic sportswear.
- **Allergy Care:** Uses higher temperatures and extra rinses to remove allergens.
- **Drum Clean:** Self-cleaning program for the drum.
- **Cotton:** Standard program for cotton items.
- **Prewash:** Adds a pre-wash cycle for heavily soiled laundry.
- **ECO 40-60:** Energy-efficient program for cottons and mixed fabrics washable at 40°C or 60°C.
- **20°C:** Low-temperature wash for delicate items.
- **Delicate:** Very gentle wash for fragile garments.
- **Intensive:** For heavily soiled, durable items.
- **Spin:** Drains water and spins laundry.
- **Rinse+Spin:** Rinses and then spins laundry.

5.4 Special Features

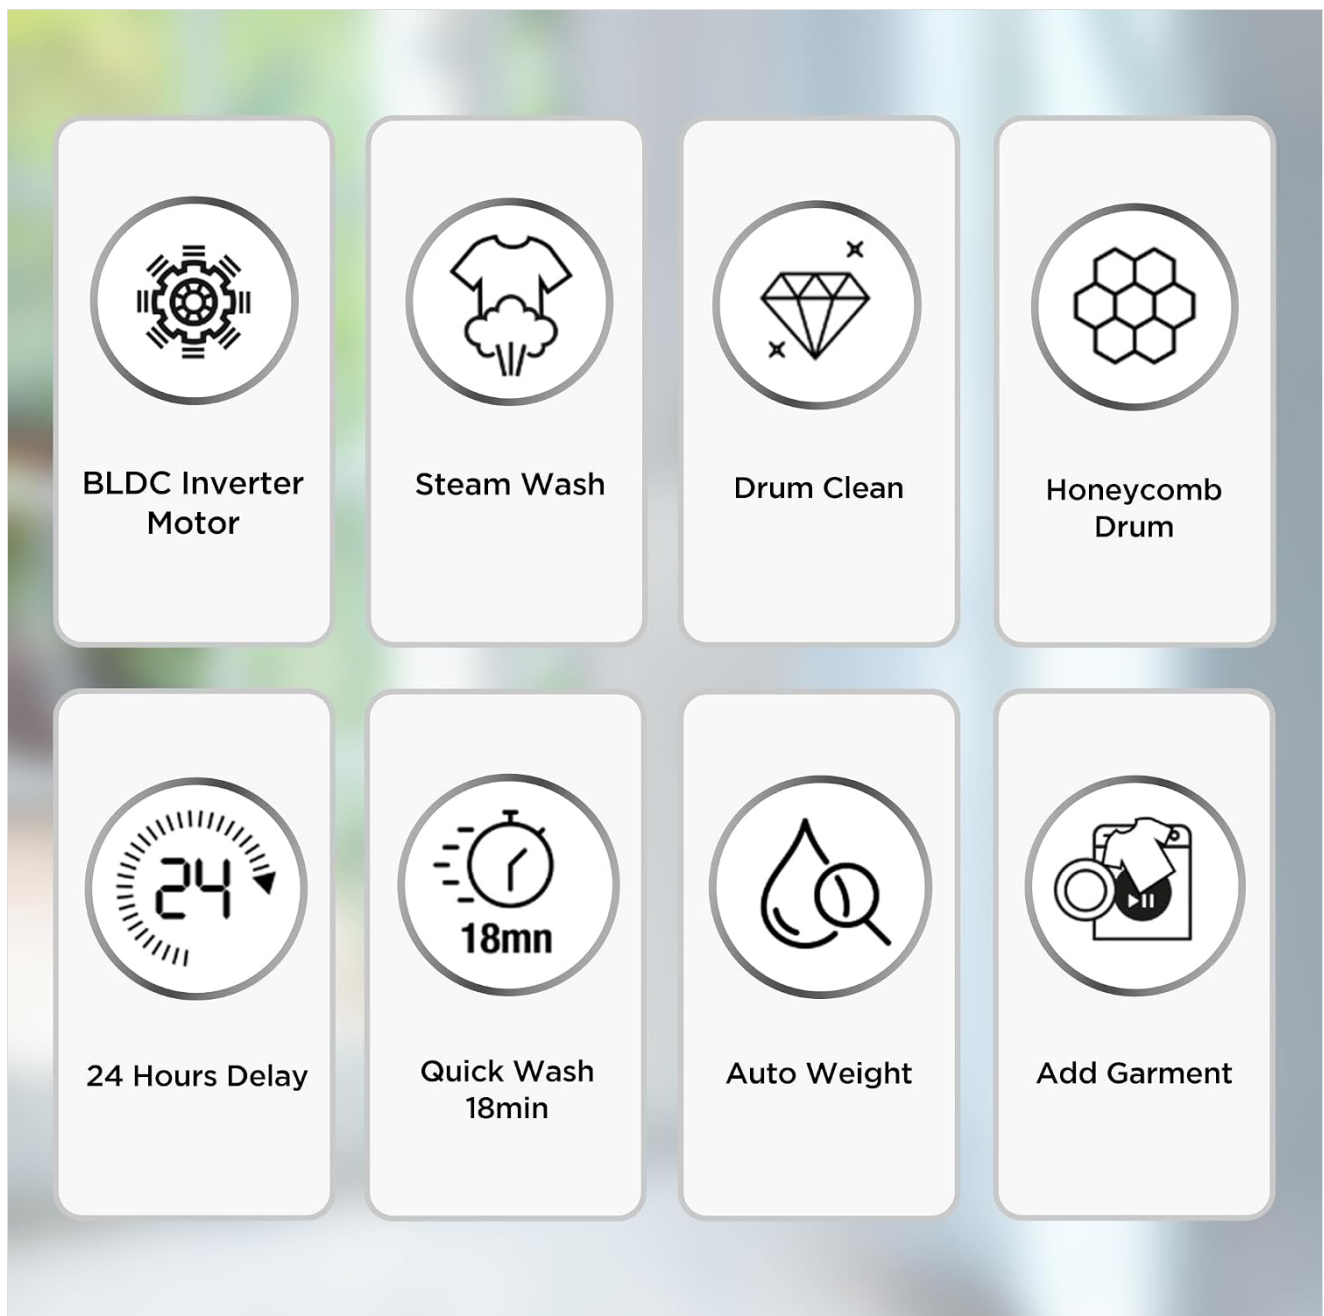


Image: Visual representation of key features including BLDC Inverter Motor, Steam Wash, Drum Clean, Honeycomb Drum, 24 Hours Delay, Quick Wash 18min, Auto Weight, and Add Garment.

- **Digital Inverter Motor (BLDC Technology):** Provides quiet operation, enhanced durability, and energy efficiency.

Digital Inverter Motor



Image: Illustrates the quiet operation of the Digital Inverter Motor, suitable for homes with sleeping children.

- **Steam Wash:** Utilizes pure steam for thorough cleaning and sanitization, helping to remove stubborn stains and allergens.

Steam Wash

Pure steam for thorough cleaning



Image: Depicts the Steam Wash feature in action, with steam circulating inside the drum for deep cleaning.

- **Heat Sterilization:** High-temperature washing for a hygienic washing environment, effectively killing bacteria and germs.

Heat Sterilization

High Temperature for hygienic washing environment



Image: Shows the Heat Sterilization process, emphasizing high temperatures for hygienic cleaning.

- **Add Garment:** Allows you to pause the cycle and add forgotten items even after the wash has started.
- **Quick Wash:** A rapid wash cycle, ideal for small loads and lightly soiled clothes, completing in as little as 18 minutes.
- **Child Lock:** Prevents accidental changes to settings or operation by children.



Child Lock



Heat
Sterilization



Memory Backup

Image: Highlights the Child Lock feature, along with Heat Sterilization and Memory Backup.

- **Drum Clean:** A dedicated program to clean the washing machine drum, removing detergent residues and bacteria.
- **Sound Off Function:** Mutes operational sounds and alerts.
- **24 Hours Delay:** Allows you to set the washing machine to start a cycle at a later time, up to 24 hours.
- **Memory Backup:** Resumes the wash cycle from where it left off after a power interruption.
- **TCL Honeycomb Drum:** Designed to protect clothes from damage during washing.



Image: Detailed view of the Honeycomb Drum interior, showcasing its unique texture designed for gentle fabric care.

6. MAINTENANCE

Regular maintenance ensures the longevity and efficient operation of your washing machine.

6.1 Cleaning the Drum

Use the dedicated **Drum Clean** program periodically (e.g., once a month) to remove detergent residues, lint, and bacteria from the drum. This helps prevent odors and maintains hygiene.

6.2 Cleaning the Detergent Dispenser

Remove the detergent dispenser drawer and rinse it under running water to clear any accumulated detergent or softener residue. Clean the housing with a damp cloth.

6.3 Cleaning the Door Seal

Wipe the rubber door seal after each wash to remove any moisture, lint, or foreign objects. This prevents mold growth and ensures a tight seal.

6.4 Cleaning the Exterior

Wipe the exterior surfaces of the washing machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.

7. TROUBLESHOOTING

Before contacting customer service, please refer to the following common issues and their solutions:

Problem	Possible Cause	Solution
Machine does not start	Power cord not plugged in; Door not closed properly; Program not selected; Start/Pause button not pressed.	Check power connection; Ensure door is securely latched; Select a program; Press Start/Pause.
No water filling	Water tap closed; Water inlet hose kinked or blocked; Water pressure too low.	Open water tap; Straighten hose; Check household water pressure.
Water not draining	Drain hose kinked or blocked; Drain filter clogged.	Straighten drain hose; Clean drain filter (refer to full manual for location).
Excessive vibration/noise	Machine not level; Transit bolts not removed; Overloaded drum; Uneven load.	Adjust leveling feet; Ensure transit bolts are removed (during installation); Reduce load; Redistribute laundry.
Detergent residue in dispenser	Low water pressure; Detergent clumping; Dispenser dirty.	Check water pressure; Use less detergent or dissolve it; Clean dispenser drawer.

If the problem persists after attempting these solutions, please contact TCL customer support.

8. SPECIFICATIONS

Key technical specifications for the TCL P6065FLS Fully-Automatic Front Load Washing Machine:

Feature	Detail
Model Number	P6065FLS
Capacity	6.5 kg
Type	Fully-Automatic Front Load
Motor Type	Digital Inverter Motor (BLDC Technology)
Energy Rating	5 Star
Spin Speed	1200 RPM
Voltage	240 Volts
Wattage	1850 Watts
Product Dimensions (D x W x H)	47D x 59.5W x 85H Centimeters
Item Weight	53 Kilograms
Drum Material	Stainless Steel (Honeycomb Drum)

Feature	Detail
Special Features	Digital Inverter Motor, Steam Wash, Add Garment, Quick Wash, Child Lock, Drum Clean, Sound Off Function, 24 Hours Delay, Memory Backup, Heat Sterilization, TCL Honeycomb Drum.

9. WARRANTY AND SUPPORT

Your TCL P6065FLS washing machine comes with a comprehensive warranty:

- **Product Warranty:** 2 Years comprehensive warranty on the product.
- **Motor Warranty:** 10 Years warranty on the Digital Inverter Motor.

For warranty claims, technical support, or service requests, please contact TCL customer service. Keep your purchase receipt as proof of purchase.

Manufacturer: Resojet Pvt. Ltd.

Manufacturer Contact Information: Resojet Pvt. Ltd.