

[Manuals.plus](#) /

› [Effireli](#) /

› XMRM-M6 Voice Replacement Remote User Manual

Effireli YK-XMRM-M6

XMRM-M6 Voice Replacement Remote User Manual

Brand: Effireli | **Model:** YK-XMRM-M6

1. INTRODUCTION

This manual provides comprehensive instructions for the Effireli XMRM-M6 Voice Replacement Remote, designed for select Xiaomi TV models. It covers setup, operation, maintenance, and troubleshooting to ensure optimal performance and user experience.

The XMRM-M6 remote offers voice search capabilities and direct access buttons for popular streaming services, enhancing your television viewing convenience.

2. PRODUCT OVERVIEW



Figure 1: Front view of the Effireli XMRM-M6 Voice Replacement Remote. The remote is black with various buttons, including

a power button, a voice assistant button, a circular navigation pad, and dedicated buttons for Netflix, KKO, and volume controls.

The Efireli XMRM-M6 remote features a sleek design with clearly labeled buttons for intuitive control of your Xiaomi TV. Key features include:

- **Voice Search:** Activate voice commands for easy content discovery.
- **Dedicated App Buttons:** Quick access to popular streaming platforms like Netflix.
- **Bluetooth Connectivity:** Ensures a stable and responsive connection to your TV.

3. SETUP AND PAIRING

To use your new Efireli XMRM-M6 remote, it must first be paired with your Xiaomi TV. Follow these steps for successful pairing:

1. **Insert Batteries:** Open the battery compartment on the back of the remote and insert two AAA batteries (not included), ensuring correct polarity.
2. **Prepare TV:** Ensure your Xiaomi TV is powered on and in a state where it can accept new Bluetooth device connections. It is recommended to be on the home screen or in the Bluetooth settings menu.
3. **Initiate Pairing on Remote:** Simultaneously press and hold the **Home button** (often represented by a house icon) and the **Back button** (often represented by an arrow pointing left) on the remote for approximately 5-10 seconds. A small indicator light on the remote (if present) may flash to indicate pairing mode.
4. **Confirm Pairing on TV:** On your TV screen, a message should appear indicating that a new device is found and asking to confirm pairing. Use your existing remote or the TV's physical buttons to select "Pair" or "Connect".
5. **Complete Pairing:** Once confirmed, the TV will connect to the new remote. A confirmation message should appear on the screen, and the remote's indicator light (if any) will stop flashing.

***Note:** If pairing fails, ensure the remote is close to the TV and repeat the steps. If issues persist, refer to the Troubleshooting section or your TV's original user manual for specific pairing instructions.*

4. OPERATING INSTRUCTIONS

Familiarize yourself with the functions of the buttons on your XMRM-M6 remote:

- **Power Button (⏻):** Turns the TV on or off.
- **Voice Assistant Button (🗨️):** Activates the voice search or voice assistant feature. Press and hold to speak your command.
- **Navigation Pad (Circular):** Use the directional arrows (Up, Down, Left, Right) to navigate menus and content. The center button acts as "OK" or "Select".
- **Back Button (⬅️):** Returns to the previous screen or menu.
- **Home Button (🏠):** Returns to the TV's main home screen.
- **Netflix Button:** Direct access to the Netflix application.
- **KKO Button:** Direct access to the KKO application.
- **Volume Up (+) / Volume Down (-):** Adjusts the TV's volume level.

5. MAINTENANCE

To ensure the longevity and proper functioning of your remote control, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote with a soft, dry cloth. Do not use abrasive cleaners, solvents, or chemical agents.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA).
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures. If not used for an extended period, remove the batteries to prevent leakage.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

6. TROUBLESHOOTING

If you encounter issues with your XMRM-M6 remote, try the following troubleshooting steps:

Problem	Possible Cause	Solution
Remote not responding	Low or dead batteries; Remote not paired; Obstruction between remote and TV.	Replace batteries. Re-pair the remote (see Section 3). Ensure no objects are blocking the signal (though Bluetooth is less sensitive to this).
Voice control not working	Microphone blocked; TV's voice assistant settings disabled; Remote not properly paired for voice.	Ensure microphone on remote is clear. Check TV settings for voice assistant activation. Re-pair the remote, ensuring voice functionality is enabled during pairing if prompted.
Buttons not working correctly	Stuck buttons; Software glitch.	Gently press buttons to ensure they are not stuck. Remove and reinsert batteries to reset the remote.
Remote disconnects frequently	Interference; Low batteries; TV software issue.	Replace batteries. Move other Bluetooth devices away. Update TV firmware if available. Re-pair the remote.

If these steps do not resolve the issue, please contact customer support.

7. SPECIFICATIONS

Feature	Detail
Model Number	YK-XMRM-M6
Brand	Effireli
Special Feature	Voice Search
Max Number of Supported Devices	1
Compatible Devices	Television
Connectivity Technology	Bluetooth

8. COMPATIBLE MODELS

This replacement remote is compatible with the following Xiaomi TV models:

- L32M6-6ARG
- L55M6-ESG
- L55M6-ARG
- L50M6-6ARG
- MDZ-24-AA

Note: *If your specific model number is not listed above or your original remote appears significantly different, please contact customer support to confirm compatibility before purchase or use.*

9. WARRANTY AND SUPPORT

Effireli stands by the quality of its products. This XMRM-M6 Voice Replacement Remote comes with the following:

- **30-Day Money-Back Guarantee:** If you are not satisfied with your purchase, you may return it within 30 days for a full refund.
- **12-Month Warranty:** A 12-month warranty covers manufacturing defects from the date of purchase. Returns and exchanges are accepted within this warranty period for eligible issues.

For any questions, technical assistance, or warranty claims, please contact Effireli customer support. You can typically find contact information on the product packaging or the seller's page where you purchased the item.