

[Manuals.plus](#) /

› [Effireli](#) /

› Effireli RM-L1370 Replacement Remote Control User Manual

Effireli RM-L1370

Effireli RM-L1370 Replacement Remote Control User Manual

Model: RM-L1370

1. INTRODUCTION

Thank you for choosing the Effireli RM-L1370 Replacement Remote Control. This remote is designed to provide seamless control for your compatible Sony TV models without the need for complex programming or setup. Simply insert batteries and begin operation.



Image showing the front view of the Effireli RM-L1370 replacement remote control, featuring various buttons for TV operation.

2. SETUP

The Effireli RM-L1370 replacement remote control requires no programming. Follow these simple steps to begin using your remote:

1. **Insert Batteries:** Open the battery compartment cover on the back of the remote control. Insert two AAA batteries (not included), ensuring the correct polarity (+/-) as indicated inside the compartment.
2. **Close Compartment:** Replace the battery compartment cover securely.
3. **Ready for Use:** The remote is now ready to operate your compatible Sony TV. Point the remote directly at your television and press the desired function button.

3. OPERATING INSTRUCTIONS

This remote control provides full functionality for your compatible Sony TV. Below are common button functions:

- **Power Button:** Turns the TV on or off.

- **Number Buttons (0-9):** Selects channels directly.
- **Channel Up/Down:** Navigates through channels sequentially.
- **Volume Up/Down:** Adjusts the television's volume.
- **Mute Button:** Silences the television's audio.
- **Input/Source Button:** Cycles through available input sources (HDMI, AV, etc.).
- **Menu/Home Button:** Accesses the TV's main menu or smart TV interface.
- **Navigation Buttons (Up, Down, Left, Right, Enter):** Used to navigate menus and confirm selections.
- **Back/Return Button:** Returns to the previous screen or menu.

Compatible TV Models: This remote is compatible with Sony TV models including KDL-32W660E, KDL-40W660E, KD-55X720E, KD-49X720E, and KD-43X720E.

4. MAINTENANCE

To ensure the longevity and optimal performance of your remote control, please follow these maintenance guidelines:

- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type.
- **Cleaning:** Use a soft, dry cloth to clean the remote's surface. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these can damage the remote.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. If the remote will not be used for an extended period, remove the batteries to prevent leakage.
- **Avoid Drops:** Protect the remote from physical impact, such as dropping it, which can damage internal components.

5. TROUBLESHOOTING

If you encounter issues with your remote control, please refer to the following troubleshooting steps:

- **Remote Not Responding:**
 - Ensure the batteries are inserted correctly with the proper polarity.
 - Replace old batteries with new ones.
 - Check for any obstructions between the remote and the TV's infrared sensor.
 - Ensure you are within the effective operating range and pointing the remote directly at the TV.
- **Specific Buttons Not Working:**
 - Clean the remote's surface, especially around the unresponsive buttons, to remove any dirt or debris.
 - Try replacing the batteries, as low power can sometimes affect specific functions.
- **Compatibility Issues:** If your TV model is not listed in the compatible models section or your original remote looks significantly different, please contact customer support directly to confirm compatibility.

6. SPECIFICATIONS

Feature	Description
---------	-------------

Brand	Effireli
Model Number	YK-RM-L1370
Special Feature	No Programming Required
Max Number of Supported Devices	1
Compatible Devices	Television
Connectivity Technology	Infrared

7. WARRANTY AND SUPPORT

Your Effireli RM-L1370 Replacement Remote Control comes with the following assurances:

- **Money-Back Guarantee:** Enjoy a 30-day money-back guarantee from the date of purchase.
- **Warranty:** A 12-month warranty covers manufacturing defects. Returns and exchanges are accepted within this warranty period.
- **Customer Support:** For any questions regarding compatibility, troubleshooting, or warranty claims, please contact our customer support directly.