

PHILCO PSC3600

Philco 1600W Hair Dryer PSC3600 User Manual

Model: PSC3600

Introduction Safety Instructions Product
Overview Setup Operating Maintenance Troubleshooting Specifications Warranty & Support

1. INTRODUCTION

Thank you for choosing the Philco 1600W Hair Dryer PSC3600. This manual provides essential information for the safe and efficient use, maintenance, and troubleshooting of your new hair dryer. Please read it thoroughly before first use and keep it for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

- **DANGER:** As with most electrical appliances, electrical parts are electrically live even when the switch is off. To reduce the risk of death by electric shock:
 - a. Always unplug this appliance immediately after using.
 - b. Do not use while bathing or in a shower.
 - c. Do not place or store appliance where it can fall or be pulled into a tub or sink.
 - d. Do not place in or drop into water or other liquid.
 - e. Do not reach for an appliance that has fallen into water. Unplug immediately.
- **WARNING:** To reduce the risk of burns, electrocution, fire, or injury to persons:
 - a. This appliance should never be left unattended when plugged in.
 - b. Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.
 - c. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
 - d. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, damaged, or dropped into water.
 - e. Keep the cord away from heated surfaces. Do not wrap the cord around the appliance.
 - f. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
 - g. Never use while sleeping.

- h. Never drop or insert any object into any opening.
- i. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- j. Do not use an extension cord with this appliance.
- k. Do not direct hot air towards eyes or other heat-sensitive areas.
- l. Attachments may be hot during use. Allow them to cool before handling.
- m. Do not place appliance on any surface while it is operating.
- n. While using the appliance, keep your hair away from the air inlets.
- o. This appliance is designed for 127V electrical outlets. Ensure your power supply matches this requirement.
- p. **Important Plug Information:** This product may come with a non-standard plug. It is strongly recommended NOT to use adapters. Ensure your electrical outlet is compatible or consult a qualified electrician for proper installation. Using incompatible adapters can lead to electrical hazards and damage to the appliance.



Image: Safety certifications for the Philco hair dryer, indicating compliance with INMETRO and SGS OCP 0040 standards.

3. PRODUCT OVERVIEW

The Philco 1600W Hair Dryer PSC3600 is designed for efficient and fast hair drying with multiple temperature settings for versatile styling.



Image: The Philco 1600W Hair Dryer PSC3600 in gray, showcasing its sleek design.

Key Features:

- **Powerful 1600W Motor:** Provides strong airflow for quick drying.
- **4 Temperature Settings:** Offers flexibility for different hair types and styling needs.
- **Fast Dry Technology:** Utilizes BLDC motor technology for intensified airflow, delivering a high-velocity jet for up to 3X faster drying.
- **Magnetic Concentrator Nozzle:** Easily attaches and detaches, ensuring it stays secure during use.
- **Removable Magnetic Grille:** Facilitates easy cleaning and maintenance of the air filter.



Image: Diagram showing the "Fast Dry Technology" of the Philco hair dryer, highlighting intensified airflow for rapid drying.



BOCAL CONCENTRADOR MAGNÉTICO

Fácil fixação, que não desencaixa durante o uso.

Image: Close-up view of the magnetic concentrator nozzle, demonstrating its secure attachment to the hair dryer.



GRADE MAGNÉTICA REMOVÍVEL

Auxilia na limpeza e manutenção do produto.

Image: Detail of the removable magnetic grille, designed for easy cleaning and maintenance.

Controls:



Image: Front view of the hair dryer, highlighting the control panel with power and temperature settings.



Image: Side view of the hair dryer, providing a clearer look at the ergonomic handle and button placement.

- **Power/Speed Button:** Controls the fan speed and turns the device on/off.
- **Temperature Button:** Cycles through the 4 available temperature settings.
- **Cool Shot Button:** Provides a burst of cool air to set your style.

4. SETUP

1. **Unpacking:** Carefully remove the hair dryer and all accessories from the packaging. Retain the packaging for future storage or transport.
2. **Inspect for Damage:** Before first use, inspect the appliance for any signs of damage. Do not use if damaged.
3. **Voltage Check:** Ensure your electrical outlet provides 127V, which is the required voltage for this appliance. Using an incorrect voltage can damage the product and pose a safety risk.
4. **Plug Compatibility:** Verify that the plug of the hair dryer is compatible with your wall outlet. As noted in safety instructions, avoid using adapters if possible.
5. **Attach Concentrator Nozzle:** If desired, attach the magnetic concentrator nozzle to the front of the hair dryer. It will snap into place securely.

5. OPERATING INSTRUCTIONS

1. **Plug In:** Plug the hair dryer into a 127V electrical outlet.
2. **Power On:** Press the Power/Speed button to turn on the hair dryer. It will start at a default speed setting.
3. **Adjust Speed:** Press the Power/Speed button again to cycle through different fan speeds (e.g., low, medium, high).
4. **Adjust Temperature:** Press the Temperature button to cycle through the 4 available heat settings (e.g., cool, warm, hot, very hot).
5. **Use Cool Shot:** For setting your hairstyle, press and hold the Cool Shot button for a burst of cool air. Release the button to return to the previous heat setting.
6. **Drying Hair:** Direct the airflow towards your hair, maintaining a safe distance to prevent overheating. Use the concentrator nozzle for precise styling.
7. **Power Off:** After use, press the Power/Speed button until the appliance turns off, then unplug it from the electrical outlet.

6. MAINTENANCE AND CARE

Proper maintenance ensures the longevity and optimal performance of your hair dryer.

1. **Cleaning the Removable Magnetic Grille:**
 - Ensure the hair dryer is unplugged and completely cool.
 - Gently remove the magnetic grille from the rear of the appliance.
 - Use a soft brush or a dry cloth to remove any accumulated lint, dust, or hair from the grille and the air inlet filter.
 - Reattach the grille, ensuring it snaps securely into place.
2. **General Cleaning:**
 - Wipe the exterior of the hair dryer with a soft, damp cloth. Do not use abrasive cleaners or solvents.
 - Never immerse the appliance in water or any other liquid.

3. Storage:

- Allow the hair dryer to cool down completely before storing.
- Store in a cool, dry place, out of reach of children.
- Do not wrap the power cord tightly around the appliance, as this can damage the cord. Hang it loosely or coil it gently.

7. TROUBLESHOOTING

If you encounter issues with your Philco Hair Dryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Hair dryer does not turn on.	Not plugged in correctly; no power at outlet; damaged cord/plug; internal fault.	Ensure plug is fully inserted. Check if the outlet is working by plugging in another appliance. Inspect cord and plug for damage; if damaged, do not use and contact support.
Airflow is weak or inconsistent.	Air inlet/outlet blocked by lint/hair; motor issue.	Unplug the dryer and clean the removable magnetic grille and air inlet thoroughly (refer to Maintenance section).
Hair dryer overheats and shuts off.	Overuse; blocked air vents; internal thermal cut-off activated.	Unplug the dryer and allow it to cool down for at least 10-15 minutes. Clean the air inlet/outlet. Ensure vents are not blocked during use.
Unusual noise or smell.	Foreign object inside; motor issue; overheating.	Immediately unplug the dryer. Do not use. Contact Philco customer support.

If the problem persists after trying these solutions, please contact Philco customer support for assistance.

8. SPECIFICATIONS

Feature	Detail
Model Number	PSC3600
Brand	PHILCO
Power	1600 Watts
Voltage	127V
Color	Gray and Pink
Product Dimensions	72P x 88L x 297A centimeters (approx. 7.2 x 8.8 x 29.7 cm)
Weight	800 g
Manufacturer	Philco
Country of Origin	China

9. WARRANTY AND SUPPORT

Warranty Information:

This Philco product is covered by a manufacturer's warranty against defects in materials and workmanship. Please refer to the warranty card included with your product for specific terms, conditions, and duration. Keep your proof of purchase for warranty claims.

Extended warranty options may be available from your retailer. For example, extended warranties against failures and defects for 12 or 24 months might be offered.

Return Policy:

Purchases made through Amazon typically have a 30-day return policy for refund or replacement, fulfilled by Amazon. Please check your specific purchase details for the exact return window and conditions.

Customer Support:

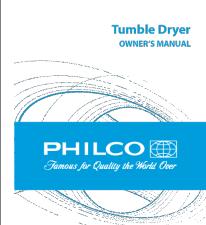
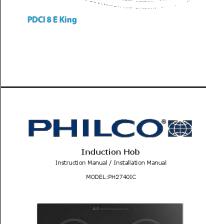
For technical assistance, troubleshooting beyond this manual, or warranty claims, please contact Philco customer support.

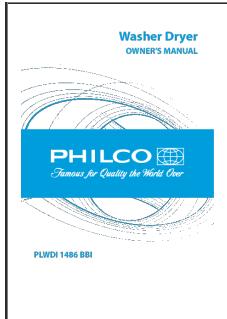
Contact information can usually be found on the Philco official website or on the product packaging.

You can also visit the official Philco website for FAQs and additional support resources.

© 2025 Philco. All rights reserved. Information in this manual is subject to change without notice.

Related Documents

	<p><u>PHILCO PDCI 8 E King Tumble Dryer Owner's Manual</u></p> <p>Comprehensive owner's manual for the PHILCO PDCI 8 E King tumble dryer. Learn about safety, installation, operation, maintenance, and troubleshooting for your appliance.</p>
	<p><u>Philco PH2740IC Induction Hob: Instruction and Installation Manual</u></p> <p>Comprehensive guide for the Philco PH2740IC Induction Hob, covering safety, installation, operation, features, troubleshooting, and maintenance. Learn how to use your induction cooktop safely and efficiently.</p>
	<p><u>PHILCO PDCI 9 A KING / PDCI 10 A KING Sušička prádla - Návod k obsluze</u></p> <p>Uživatelský manuál pro sušičky prádla PHILCO PDCI 9 A KING a PDCI 10 A KING. Zahrnuje pokyny k instalaci, provozu, údržbě a bezpečnostní informace od výrobce FAST ČR, a.s.</p>



[Philco PLWDI 1486 BBI Washer Dryer Owner's Manual](#)

Comprehensive owner's manual for the Philco PLWDI 1486 BBI washer dryer, covering installation, operation, maintenance, and troubleshooting.