

[Manuals.plus](#) /

› [Giecy](#) /

› Giecy G300-Red Voice Amplifier Instruction Manual

Giecy G300

Giecy G300-Red Voice Amplifier Instruction Manual

Model: G300-Red

INTRODUCTION

The Giecy G300-Red Voice Amplifier is a portable, rechargeable device designed to amplify your voice clearly and effectively. It is suitable for various environments such as classrooms, meetings, outdoor events, and guided tours. This device also functions as a versatile media player, offering Bluetooth connectivity, TF card, and USB flash drive support for music playback, along with an FM radio function.



Image: The Giecy G300-Red Voice Amplifier unit.

PRODUCT OVERVIEW AND FEATURES

The Giecy G300-Red Voice Amplifier is engineered for superior sound quality and extended use. Key features include:

- **30W Power Output:** Delivers clear and loud sound, covering an area of approximately 20,000 sq.ft (1000).
- **2800mAh Rechargeable Battery:** Provides 12-15 hours of voice amplification or up to 8 hours of music playback on a single charge. Fully charges in 3-5 hours.
- **Bluetooth 4.2 Connectivity:** Wirelessly stream audio from Bluetooth-enabled devices up to 33 feet away.
- **Multi-functional Media Playback:** Supports music playback from TF (Micro SD) cards and USB flash drives.
- **FM Radio:** Equipped with a high-sensitivity FM radio mode.
- **Microphone Headset:** Included for hands-free voice amplification.

- **Whistle-Stop Function:** Designed to minimize feedback.



Image: Diagram illustrating the 30W power output and internal speaker components for superior sound quality.



Image: Visual representation of the 2800mAh rechargeable battery, highlighting its large capacity and long operational life.

SETUP

1. **Charging the Device:** Before first use, fully charge the voice amplifier. Connect the provided charging cable to the DC 5V port on the amplifier and a compatible USB power adapter (not included). The battery indicator will show charging status and typically takes 3-5 hours for a full charge.
2. **Connecting the Microphone Headset:** Insert the microphone headset's 3.5mm jack into the 'MIC' port on the amplifier.
3. **Wearing the Amplifier:** The amplifier can be worn using the included lanyard or clipped to your belt.
4. **Positioning the Microphone:** For optimal performance and to prevent feedback, position the microphone headset correctly. Ensure the microphone is placed near your mouth but **do not** place the microphone directly in front of or too close to the amplifier unit. Maintain a distance of 30-50 cm (11.8-19.6 inches) between the microphone and the amplifier.

2200MAH RECHARGEABLE BATTERY

Large capacity& Long Life



MIC MODE: 8-14H



FULLY CHARGED: 3-5H

Image: Illustration demonstrating the correct and incorrect placement of the microphone headset relative to the amplifier to avoid noise and feedback.

OPERATING INSTRUCTIONS

Power On/Off

- To power on, rotate the volume knob clockwise until you hear a click and the display lights up.
- To power off, rotate the volume knob counter-clockwise until you hear a click and the display turns off.

Voice Amplification

- Ensure the microphone headset is securely connected to the 'MIC' port.
- Turn on the amplifier.
- Adjust the volume knob to your desired amplification level. Speak clearly into the microphone.

Bluetooth Mode

1. Turn on the amplifier. Press the 'M' (Mode) button repeatedly until the display shows 'BLUE' or a Bluetooth icon.
2. On your Bluetooth-enabled device (e.g., smartphone, tablet), search for available Bluetooth devices and select 'G300' to pair.
3. Once paired, you can stream audio wirelessly from your device to the amplifier.



Meeting



Lecturer



Instructor
Introduction



coach



Yoga



Tour guide

Image: A visual representation of the Bluetooth connection process, showing the amplifier paired with a mobile device.

Music Playback (TF Card / USB Drive)

1. Insert a TF (Micro SD) card or USB flash drive containing MP3 audio files into the respective slot on the amplifier.
2. The amplifier will automatically switch to music playback mode. If not, press the 'M' (Mode) button to select.
3. Use the playback control buttons (e.g., Play/Pause, Next/Previous Track) to manage your music.
4. Options are available to repeat a single tune or loop all music.

FM Radio Mode

1. Press the 'M' (Mode) button until the display shows 'FM' or a radio icon.
2. The amplifier will automatically scan and save available FM radio stations.
3. Use the Next/Previous Track buttons to switch between saved stations.



Please note

1. Don't put the microphone in front of the voice amplifier or too close to it, or it may cause noise.
2. The distance between the mic and the amp needs to be kept at 30-50cm (11.8-19.6 inch) to avoid feedback.



Image: A person enjoying music via the FM radio mode with the Giecy voice amplifier in an outdoor setting.

Wired Speaker Mode

Connect an external audio source directly to the amplifier using an AUX cable (not included) if you wish to use it as a wired speaker.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the surface of the amplifier. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures when not in use.
- **Battery Care:** To prolong battery life, avoid completely draining the battery frequently. Charge the device regularly, even if not in constant use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound from amplifier	Device is off; Volume is too low; Microphone not connected; Battery is low.	Turn on the device; Increase volume; Ensure microphone is securely plugged in; Charge the battery.
Feedback or whistling noise	Microphone too close to amplifier; Volume too high; Microphone pointed at amplifier.	Increase distance between microphone and amplifier (30-50cm); Reduce volume; Adjust microphone position away from the amplifier.
Bluetooth connection fails	Amplifier not in Bluetooth mode; Device out of range; Pairing issue.	Ensure amplifier is in Bluetooth mode; Move device closer to amplifier (within 33 feet); Re-attempt pairing.

Problem	Possible Cause	Solution
Music from TF card/USB not playing	Incorrect file format; Card/drive not inserted correctly; Amplifier not in correct mode.	Ensure files are MP3 format; Re-insert card/drive; Press 'M' button to select music playback mode.
Battery not charging	Charging cable faulty; Power adapter issue; Charging port damaged.	Try a different charging cable; Use a different USB power adapter; Contact support if port is damaged.

SPECIFICATIONS

- **Power Output:** 30W
- **Battery Capacity:** 2800mAh Lithium Ion
- **Charging Time:** 3-5 hours
- **Usage Time (Amplification):** 12-15 hours
- **Usage Time (Music Playback):** Up to 8 hours
- **Connectivity:** Bluetooth 4.2, AUX, USB, TF Card
- **Material:** Plastic, Rubber
- **Item Weight:** 0.51 Kilograms (1.12 pounds)
- **Package Dimensions:** 7.05 x 6.14 x 2.32 inches

WARRANTY AND SUPPORT

Specific warranty information is not provided in the product details. For any product inquiries, technical support, or warranty claims, please refer to the retailer where the product was purchased or visit the official Giecy brand store for assistance.

You can often find additional support resources and contact information on the Giecy brand's official website or through the customer service portal of your purchase platform.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question