#### Manuals+

Q & A | Deep Search | Upload

#### manuals.plus /

- Ulefone /
- > Ulefone Note 18 Pro Smartphone User Manual

#### **Ulefone Ulefone Note 18 Pro Phone Unlocked**

# Ulefone Note 18 Pro Smartphone User Manual

Model: Ulefone Note 18 Pro Phone Unlocked

#### INTRODUCTION

This manual provides detailed instructions for the proper use and maintenance of your Ulefone Note 18 Pro smartphone. Please read this manual carefully before using your device to ensure optimal performance and longevity. Keep this manual for future reference.

## **PACKAGE CONTENTS**

Upon unboxing your Ulefone Note 18 Pro, please verify that all the following items are included:

- Ulefone Note 18 Pro Smartphone
- Power Adapter
- · USB Type-C Cable
- SIM Ejector Tool
- Pre-applied Screen Protector
- TPU Protective Case
- Quick Start Guide (this manual)

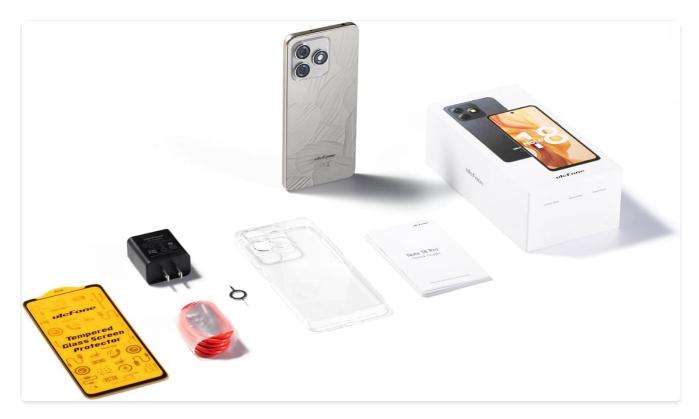


Image: Contents of the Ulefone Note 18 Pro retail package.

# **S**ETUP

#### 1. SIM Card and TF Card Installation

The Ulefone Note 18 Pro supports dual SIM cards or one SIM card and one TF (microSD) card for expanded storage. Use the provided SIM ejector tool to open the SIM tray.

- 1. Locate the SIM tray on the side of the phone.
- 2. Insert the SIM ejector tool into the small hole next to the tray and press gently until the tray pops out.
- 3. Place your Nano-SIM card(s) and/or TF card into the designated slots on the tray, ensuring the gold contacts face downwards.
- 4. Carefully push the tray back into the phone until it is flush with the device body.



Image: Illustration of the dual SIM/TF card slot.

#### 2. Initial Power On

Press and hold the Power button located on the side of the device until the Ulefone logo appears on the screen. Follow the on-screen prompts to complete the initial setup, including language selection, Wi-Fi connection, and Google account setup.

### 3. Charging the Device

Before first use, it is recommended to fully charge your Ulefone Note 18 Pro. Connect the USB Type-C cable to the

phone's charging port and the other end to the provided power adapter. Plug the adapter into a wall outlet. The device features an 18W fast charging capability for its 5450mAh battery. A full charge typically takes approximately 3.2 hours.




Image: Battery specifications and charging details.

#### 1. Basic Navigation

The Ulefone Note 18 Pro operates on Android 14 and utilizes a 6.78-inch HD+ LCD touchscreen for navigation. Use gestures such as tapping, swiping, pinching, and spreading to interact with the interface.

The device also features an Innovative Custom Key, which can be configured for various functions:

- One Click: Start Sound Recording, Open Flashlight, etc.
- Double Click: Take Screenshots, Open Zello, etc.
- Long Press: Open SOS, Open Game Mode, etc.

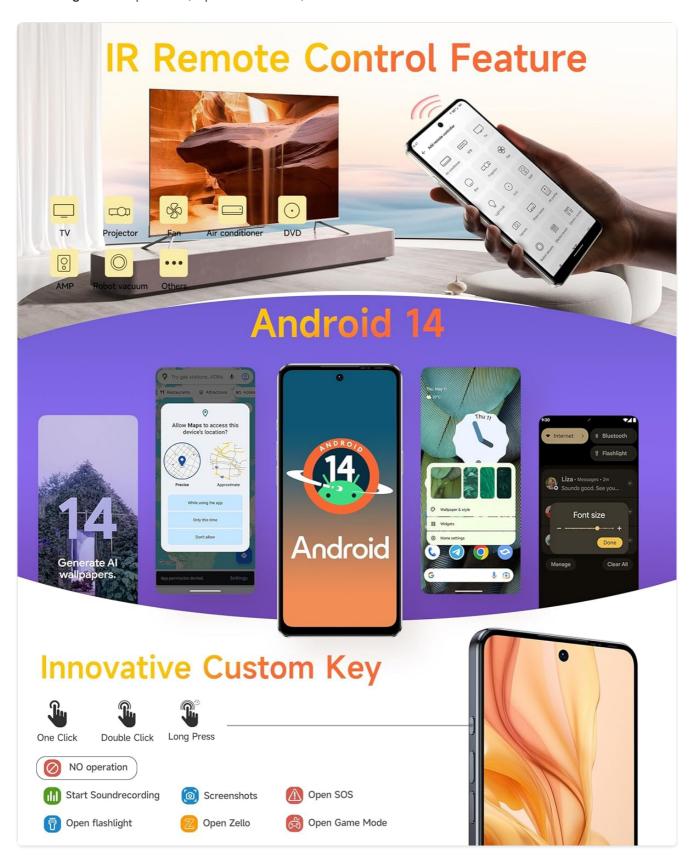

## 2. Camera Usage

The Ulefone Note 18 Pro is equipped with a versatile camera system:

- **64MP Main Camera:** Sony IMX682 sensor with f/1.8 aperture.
- 50MP Ultra-Wide Camera: 1/2.8" sensor with 117.3° FOV and f/2.2 aperture.
- 32MP Front Camera: For high-resolution selfies and video calls.

To access the camera, tap the Camera icon on your home screen or app drawer. Select your desired mode (Photo, Video, Portrait, etc.) and tap the shutter button to capture images or start/stop recording.



Image: Camera specifications and sample photography.

## 3. Connectivity

The device supports various connectivity options:

- 4G LTE: For high-speed mobile data.
- Wi-Fi: Connect to wireless networks for internet access.
- Bluetooth: For connecting to wireless accessories like headphones or speakers.
- NFC: For contactless payments (G Pay supported) and quick pairing with other NFC-enabled devices.

- Global Navigation: Built-in GPS, GLONASS, BeiDou, and Galileo for accurate location services.
- Headset-free FM Radio: Enjoy FM radio without needing to plug in headphones as an antenna.

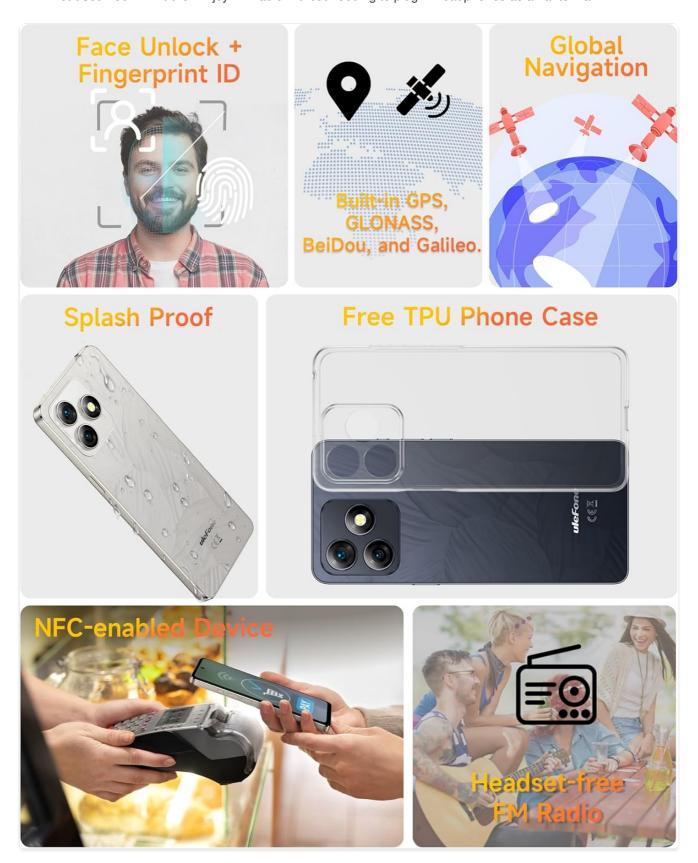


Image: Connectivity features including NFC, GPS, and FM Radio.

#### 4. IR Remote Control Feature

The Ulefone Note 18 Pro includes an IR Blaster, allowing it to function as a universal remote control for various home appliances such as TVs, air conditioners, projectors, and more. Use the pre-installed IR remote app or download a compatible app to configure and control your devices.

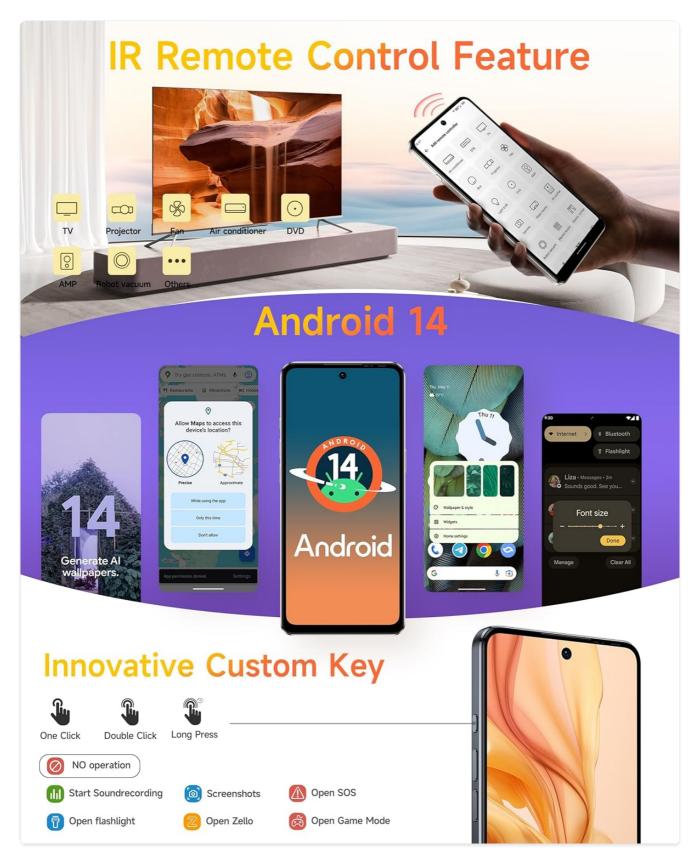


Image: IR Remote Control functionality.

#### 5. Security Features

For enhanced security, the Ulefone Note 18 Pro offers:

- Face Unlock: Register your face to unlock the device quickly and conveniently.
- **Fingerprint ID:** The device features a side-mounted fingerprint sensor for secure and fast unlocking. Register your fingerprints in the Security settings.

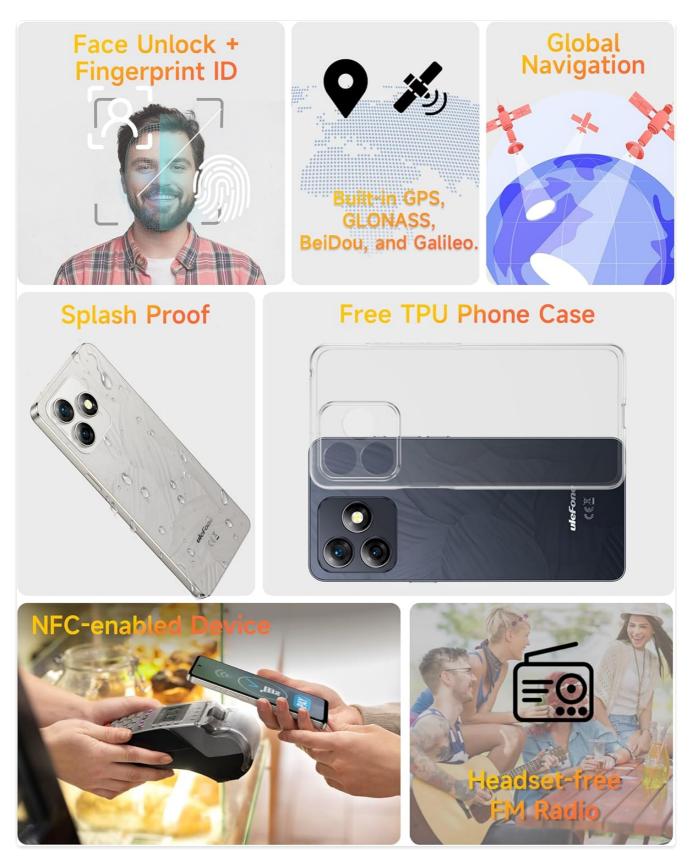


Image: Face Unlock and Fingerprint ID security options.

## **M**AINTENANCE

## 1. Battery Care


- Avoid exposing the device to extreme temperatures (below 0°C or above 45°C) as this can degrade battery performance.
- Use only the original charger and cable provided with your device to prevent damage and ensure optimal

charging.

• Do not leave the device charging for extended periods after it has reached 100% to prolong battery lifespan.

## 2. Cleaning Your Device

- Gently wipe the screen and back of the phone with a soft, lint-free cloth.
- For stubborn smudges, slightly dampen the cloth with water or a screen cleaner solution. Avoid harsh chemicals.
- The device is splash-proof; however, avoid submerging it in water.

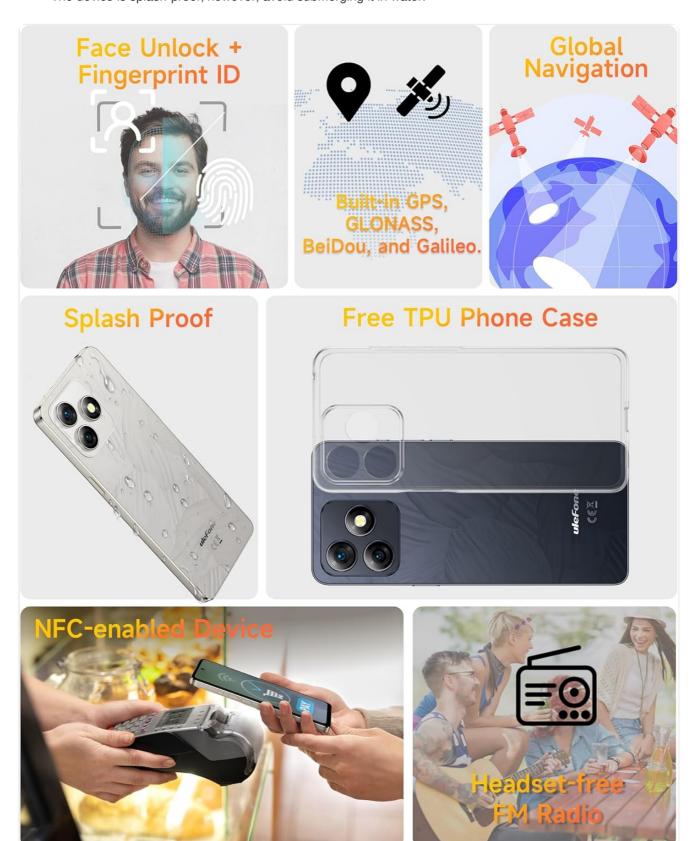

#### 3. Software Updates

Regularly check for and install system updates to ensure your device has the latest features, security patches, and performance improvements. You can usually find this option in Settings > System > System update.

# **T**ROUBLESHOOTING

If you encounter issues with your Ulefone Note 18 Pro, refer to the following common solutions:

| Problem                        | Possible Solution  |
|--------------------------------|--|
| Device won't turn on           | Ensure the battery is charged. Connect to the charger for at least 10 minutes, then try powering on again.   |
| Apps crashing or freezing      | Clear the app's cache (Settings > Apps > [App Name] > Storage > Clear cache). If the problem persists, try reinstalling the app or performing a factory reset (backup data first). |
| Poor battery life              | Reduce screen brightness, disable unused features (Wi-Fi, Bluetooth, GPS), close background apps, and check for power-intensive apps in battery usage settings.                    |
| Cannot connect to Wi-Fi        | Restart your router and the phone. Forget the network in phone settings and reconnect. Ensure Wi-Fi is enabled on the phone.   |
| Fingerprint sensor not working | Ensure your finger is clean and dry. Re-register your fingerprint in Settings > Security > Fingerprint.  |

## **SPECIFICATIONS**

The Ulefone Note 18 Pro boasts impressive specifications for a smooth user experience:

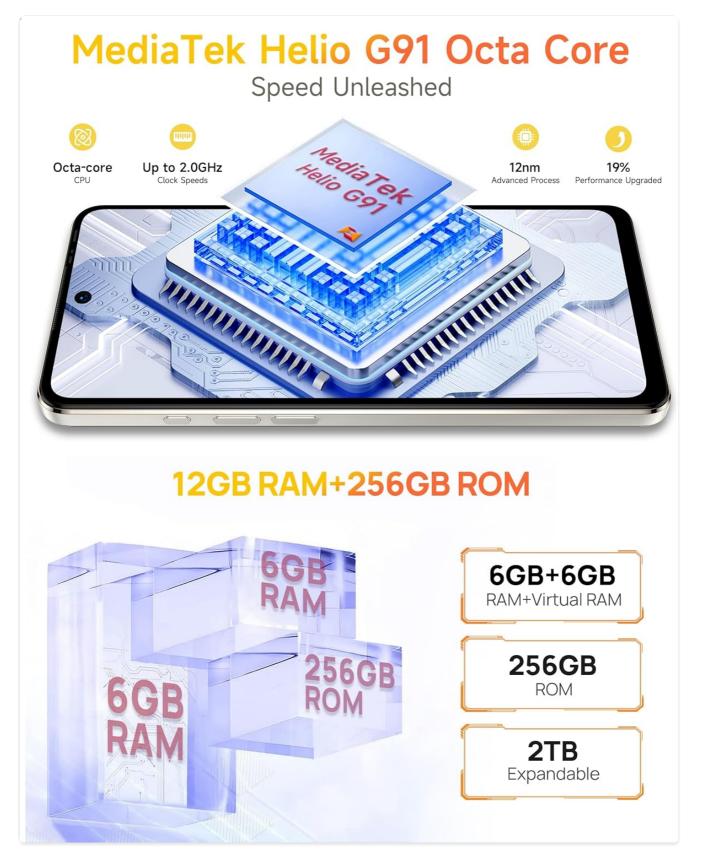


Image: Processor and Memory details.

| Feature          | Detail  |
|------------------|---|
| Model Name       | Ulefone Note 18 Pro Phone Android 14 Cell Phones Unlocked |
| Operating System | Android 14  |
| Processor        | MediaTek Helio G91 Octa Core, 2 GHz                       |
| RAM              | 12 GB (6GB physical + 6GB virtual)                        |

| Feature                  | Detail  |
|--------------------------|---|
| Internal Storage         | 256 GB  |
| Expandable Storage       | Yes, up to 2TB via TF card  |
| Display                  | 6.78-inch HD+ LCD, 1512 x 720 resolution, Corning Gorilla Glass, 90Hz Refresh Rate              |
| Rear Camera              | 64 MP Main (Sony IMX682) + 50 MP Ultra-Wide   |
| Front Camera             | 32 MP   |
| Video Capture Resolution | 4K  |
| Battery Capacity         | 5450 mAh (Lithium Polymer)  |
| Charging                 | 18W Fast Charging, USB Type-C   |
| SIM Card                 | Dual SIM (Nano-SIM)   |
| Connectivity             | 4G LTE, Wi-Fi, Bluetooth, NFC, GPS, GLONASS, BeiDou, Galileo                                    |
| Other Features           | IR Remote Control, Fingerprint ID, Face Unlock, Custom Key, Splash Proof, Headset-free FM Radio |
| Dimensions               | 16.88 x 7.68 x 0.88 cm  |
| Weight                   | 211 g   |

## WARRANTY AND SUPPORT

Your Ulefone Note 18 Pro comes with a standard manufacturer's warranty. For detailed warranty terms and conditions, please refer to the warranty card included in your package or visit the official Ulefone website. For technical support, troubleshooting assistance, or service inquiries, please contact Ulefone customer service through their official channels.

You can find more information and support resources on the Ulefone Store on Amazon.