Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Ourlife /
- Ourlife 5K30FPS WiFi Action Camera User Manual

Ourlife M40TR

Ourlife 5K30FPS WiFi Action Camera User Manual

Model: M40TR

Introduction

This manual provides detailed instructions for the safe and effective use of your Ourlife 5K30FPS WiFi Action Camera. Please read this manual thoroughly before operating the device to ensure optimal performance and longevity.

The Ourlife M40TR is a versatile action camera designed to capture high-quality video and photos in various environments, including underwater, thanks to its robust waterproof casing. It features 5K 30fps video recording, a dual-screen display, a 170-degree wide-angle lens, and Wi-Fi connectivity.

WHAT'S IN THE BOX

Upon unboxing, please verify that all components are present:

- Ourlife M40TR Action Camera
- · Waterproof Case
- Mounting Accessories
- USB Charging Cable
- User Manual (this document)
- Remote Control (if included with specific package)



Image: The Ourlife M40TR Action Camera shown with its waterproof housing and a small remote control. This image illustrates the primary components included with the camera.

PRODUCT OVERVIEW

Familiarize yourself with the camera's main components and interfaces.

- Front Screen: 1.3-inch display for quick status checks.
- Rear Screen: 2.0-inch IPS touch screen for menu navigation and playback.
- Lens: 170-degree wide-angle lens.
- Power/Mode Button: Used to power on/off and switch between modes.
- Shutter/OK Button: Used to start/stop recording or take photos, and confirm selections.
- Microphone Port: For connecting an external microphone.
- USB Port: For charging and data transfer.
- MicroSD Card Slot: For memory card insertion.
- Battery Compartment: For battery insertion.



Image: A close-up view of the Ourlife Action Camera highlighting its 2-inch responsive touch screen. This screen is used for controlling camera functions and reviewing footage.

SETUP

1. Charging the Battery

Before first use, fully charge the camera battery. Connect the camera to a USB power source (e.g., computer, wall adapter) using the provided USB cable. The charging indicator light will illuminate during charging and turn off when complete.

2. Inserting a MicroSD Card

A MicroSD card (not included) is required for recording. Use a Class 10 or higher MicroSD card, up to 128GB. Insert the card into the MicroSD card slot with the contacts facing the correct direction until it clicks into place.

Note: For optimal performance, format the MicroSD card within the camera before first use and periodically thereafter.

3. Attaching the Waterproof Case

The camera comes with a waterproof case for underwater use and protection against impacts. Ensure the

camera is securely placed inside the case and the latch is firmly closed before submerging or exposing to harsh conditions.



Image: The Ourlife Action Camera enclosed in its waterproof case, depicted underwater with depth markers indicating its 30-meter waterproof capability. This highlights the camera's suitability for aquatic activities.

4. Powering On/Off

To power on, press and hold the Power/Mode button for a few seconds. To power off, press and hold the Power/Mode button again until the screen turns off.

OPERATING THE CAMERA

1. Basic Controls and Navigation

Use the Power/Mode button to cycle through different shooting modes (Video, Photo, Playback, Settings). Use the touch screen for menu navigation and selecting options. The Shutter/OK button initiates recording or takes a photo in the respective modes.

2. Video Recording

In Video mode, press the Shutter/OK button to start recording. Press it again to stop. The camera supports resolutions up to 5K at 30 frames per second (fps), as well as 4K, 2.7K, 1080P, and 720P options. Adjust

resolution in the settings menu.

3. Photo Capture

In Photo mode, press the Shutter/OK button to take a single photo. The camera offers various photo modes including single shot, automatic shooting, burst mode, and timed photography.

4. Wi-Fi and App Connectivity

Enable Wi-Fi in the camera's settings. Download the official Ourlife app on your smartphone or tablet. Connect your device to the camera's Wi-Fi network. The app allows for remote control, live preview, playback, and sharing of your footage.

5. External Microphone Support

For enhanced audio quality, connect a compatible external microphone to the camera's microphone port. Ensure the microphone is securely connected before recording.

6. Enhanced Image Stabilization (EIS)

The camera features Electronic Image Stabilization (EIS) to reduce blur and shake in your videos, especially during action-packed activities. This feature can be toggled On or Off in the camera settings.

Enhanced Image Stablization

EIS ON (

EIS OFF





Image: A side-by-side comparison demonstrating the effect of Enhanced Image Stabilization (EIS). The left image shows a clear, stable shot with EIS enabled, while the right image shows a blurred shot with EIS disabled, illustrating the benefit

7. Wide-Angle Lens

The 170-degree wide-angle lens captures a broad field of view, ideal for landscapes, group shots, and immersive action footage. Be aware that wide-angle lenses may exhibit some distortion at the edges of the frame.



Image: An illustration showcasing the 170-degree ultra wide-angle capability of the Ourlife Action Camera, demonstrating how it captures a significantly broader scene compared to narrower angles, ideal for expansive views.

MAINTENANCE

- **Cleaning:** Use a soft, lint-free cloth to clean the camera lens and screens. For the waterproof case, rinse with fresh water after saltwater use and allow to air dry.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures. Remove the battery if storing for extended periods.
- **Battery Care:** Avoid fully discharging the battery frequently. Charge the battery regularly, even if not in use, to maintain its lifespan.

Troubleshooting

Problem	Possible Solution
Camera does not power on.	Ensure the battery is charged. Reinsert the battery.
Cannot record video/take photos.	Check if a MicroSD card is inserted and formatted. Ensure sufficient storage space.
Poor video/photo quality.	Clean the lens. Check resolution settings. Ensure adequate lighting.
Wi-Fi connection issues.	Ensure Wi-Fi is enabled on the camera and your device. Restart both devices. Check app permissions.
Camera freezes or becomes unresponsive.	Remove and reinsert the battery to perform a hard reset.

SPECIFICATIONS

Feature	Detail
Model Number	M40TR
Video Resolution	Up to 5K 30fps (also 4K, 2.7K, 1080P, 720P)
Waterproof Depth	Up to 30 meters (with waterproof case)
Main Screen Size	2.0-inch IPS
Secondary Screen Size	1.3-inch
Lens Angle	170-degree Wide-Angle
Connectivity	Wi-Fi, USB
Storage	MicroSD Card (Class 10 or higher, up to 128GB)
External Microphone Support	Yes
Image Stabilization	Electronic Image Stabilization (EIS)
Color	Black

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official Ourlife website or contact their customer service directly. Keep your purchase receipt as proof of purchase for warranty claims.

Official Ourlife Store: Visit the Ourlife Store on Amazon

© 2024 Ourlife. All rights reserved.

